
KitchenAid® Food Waste Disposer

PRODUCT MODEL NUMBER

KCDB250G KCDS100T KCDI075V KBDS100T KCDS075T


Electrical: This disposer is intended to be direct-wired to the electrical supply. If a junction box is used, connect the junction box to the switch on a separate 15- or 20-amp 115 Volt circuit with the appropriate cable. (Use 14 gauge wire with 15-amp circuit, and 12 gauge wire with 20-amp circuit.) This disposer requires a switch marked "Off" position (wired to disconnect all ungrounded supply conductors) installed within sight of the disposer sink opening. (1 hp minimum rating.)

OVERALL DIMENSIONS

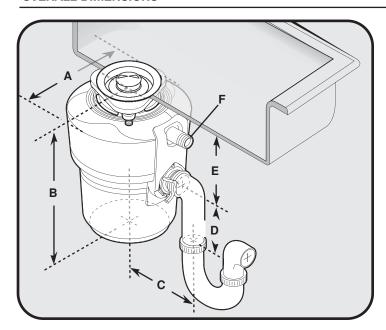

	Tog of	Sept 20	of Lo	dis Lo	TO T	, oo /
A	6 ⁵ / ₁₆ " (16.0 cm)	8 ¹ / ₂ " (21.6 cm)	9" (22.9 cm)	9" (22.9 cm)	9" (22.9 cm)	
В	11 ³ / ₈ " (28.9 cm)	12 ³ / ₄ " (30.5 cm)	12 ³ / ₄ " (30.5 cm)	12 ³ / ₄ " (30.5 cm)	15 ¹ / ₂ " (39.4 cm)	
С	5 ³ / ₄ " (14.6 cm)					
D	4" (10.2 cm)					
Ε	6" (15.2 cm)	6 ¹¹ / ₁₆ " (17 cm)	6 ¹¹ / ₁₆ " (17 cm)	6 ¹¹ / ₁₆ " (17 cm)	9 ⁷ / ₁₆ " (24 cm)	
F	Dishwasher Drain Connection					

Installations on thicker sinks (such as solid surface, porcelain, or cast iron) may require the use of alternate parts. See instructions below for installation with various thicknessess:

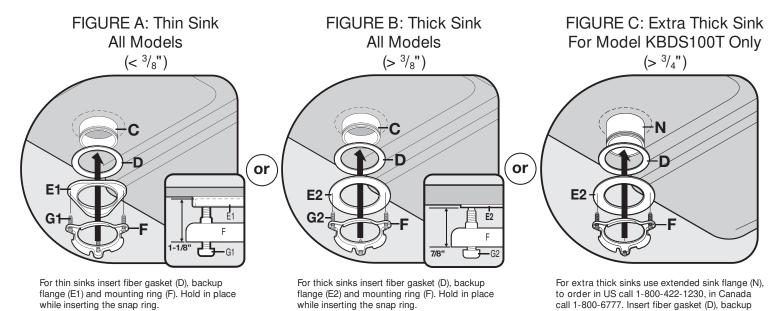

while inserting the snap ring. = Standard Sink Flange

G1 = $1 \frac{1}{2}$ " screws **G2** = $1 \frac{1}{8}$ " screws

call 1-800-6777. Insert fiber gasket (D), backup

flange (E2) and mounting ring (F). Hold in place

while inserting the snap ring.