



Whirlpool® 31-inch Wide SideKicks® All-Refrigerator with LED Lighting - 18 cu. ft.

WSR57R18DM

Available Finishes/Colours



WSR57R18DM
Monochromatic Stainless
Steel

WSR57R18DH
White Ice

You'll have plenty of room to store all your everyday favorites inside this 18 cu. ft. SideKicks® refrigerator. Enjoy a longer-lasting, energy-efficient light on your food with LED lighting. The temperature alarm will notify you if the SideKicks® refrigerator gets too warm. Plus, you can choose the ideal temperature for whatever foods you're storing with electronic temperature controls.

Top Features

LED Interior Lighting

Electronic Temperature Controls

Temperature Alarm

Manuals & Literature:



[Dimension Guide](#)



[Energy Guide](#)



[Owners Manual](#)



[Warranty Information](#)

Dimensions		Refrigerator Compartment	
Depth	31.25	Supplementary Containers	
Height	66.75	Spill Proof Glass Shelves	
Width	30.25	Non Climate Control Drawers	
Specifications		Door Bins	
Product To Product Pairs	WGG745S0FS, WUW35X15DS, WUW35X24DS	Dispenser	
Fingerprint Resistant	No	Dispenser Type	N/A
Extended Service Plan Parent	EW07IW1Y, EW07IW2Y, EW07IW4Y	Controls	
Optional Accessories	SKT60M, W10346771A, W11462816	Control Lockout	N/A
Country Of Origin	USA	Electrical	
Refrigerator Compartment		Volts	115.0
Temperature Controlled Drawers		Amps	15.0
		Compatibility	
		Works With	
		Connectivity	

PRODUCT MODEL NUMBERS

 
WRF57R18D WSR57R18D
WRR56X18F

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

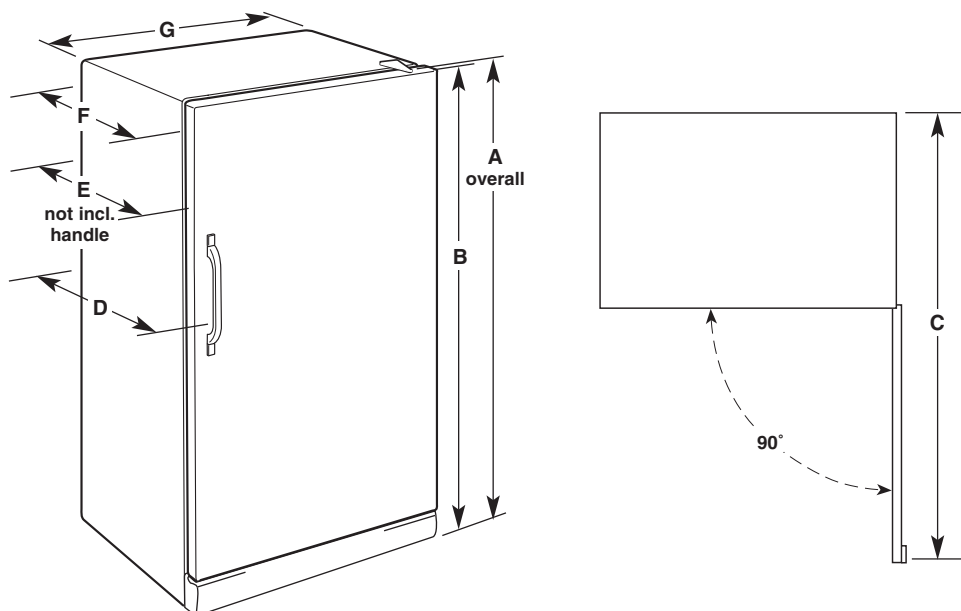

Model Number	Model Size	Door Swing	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ⁷ / ₈ " (141.9 cm)	30" (76.2 cm)	29 ¹ / ₈ " (74 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ³ / ₄ " (141.6 cm)	31 ¹ / ₄ " (79.4 cm)	28 ⁷ / ₈ " (73.3 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)

 LOCATION REQUIREMENTS

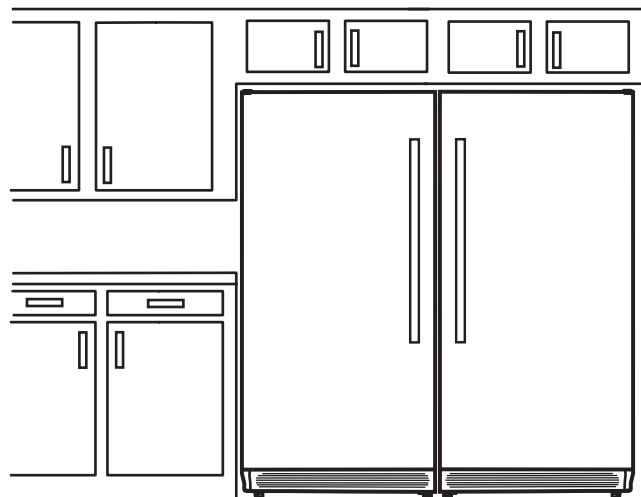

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a 1/4" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasoline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.