



Whirlpool® Réfrigérateur sans congélateur SideKicks® avec éclairage à DEL - 31 po - 18 pi cu

WSR57R18DM

Finis/couleurs disponibles



WSR57R18DM
Acier inoxydable
Monochrome

WSR57R18DH
White Ice

Dimensions		Électricité	
Profondeur	31.25	Ampères	15.0
Hauteur	66.75	Volts	115.0
Largeur	30.25		
Fiche technique		Commandes	
Fabriqué en	USA	Verrouillage des commandes	N/A
UPC	883049341583		
Accessoires en option	SKT60M, W10346771A, W11462816	Distributeur	
Programmes de service d'entretien autorisés	EW07IW1Y, EW07IW2Y, EW07IW4Y	Type de distributeur	S/O
Modèles associés	WGG745S0FS, WUW35X15DS, WUW35X24DS		
Résistant aux empreintes digitales	Non		

Vous aurez amplement d'espace pour ranger tous vos aliments préférés dans ce réfrigérateur SideKicks® de 18 pi³. L'éclairage à DEL plus durable et éconergétique diffuse une belle lumière sur les aliments. L'avertisseur de température vous avertit lorsque la température du réfrigérateur SideKicks® est trop élevée. De plus, les commandes de température électroniques vous permettent de choisir la température idéale pour tous les aliments que vous y rangez.

Caractéristiques clés

Éclairage intérieur à DEL

Commandes électroniques de température

Avertisseur de température

Guides et documentation:



[Guide des dimensions](#)



[Guide énergétique](#)



[Guides d'installation](#)



[Renseignements sur la garantie](#)

PRODUCT MODEL NUMBERS

 
WRF57R18D WSR57R18D
WRR56X18F

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

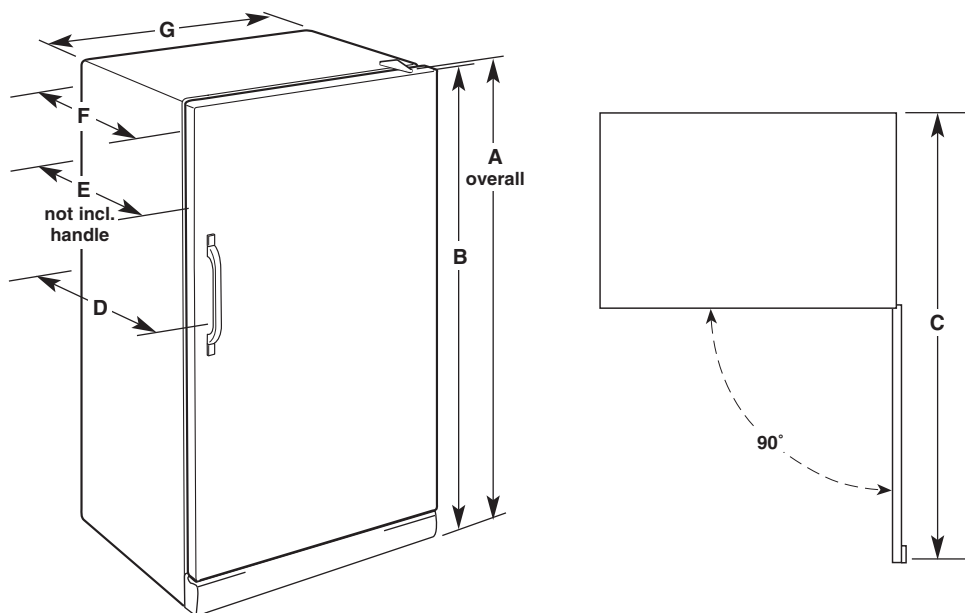

Model Number	Model Size	Door Swing	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ⁷ / ₈ " (141.9 cm)	30" (76.2 cm)	29 ¹ / ₈ " (74 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66 ³ / ₄ " (169.5 cm)	66 ¹ / ₄ " (168.3 cm)	55 ³ / ₄ " (141.6 cm)	31 ¹ / ₄ " (79.4 cm)	28 ⁷ / ₈ " (73.3 cm)	24 ⁵ / ₈ " (62.5 cm)	30 ¹ / ₄ " (76.8 cm)

 LOCATION REQUIREMENTS

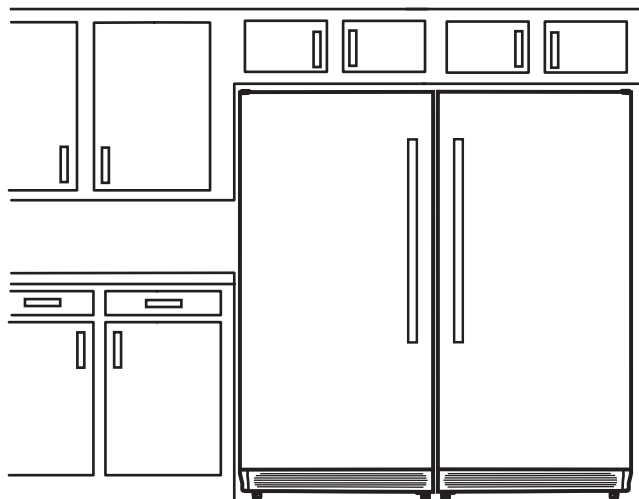

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a 1/4" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasoline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.