



Réfrigérateur sans congélateur Whirlpool® de 31 po avec éclairage à DEL - 18 pi³

WRR56X18FW

Finis/couleurs disponibles

☐ WRR56X18FW
Blanc

Dimensions		Électricité	
Profondeur	30.0	Volts	115.0
Hauteur	66.75	Commandes	
Largeur	30.25		
Fiche technique		Verrouillage des commandes	N/A
Fabriqué en	USA	Distributeur	
UPC	883049410128		
Accessoires en option	W10346771A, W11462816	Type de distributeur	S/O
Programmes de service d'entretien autorisés	EW06IW1Y, EW06IW2Y, EW06IW4Y		
Modèles associés			
Résistant aux empreintes digitales	Non		

Vous aurez amplement d'espace pour ranger tous vos aliments préférés dans ce réfrigérateur sans congélateur homologué ENERGY STAR® de 18 pi³. Choisissez la température idéale pour les aliments que vous y rangez grâce aux commandes de température électroniques et aux bacs à légumes à humidité contrôlée.

Caractéristiques clés

Éclairage intérieur à DEL

Commandes électroniques de température

Guides et documentation:

[Guide des dimensions](#)

[Guide énergétique](#)

[Guides d'installation](#)

[Renseignements sur la garantie](#)

Électricité	
Ampères	15.0

PRODUCT MODEL NUMBERS

 
WRF57R18D WSR57R18D
WRR56X18F

Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

PRODUCT DIMENSIONS

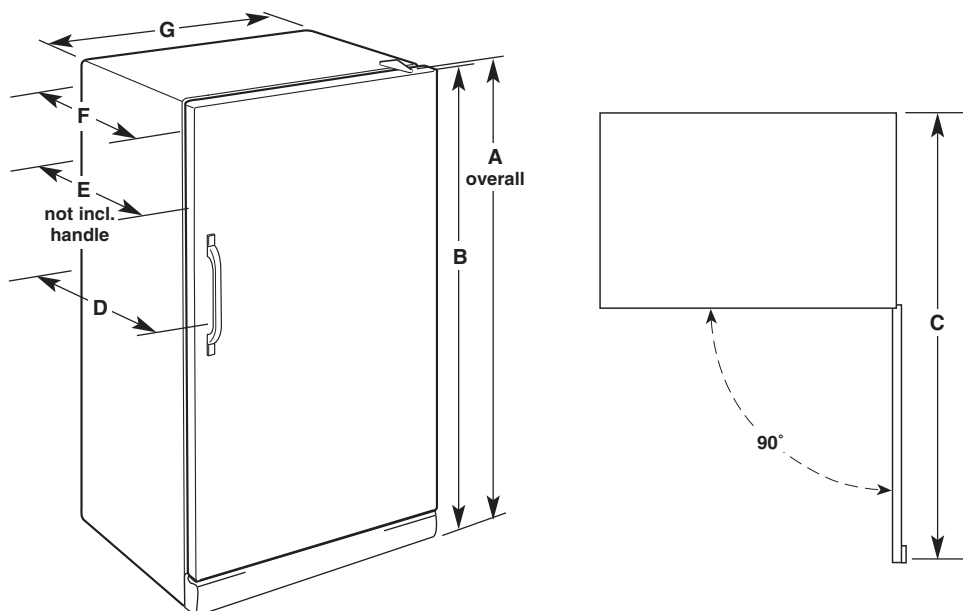

Model Number	Model Size	Door Swing	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - With Handles "D"	Depth - Without Handles "E"	Depth - Cabinet Only "F"	Width - Cabinet "G"
WRF57R18D WRR56X18F	17.7 cu. ft.	Right	66¾" (169.5 cm)	66¼" (168.3 cm)	55⅞" (141.9 cm)	30" (76.2 cm)	29⅞" (74 cm)	24⅝" (62.5 cm)	30¼" (76.8 cm)
WSR57R18D	17.7 cu. ft.	Right	66¾" (169.5 cm)	66¼" (168.3 cm)	55¾" (141.6 cm)	31¼" (79.4 cm)	28⅞" (73.3 cm)	24⅝" (62.5 cm)	30¼" (76.8 cm)

 LOCATION REQUIREMENTS

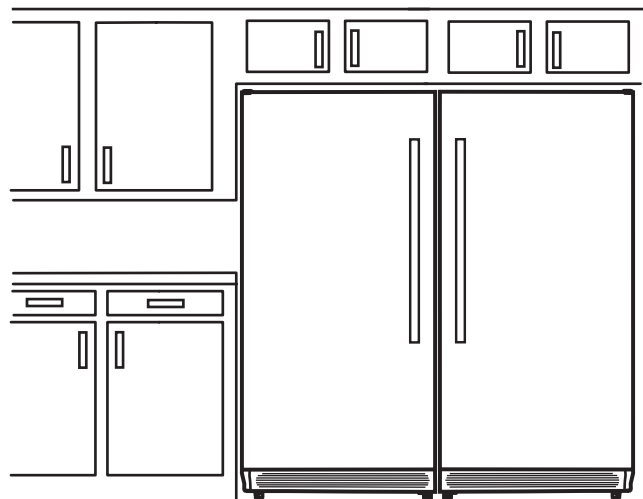

Ventilation and Clearance

- This freezer may be installed side by side with another refrigerator or freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall, and a ¼" (6.4 mm) clearance between the appliances.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasoline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature

Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.