 




7.5 cu.ft. Top Mount Refrigerator/Freezer

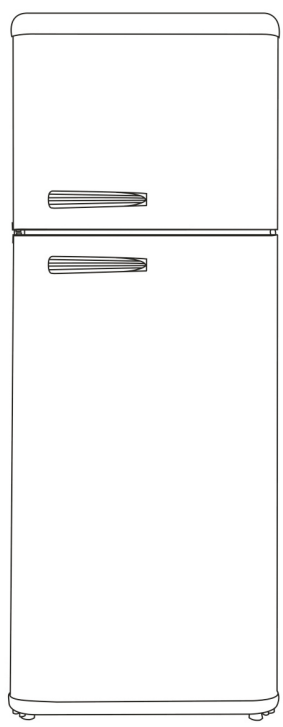 


Owner's Use & Care Manual ERR82BI



Care and Maintenance

- Cleaning Your Refrigerator
Upon installation of your new appliance, it is recommended that it be cleaned thoroughly.
Turn off the refrigerator first and then unplug the unit from the wall outlet.
Remove food content.
Wash the inside with a damp warm cloth soaked in lukewarm water and baking soda solution.
Short vacation: Leave the refrigerator operating during vacation of less than three weeks.
Long vacation: If the appliance will not be used for several months, remove all food and unplug the power cord.
Maintenance Your Refrigerator
Turn off the refrigerator first and then unplug the unit from the wall outlet.
Remove all the food.
Securely tape down all loose items inside your refrigerator.
Tape the doors shut.
Items inside the refrigerator stay in the upright position during transportation.
Items Excluded from Warranty
The refrigerator should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
Let hot foods cool to room temperature before placing in the refrigerator.
Organize and label food to reduce door openings and extended reaches.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



 
Congratulations

Congratulations on the purchase of your new Epic Appliance!
To activate your Warranty, please register your appliance at www.stirlingmarathon.com or by completing and mailing the enclosed Warranty Registration Card. We are confident you will have years of hassle free enjoyment and what you please retain the Use & Care Guide for future reference and your safety.

Important Safety Instructions


- To reduce the risk of fire, electrical shock, or injury follow these basic precautions when using your appliance.
WARNING: Read and understand the instructions and warnings before using the appliance.
WARNING: Do not use mechanical devices or other means to restrict the airflow of fresh air.
WARNING: Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
WARNING: Do not alter the specifications or modify this product in any way.
WARNING: Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
WARNING: Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.

Parts Description

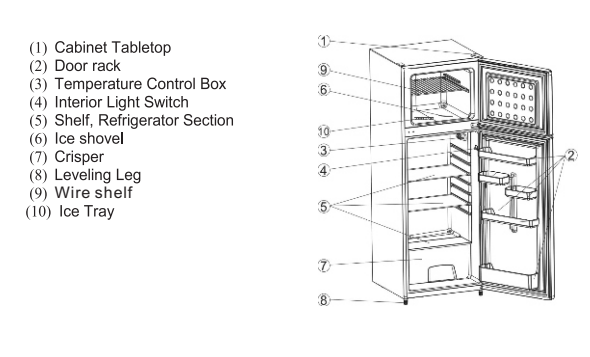

Care and Maintenance

 - Cleaning Your Refrigerator
Upon installation of your new appliance, it is recommended that it be cleaned thoroughly.
Turn off the refrigerator first and then unplug the unit from the wall outlet.
Remove food content.
Wash the inside with a damp warm cloth soaked in lukewarm water and baking soda solution.
Short vacation: Leave the refrigerator operating during vacation of less than three weeks.
Long vacation: If the appliance will not be used for several months, remove all food and unplug the power cord.
Maintenance Your Refrigerator
Turn off the refrigerator first and then unplug the unit from the wall outlet.
Remove all the food.
Securely tape down all loose items inside your refrigerator.
Tape the doors shut.
Items inside the refrigerator stay in the upright position during transportation.
Items Excluded from Warranty
The refrigerator should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
Let hot foods cool to room temperature before placing in the refrigerator.
Organize and label food to reduce door openings and extended reaches.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



Important Warning

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to restrict the airflow of fresh air.
Do not store or change of the refrigerator circuit.
Do not use any explosive substances such as aerosol cans with a flammable propellant in this appliance.
Do not alter the specifications or modify this product in any way.
All electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.
The refrigerator contained within the compressor of the appliance is a substance (R600a) which is environmentally friendly but flammable.
Make sure that the power plug is not crushed or damaged at the back of the appliance.
Power cord must not be lengthened.
If the power plug socket is loose, do not insert the power plug.
If the power plug socket is loose, do not insert the power plug.
Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
Avoid prolonged exposure of the appliance to direct sunlight.



Installation Instructions

- Before Using Your Refrigerator
Remove the exterior and interior packing.
Before connecting the refrigerator to the power source, let it stand upright for approximately 4 hours.
Clean the interior surface with lukewarm water using a soft cloth.
Installation Instructions
The refrigerator is designed to be installed in a built-in cabinet or island.
Place your refrigerator on a floor that is strong enough to support the refrigerator when it is fully loaded.
Allow 1/2 inch of space between the back and sides of the refrigerator, which allows the proper air ventilation.
Level the refrigerator away from front leveling and adjust all four casters.
Level the refrigerator away from front leveling and adjust all four casters.
Level the refrigerator away from front leveling and adjust all four casters.

- Electrical Connection
The refrigerator is designed to be installed in a built-in cabinet or island.
Place your refrigerator on a floor that is strong enough to support the refrigerator when it is fully loaded.
Allow 1/2 inch of space between the back and sides of the refrigerator, which allows the proper air ventilation.
Level the refrigerator away from front leveling and adjust all four casters.
Level the refrigerator away from front leveling and adjust all four casters.
Level the refrigerator away from front leveling and adjust all four casters.

Important Safety Instructions

- Read all instructions before using the refrigerator.
DANGER or WARNING: Risk of child entrapment.
To avoid the possibility of child entrapment, please read the following precautions before throwing out the refrigerator.
Remove all doors from the refrigerator.
Leave the shelves in place so that children may not easily climb inside.
Never allow children to operate, play with, or crawl inside the refrigerator.
Refrigerators of all refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal of product.
Never clean refrigerator parts with flammable liquids.
Do not store or use any flammable vapors and liquids in the vicinity of this or any other refrigerator.



Troubleshooting Guide

Table with 2 columns: PROBLEM and POSSIBLE CAUSE. Includes issues like 'Refrigerator does not operate', 'Compressor runs on and off frequently', 'Temperature inside the refrigerator is too warm', etc.

For any Questions or concerns, please contact us at customerservice@stirlingmarathon.com or visit us at www.stirlingmarathon.com



Operating Your Refrigerator

- Temperature Settings
Your refrigerator has one control for regulating the temperature. The temperature control is located on the top center of the refrigerator compartment.
The first time you turn the unit on, adjust the temperature control knob to "5" and run for at least 1 hour before putting foods inside.
The range of the refrigerator temperature control is from position "1" (the warmest) to "7" (the coldest).
Turning the temperature control knob to "1" should be appropriate for home or office refrigerator use.
Turning the temperature control knob to "7" position stops the cooling cycle but does not shut the power to the unit.

- The Frost Free Compartment
The frost free compartment is designed for the long-term storage of frozen food.
The storage life of frozen foods varies and the recommended storage time should not be exceeded.
Do not place foods on the air outlet, and leave spaces for airflow.
If you choose to change the thermostat setting, adjust thermostat control by one increment at a time.
After several hours for temperature to stabilize between adjustments.

- How To Defrost
Defrost the freezer compartment when the ice / frost is approximately 1/2" thick or every 3 months, whichever comes first.
Remove all contents from the freezer compartment.
Leave the freezer door open to allow accumulated ice / frost to melt.
Remove large pieces of ice as needed.
Do not use hot water or other electric heating devices to melt the accumulated ice.
After defrosting, remove accumulated ice / water and wipe the freezer compartment dry with a soft cloth.
Place the ice in a non-vulcanized plastic in the freezer compartment, place allow the evaporator located behind the freezer wall to completely defrost for approximately 1 hour before restoring the unit.
How To Change the Interior Light
NOTE: All parts enclosed must be saved to do the installation of the light bulb.
Remove the lamp cover by unscrewing.
Insert the new bulb into the socket.
Replace the new bulb of the same voltage and wattage.
Re-install the lamp cover by screwing.



1 Year Limited Warranty

When operated in accordance with the instructions in the Use & Care Guide, this appliance is warranted against defects in materials and workmanship for a period of one year from the date of purchase. This warranty is limited to the original purchaser of this appliance. It is not transferable. This warranty is void if the appliance is used for commercial purposes or if it is damaged by fire, flood, lightning, or other causes not mentioned in the instructions.


Table with 2 columns: Appliance Type and Warranty Type. Includes Refrigerator & Freezer, Freezer Only, and Electric & Gas Range.

How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.

Items Excluded from Warranty

 - Damage due to misuse, abuse or improper installation.
Damage due to fire, flood, lightning, or other causes not mentioned in the instructions.
Commercial use of the product.
Use of the product for purposes not intended by the manufacturer.
Use of the product in areas where the ambient temperature is outside the range specified in the instructions.
Use of the product in areas where the ambient humidity is outside the range specified in the instructions.
Use of the product in areas where the ambient pressure is outside the range specified in the instructions.




How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.

Items Excluded from Warranty

- Damage due to misuse, abuse or improper installation.
Damage due to fire, flood, lightning, or other causes not mentioned in the instructions.
Commercial use of the product.
Use of the product for purposes not intended by the manufacturer.
Use of the product in areas where the ambient temperature is outside the range specified in the instructions.
Use of the product in areas where the ambient humidity is outside the range specified in the instructions.
Use of the product in areas where the ambient pressure is outside the range specified in the instructions.

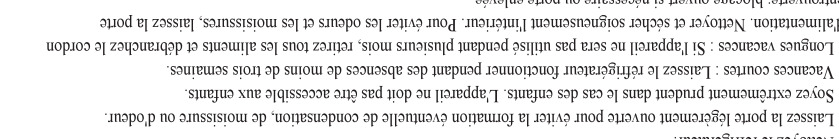

How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.

Items Excluded from Warranty

- Damage due to misuse, abuse or improper installation.
Damage due to fire, flood, lightning, or other causes not mentioned in the instructions.
Commercial use of the product.
Use of the product for purposes not intended by the manufacturer.
Use of the product in areas where the ambient temperature is outside the range specified in the instructions.
Use of the product in areas where the ambient humidity is outside the range specified in the instructions.
Use of the product in areas where the ambient pressure is outside the range specified in the instructions.

 


How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.

Items Excluded from Warranty

- Damage due to misuse, abuse or improper installation.
Damage due to fire, flood, lightning, or other causes not mentioned in the instructions.
Commercial use of the product.
Use of the product for purposes not intended by the manufacturer.
Use of the product in areas where the ambient temperature is outside the range specified in the instructions.
Use of the product in areas where the ambient humidity is outside the range specified in the instructions.
Use of the product in areas where the ambient pressure is outside the range specified in the instructions.

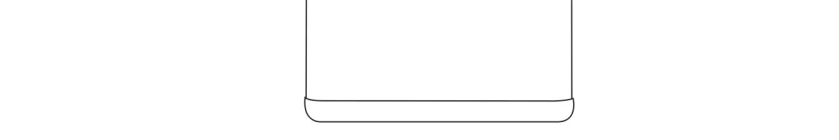

How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.

Items Excluded from Warranty

- Damage due to misuse, abuse or improper installation.
Damage due to fire, flood, lightning, or other causes not mentioned in the instructions.
Commercial use of the product.
Use of the product for purposes not intended by the manufacturer.
Use of the product in areas where the ambient temperature is outside the range specified in the instructions.
Use of the product in areas where the ambient humidity is outside the range specified in the instructions.
Use of the product in areas where the ambient pressure is outside the range specified in the instructions.



How to Obtain Service

Service: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service center a copy of the original bill of sale and a copy of the original purchase receipt.
If the product is not covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.
If the product is covered by the warranty, the original purchaser must pay for the cost of shipping and handling charges.