

**Electrolux**

## Factory Parts Catalog

<b>Product No.</b>	<b>ECCE242CAS</b>
<b>PNC</b>	949300009
<b>Series</b>	24" elec
<b>Color</b>	stainless
<b>Market</b>	Canada
<b>Wiring Diagram</b>	305544105
<b>Owner's Guide</b>	A01704101

 **Electrolux**

**Frigidaire**

 
5855 TERRY FOX WAY  
MISSISSAUGA, ONTARIO, CANADA L5V 3E4

Publication No.  
**5995735403**  
23/06/27  
(EN/SERVICE/ECL)  
377

**24" ELECTRIC  
COOK-TOP**

Model No.  
**ECCE242CA**

**CONTROL PANEL**

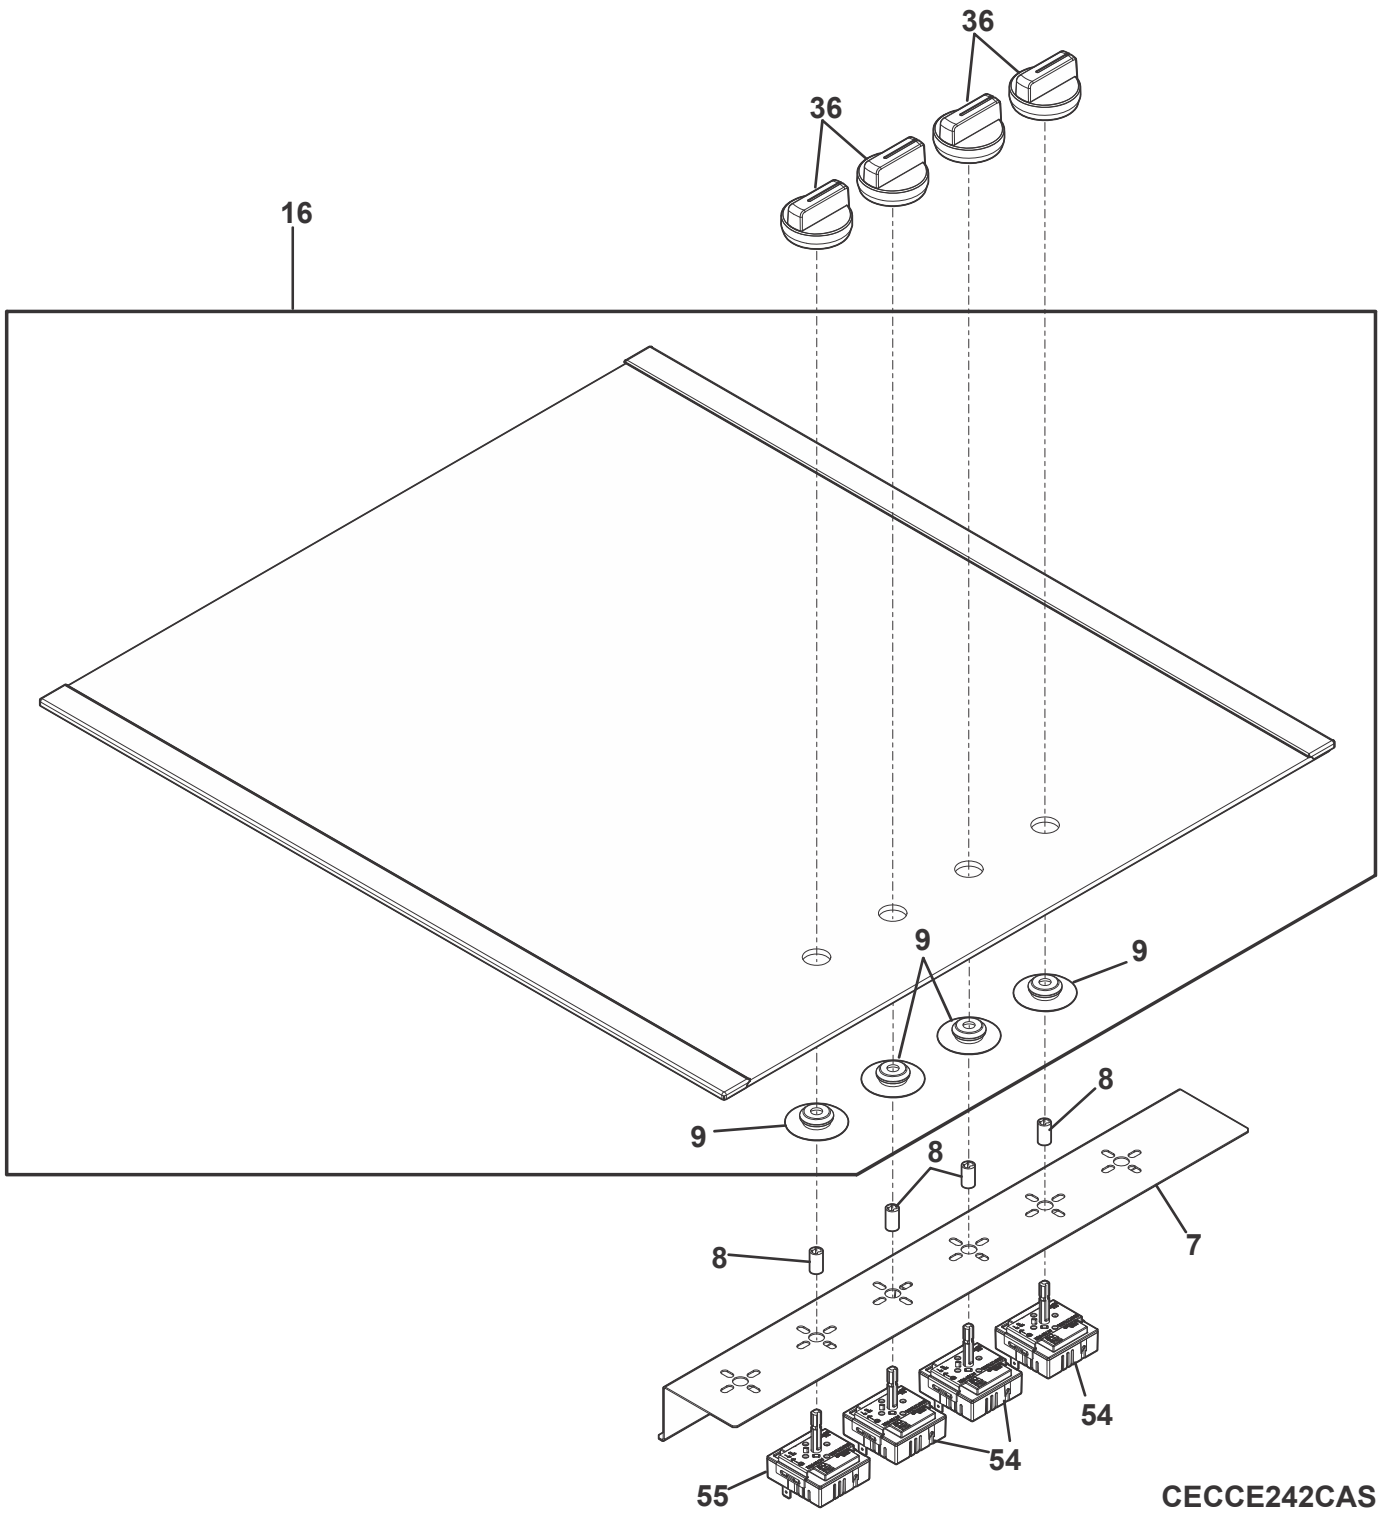


**CECCE242CAS**

**CONTROL PANEL**

---

<b>POS. NO</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
7	387372600	Bracket, support, switch mtg
8	5304515131	Spacer, silicone seal, switch shaft
9	5304515130	Bushing, knob, sealing
16	5304535473	Smoothtop, assembly, black
36	5304535474	Knob, control, stainless
54 #	5304526190	Switch, surface heating, single
55 #	5304527965	Switch, surface heating, dual
*	319224001	Screw, switch mtg., M4 x 7
*	330447900	Screw, B4, 2 x 9, 5

 MAIN TOP/SURFACE UNITS

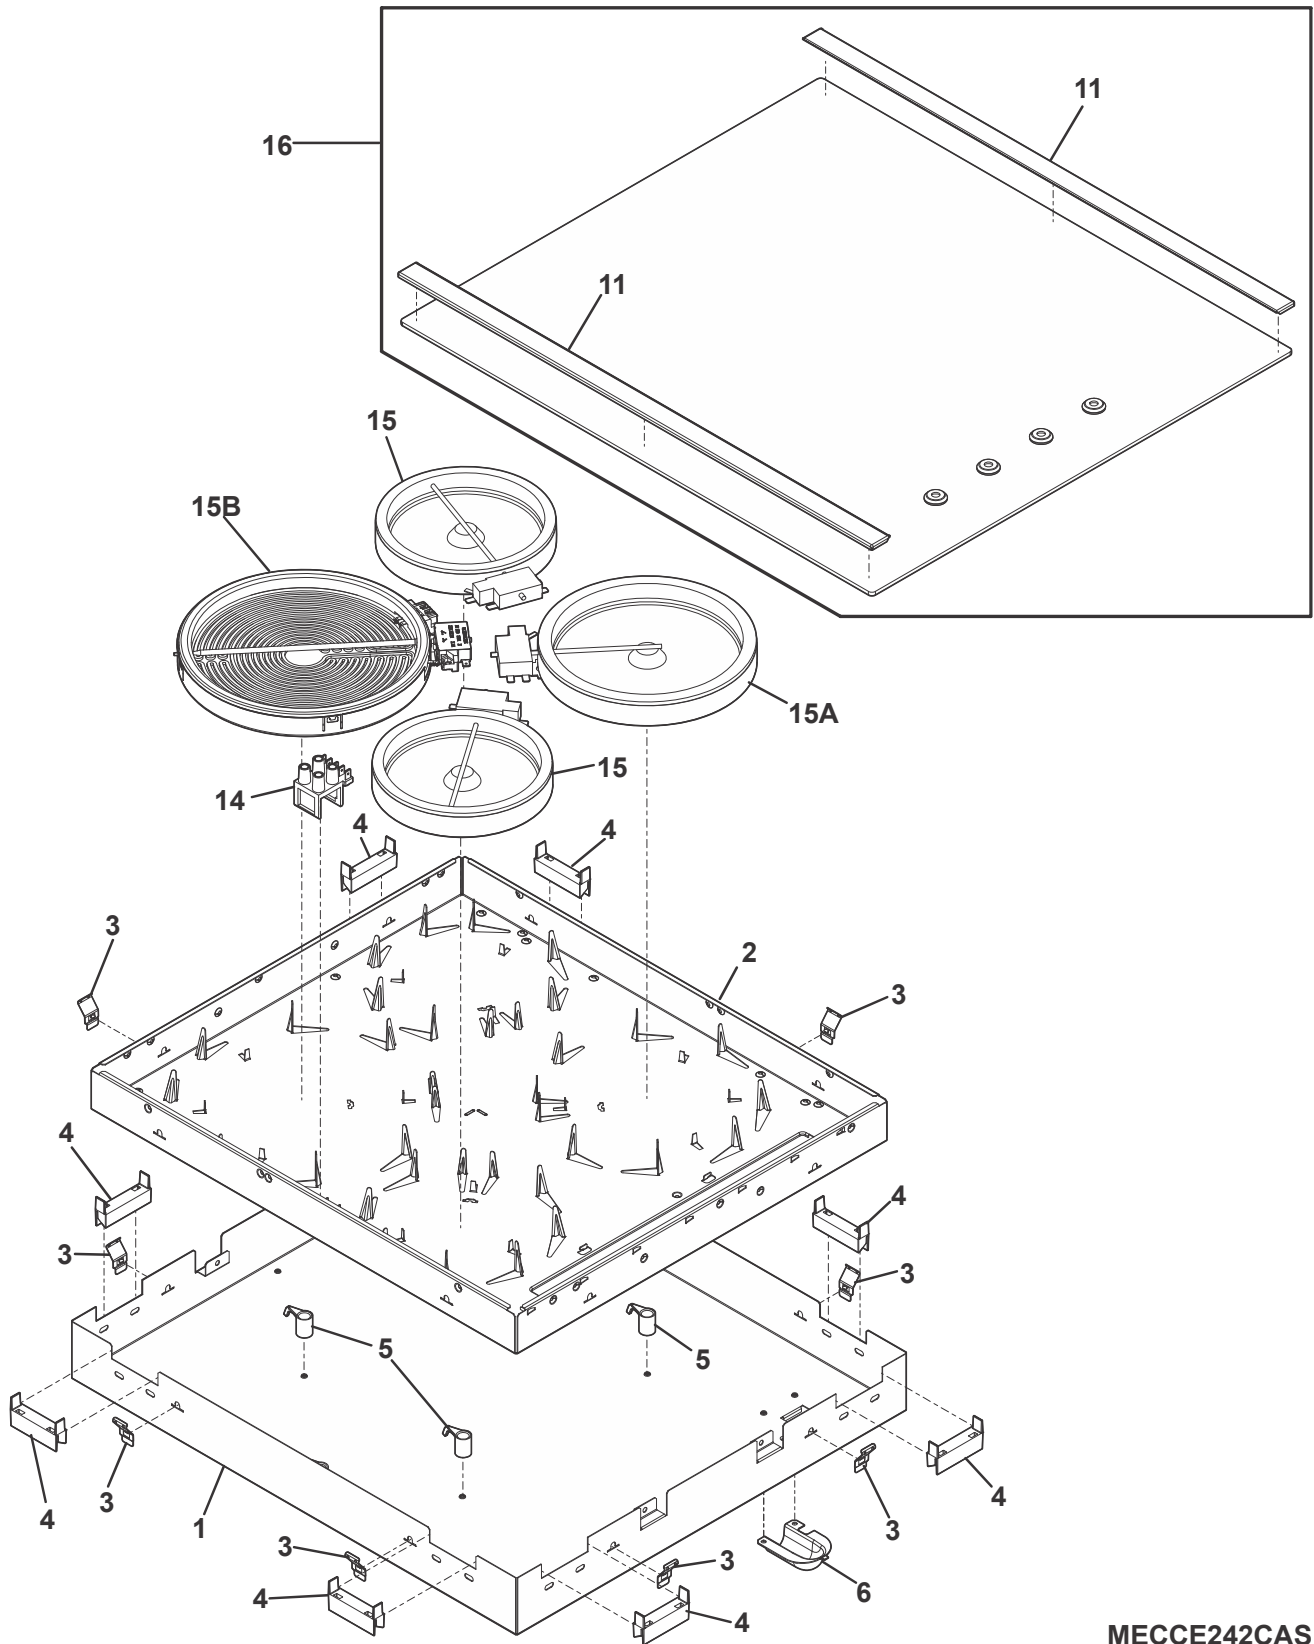

MECCE242CAS

---

**MAIN TOP/SURFACE UNITS**


---

POS. NO	PART NO.	DESCRIPTION
1	5304535471	Box, outer
2	305554400	Box, inner
3	387174602	Bracket, spring, cooktop mtg.
4	387627600	Spacer, burner box, plastic
5	5304534149	Bracket, support, plastic
6	5304534148	Cover, elbow, box & cable
6*	5304462994	Screw, 8-32 x 5/16
11	305370704	Trim, smoothtop, stainless
12	387683300	Bracket, surface element
12*	305376101	Screw, bracket, surface element
13	387372900	Spring, surface element
14 #	387812004	Light Assembly, indicator, hot surface
15 #	374063522	Element, surface, 6", 1200W
15A#	374063621	Element, surface, 7", 1800W
15B#	374064021	Element, surface, 5"/8", 750W/2200W
16	5304535473	Smoothtop, assembly, black
26	5304522050	Bracket, retainer, main top
26*	305338602	Screw
* #	5304535472	Harness, wiring, box & cable
* #	5304522496	Harness, wiring, main
*	202855101	Holder, cable
*	3131048	Screw, 8 x 5/8
*	305309608	Screw, M4
*	305452800	Screw, ground
*	330447900	Screw, B4, 2 x 9, 5

WIRING DIAGRAM

