

R



Electric Citrus Juicer

USER CARE AND INSTRUCTION MANUAL

Thank you for purchasing the **RICARDO** Electric Citrus Juicer. Before using this product, please read the user care and instruction manual carefully.

IMPORTANT SAFEGUARDS

.....

When using electrical appliances, basic safety precautions should always be followed to prevent fire, electric shock, serious personal injury and/or property damage, including the following.

READ ALL INSTRUCTIONS CAREFULLY BEFORE FIRST USE

- ::: This appliance is not a toy and should not be used by children. Keep appliance and its cord out of the reach of children and pets. Close adult supervision is necessary when any appliance is used near children.
- ::: Always place the appliance on a flat, stable and dry surface. Do not move the electric citrus juicer while it is in use.
- ::: Do not place the appliance on or near a hot gas or electric burner or in a heated oven or microwave oven.
- ::: This appliance is intended for household use only. Do not use outdoors.
- ::: Avoid contact with moving parts.
- ::: Do not use the appliance for anything other than its intended use. Do not use attachments or accessories that are not recommended or sold by the manufacturer.
- ::: This appliance is exclusively designed to extract juice from citrus fruits. Never use it for juicing other kind of fruits.
- ::: Always use fresh, washed citrus fruits.
- ::: Be sure pitcher, filter and cones are securely in place before using the appliance.
- ::: Do not operate the appliance for more than 15 seconds continuously. Allow the appliance to rest 15 seconds between each use. After 10 consecutive cycles, the appliance must be cooled down for 30 minutes.
- ::: Unplug the appliance before handling or attempting to clean.
- ::: Do not let the power cord touch hot surfaces or hang (over the edge of a table or counter).
- ::: Do not operate the appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Do not attempt to repair this product yourself. If there is a problem, please call 1-866-226-9222.
- ::: To protect against electrical shock, never immerse the power cord, the plug, the motor body in water or other liquid.
- ::: Do not plug or unplug the product into/from the electrical outlet with wet hands.
- ::: Use the provided plug only.
- ::: Connect the power plug to an easily accessible outlet so that the appliance can be unplugged immediately in the event of an emergency.

- ::: The cord for this appliance should be plugged into a 120 V AC electrical wall outlet.
- ::: Do not leave the appliance unattended. Always unplug appliance from the electrical outlet when not in use. To unplug, grasp the plug and pull it from the electrical outlet. Never pull the cord.
- ::: The device must not be operated via an external timer or remote control.

SAVE THESE INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

NOTES ON THE PLUG

.....

For safety reasons, this appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug can only be inserted one way into the electrical outlet. If the plug does not fit correctly into the outlet, reverse the plug and insert into the outlet. If it still does not fit, contact a qualified electrician for further assistance. Do not attempt to modify the plug in any way.

NOTES ON THE CORD

.....

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

IF AN EXTENSION CORD IS USED:

- ::: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- ::: If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
- ::: The longer cord should be arranged so that it will not drape over a countertop or tabletop where it can be pulled on.

ELECTRIC POWER

.....

If the electrical circuit is overloaded with other appliances, the appliance may not operate properly. It should be plugged into a separate electrical circuit.

TECHNICAL DATA

.....

 
 
 
 
 
 
 
 
Main voltage: 120V / Frequency: 60Hz / Power consumption: 25 watts

PARTS IDENTIFICATION

.....

Product may vary slightly from diagram.

- 1.** Storage lid
- 2.** Large juicing cone
- 3.** Small juicing cone
- 4.** Adjustable filter (2 pieces)
- 5.** Pitcher
- 6.** Base stem
- 7.** Motor base

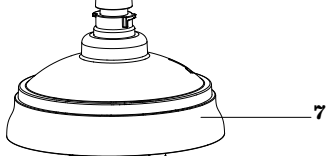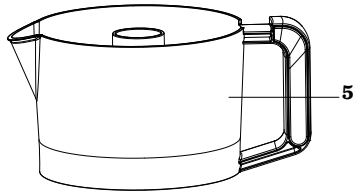

BEFORE FIRST USE


.....

- 1- Read all instructions and important safeguards.
- 2- Remove all packaging materials and ensure that all items have been received in good condition.
- 3- Tear up all plastic bags as they can pose a risk to children.
- 4- Do not plug the appliance into an electrical outlet before it is ready to be used.
- 5- Wash all removable parts (storage lid, juicing cones, adjustable filter and pitcher) in hot soapy water or in the dishwasher and dry thoroughly.
- 6- Wipe the motor base with a soft damp cloth. Dry thoroughly. NEVER IMMERSE the motor base, the power cord, or the power plug in water or any liquid.


NOTE: Do not use abrasive cleaners or scouring pads or any other object that could scratch.

ASSEMBLING


.....

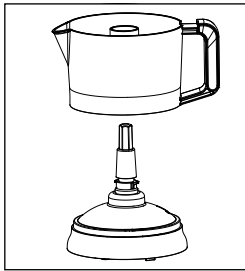


Place the pitcher onto the base.
Align the handle with the arrow on the base.

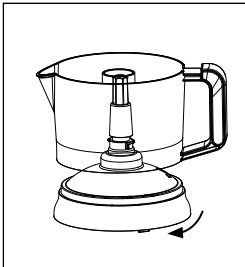


Turn the pitcher clockwise until it
locks into place.

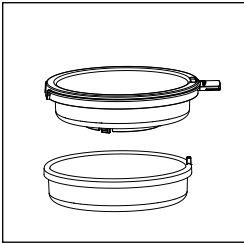

Interlock the upper and lower parts of the adjustable filter (the 2 parts are already assembled in the box).

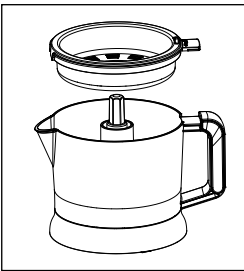


Place the adjustable filter on top of the pitcher.
Align the pulp control tab with the handle.

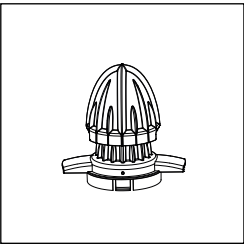

Choose a juicing cone.

The small cone is recommended for small fruits like lemons and limes, while the large cone is ideal for larger fruits such as oranges or grapefruits.

IMPORTANT: if choosing the large juicing cone, place it on top of the small juicing cone. Insert the notches of the large cone into the ends of the small cone.

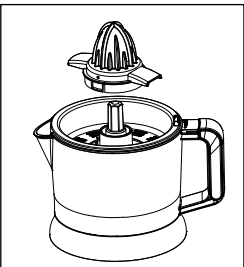


Place the juicing cone on the base stem.

USING THE ELECTRIC CITRUS JUICER


.....

During first use of the appliance, smoke and/or a slight odour may occur from the appliance because of the initial warming process of the materials. This is normal and will quickly disappear. It will not recur after appliance has been used a few more times.

- 1- Place the appliance on a flat, dry and stable surface.
- 2- Assemble the appliance with the desired juicing cone as instructed in the “ASSEMBLING” section.
- 3- Adjust the opening of the filter to control the desired amount of pulp.

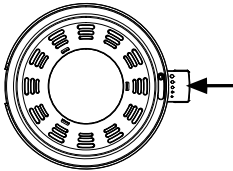

- 4- Plug the power cord into a standard 120 V AC wall outlet.
- 5- Cut the citrus fruit in half.
- 6- Place the cut-side of the citrus fruit on the juicing cone and press it lightly until the motor starts running.

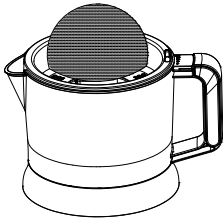

CAUTION: Never use excessive force when pressing the citrus fruit to prevent from blocking and damaging motor.

- 7- The extracted juice will flow into the pitcher through the adjustable filter.
- 8- Release pressure to stop the juicing cone from rotating. Press down on the fruit again, and the juicing cone will resume rotating.

NOTE: To maximize juice extraction, the juicing cone will automatically reverse rotation at various times.

- 9- For more juice, remove used fruit and repeat steps 5 to 8.

NOTE: Do not let the pitcher get filled past the 24 oz (750 ml) mark.

10-When finished, remove the citrus fruit from the juicing cone and unplug the appliance from electrical outlet.

11- To pour the juice, remove the pitcher by turning it counterclockwise and lifting it from the base. Remove the cone and filter before serving.

CLEANING

.....

IMPORTANT: Unplug the appliance before handling or attempting to clean.

::: DO NOT IMMERSE the motor base, the power cord or the power plug in water or any liquid.

::: This appliance should be cleaned immediately after each use to prevent the pulp from drying and sticking to the surface.

::: Wash all the detachable parts (storage lid, juicing cones, adjustable filter and pitcher) in warm, soapy water. Rinse and dry thoroughly. The detachable parts are dishwasher safe.

::: Wipe the motor base with a soft damp cloth. Dry thoroughly.

NOTE: Do not use abrasive cleaners or scouring pads or any other object that can scratch the surface.

STORAGE

.....

Ensure all pieces are clean and dry before storing. Store appliance in a dry, clean place. When not in use, the power cord may be wrapped under the base of the appliance. Never wrap the cord tightly as this could place undue stress on the cord where it connects to the appliance, causing it to fray and break. Keep it loosely coiled.

2-YEAR LIMITED WARRANTY

.....

This warranty covers any defects in materials and workmanship for a period of two (2) years from the date of the original purchase. Please retain your original receipt as a proof of the purchase date. Any complaints must be registered within the warranty period. The product will be repaired, replaced (parts or entire appliance) or refunded at our sole discretion. Shipping charges may apply.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product including failure to clean the product regularly, use for commercial purposes, accident, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than a **RICARDO** authorized service agent. Stains, discoloration and minor scratches on the inside and outside of the appliance constitute normal use, do not affect performance and are not covered by this warranty.

For assistance or general information regarding this product and the warranty, please contact our customer service:

::: by e-mail: kitchenproducts@ricardocuisine.com

::: by phone: 1-866-226-9222