



Electrolux



electrolux.com/register



EN User Manual | **Washing Machine**



CONTENTS

1. IMPORTANT SAFETY INFORMATION	2
2. FEATURES.....	5
3. PRE-INSTALLATION REQUIREMENTS.....	6
4. INSTALLATION.....	11
5. ACCESSORIES AND REPLACEMENT PARTS.....	17
6. CONTROLS AND SETTINGS.....	17
7. OPERATING INSTRUCTIONS.....	33
8. NORMAL OPERATING SOUNDS.....	37
9. STAIN REMOVAL GUIDE.....	38
10. CARE AND CLEANING.....	40
11. TROUBLESHOOTING.....	45
12. LIMITED WARRANTY.....	50
13. LIMITED WARRANTY.....	51

1. IMPORTANT SAFETY INFORMATION

Please read and save this manual

Thank you for choosing Electrolux, our premium brand in home appliances. This User manual is part of our commitment to customer satisfaction and product quality throughout the service life of your new appliance.

Keep a record for quick reference

Purchase date

.....

Electrolux serial number

.....

Electrolux model number

.....

Electrolux model series (It can be found within the Model number, example EFLW7637AW = 600 series)

.....

NOTE

Registering your product with Electrolux enhances our ability to serve you. You can register online at www.electroluxappliances.com, by sending your Product Registration Card in the mail, or PHOTOREGISTERSM using a smart phone. See registration card for details.

Questions?

For toll free telephone support or online support in the US and Canada contact:

U.S.

1-877-4ELECTROLUX (1-877-435-3287)

www.electroluxappliances.com

Canada

1-800-265-8352

www.electroluxappliances.ca

NOTE

The instructions appearing in this User manual are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance.

WARNING!

For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**READ ALL INSTRUCTIONS BEFORE OPERATING THIS APPLIANCE.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1.1 Important safety instructions

Safety precautions

Do not attempt to install or operate your unit until you have read the safety precautions in this manual. Safety items throughout this manual are labeled with a Danger, Warning, or Caution based on the risk type.

Definitions

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING!

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION!

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

WARNING!

To reduce the risk of fire, electrical shock, or injury to persons when using this appliance, comply with the warnings listed below. Failure to comply with these Important Safety Information and warnings could result in property damage, serious personal injury, or death.

1.2 Prevent fire

- Do not wash items that have been previously cleaned in, soaked in, or spotted with gasoline, cleaning solvents, kerosene, cooking oils, waxes, or other flammable or explosive substances. Do not store these items on or near the appliance. These substances give off vapors or chemical reactions that could ignite or explode.
- Do not put oily or greasy rags or clothing on top of the appliance. These substances give off vapors that could ignite the materials.
- Do not add gasoline, cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the appliance, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. Hydrogen gas is flammable; Do not smoke or use an open flame during this time.
- Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- Failure to comply with these warnings could result in fire, explosion, serious bodily injury and/or damage to the rubber or plastic parts of the appliance.
- Do not continue to use the appliance if you hear squeaking, grinding, rubbing or other unusual noises. This could be a sign of mechanical breakdown and lead to fire or serious injury. Contact a qualified technician immediately.

1.3 Protect children

- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children. As children grow, teach them the proper, safe use of all appliances.
- Destroy the carton, plastic bag and other packing materials after the appliance is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads or plastic sheets can become airtight compartments.
- Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels.
- Before the appliance is removed from service or discarded, remove the appliance door to prevent accidental entrapment.
- Failure to comply with these warnings could result in serious personal injuries.

1.4 Risk of child entrapment

Child entrapment and suffocation are not problems of the past. Junked or abandoned washers and dryers are still dangerous - even if they will sit for "just a few days". If you are getting rid of your old washer or dryer, please follow the instructions below to help prevent accidents.

We strongly encourage responsible appliance recycling/disposal methods. Contact your State/Province Energy Office, Local Electric and Water Utilities or Conservation Program Office or visit www.energystar.gov/recycle for more information on recycling your old washer or dryer.

1.5 Before you throw away your old washer or dryer:

- Remove doors
- Remove the electric power cord
- Secure all hoses and drain pipes to prevent water from leaking out and creating a slip hazard.

1.6 Prevent injury

- To prevent shock hazard and assure stability during operation, the appliance must be installed and electrically grounded by a qualified service person

in accordance with local codes. Installation instructions are packed in the appliance for installer's reference. Refer to the Installation sections of this manual for detailed grounding procedures. If the appliance is moved to a new location, have it checked and reinstalled by a qualified service person.

- To prevent personal injury or damage to the appliance, the electrical power cord of the appliance must be plugged into a properly grounded and polarized 3-prong outlet. The third grounding prong must never be removed. Never ground the appliance to a gas pipe. Do not use an extension cord or an adaptor plug.

WARNING!

FIRE/ELECTRICAL SHOCK HAZARD

 
Avoid fire hazard or electrical shock. Do not use an adaptor plug or extension cord or remove grounding prong from electrical power cord. Failure to follow this warning can cause serious injury, fire or death.

WARNING!

Improper grounding of the appliance may cause serious injury or death. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.

WARNING!

Do not, under any circumstances, cut, remove, or bypass the grounding prong (A). Always use the power cord with 3-prong grounded plug and grounding type wall receptacle.



- Follow package directions when using laundry products. Incorrect usage can produce poisonous gas - resulting in serious injury or death.
- Do not combine laundry products for use in 1 load unless specified on the label.

⚠ WARNING!

HARMFUL VAPOR HAZARD

Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acids such as vinegar, or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.



⚠ WARNING!

RISK OF INJURY

Do not wash: Water resistant and water repellent clothing or other materials. Failure to follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.


1.7 Prevent injury and damage to the appliance

To prevent serious personal injury and damage to the appliance:

- All repairs and servicing must be performed by an authorized service technician unless specifically recommended in this User manual. Use only authorized factory parts.
- Do not tamper with controls.
- Do not install or store the appliance where it will be exposed to the weather.
- Do not install on carpet. Install the appliance on a solid floor. It may be necessary to reinforce the floor to prevent vibration or movement.
- To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect the appliance from the power supply.
- To prevent injury, do not reach into the appliance while parts are moving.
- This appliance is equipped with an electrical overload protector. The motor will stop if it becomes overheated.
- Failure to comply with these warnings could result in serious personal injuries.
- Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

2. FEATURES

2.1 General overview

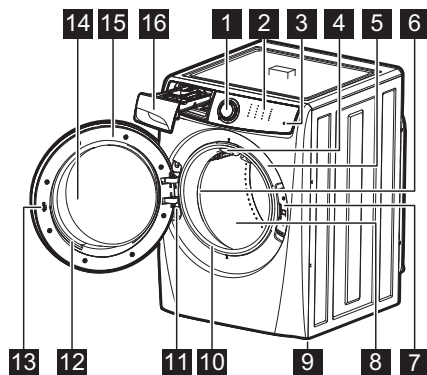

Not all cycles, options, or features listed are available on every model.

- 1** LED Display
- 2** Cycle Display
- 3** Control lock
- 4** Drum light (select models)
- 5** Serial and model #
- 6** Cascading wash vanes
- 7** Door latch with safety lock
- 8** Stainless steel wash drum
- 9** Adjustable leveling legs
- 10** Flexible door gasket
- 11** Wide angle door hinge
- 12** Door stand ventilation
- 13** Door striker
- 14** Inner bowl with small article redistribution ramp

- 15 Reversible door
- 16 Laundry products dispenser

2.2 Features overview

Refer to the table below for an overview of features available for each model series.

Model series	Drum light	Door reversibility	3 compartment dispenser Adaptive Dispenser™	Detergent pack option	Pure rinse	Optic whites	Cold wash	Hand wash	Whitest whites	Allergen	Sanitize	Extended refresh	Cold sanitize	Stain treatment	Perfect steam	Fast wash
300 Series	x	✓	✓	x	x	x	x	x	x	x	x	x	x	x	x	20 min
400 Series	x	✓	x	✓	✓	x	x	x	✓	x	✓	✓	x	✓	✓	18 min
500 Series	✓	✓	x	✓	✓	✓	x	x	✓	✓	✓	✓	x	✓	✓	15 min
600 Series	✓	✓	x	✓	✓	✓	x	✓	x	✓	✓	✓	x	✓	✓	15 min
700 Series	✓	✓	x	✓	✓	✓	✓	x	x	✓	✓	x	✓	✓	✓	15 min

3. PRE-INSTALLATION REQUIREMENTS

3.1 ✓ Installation checklist

Shipping Hardware

- Foam shipping support (under wash tub) removed and stored
- Shipping bolts and spacers removed from rear of appliance and stored
- Hole plugs (shipped in manual bag) installed in holes in backsheet

Leveling

- Washer is level, side-to-side and front-to-back
- Cabinet is sitting solid on all corners

Water Supply

- Use only new hoses and verify rubber sealing washers are installed
- Hot supply is connected to hot inlet and cold supply is connected to cold inlet
- Hot and cold water supply turned on
- No leaks present at water supply connections or appliance inlet connections - recheck in 24 h

Drain

- Stand pipe or wall drain height minimum 24 inches

- Verify anti-siphon disc is attached toward end of drain hose
- Drain hose secured in place with cable tie (shipped in drum)

Door Reversal

- Follow detailed instructions in this manual
- Test hinge and latch for function


Electrical Power

- House power turned on
- Washer plugged in

Final Checks

- Installation instructions and User Manual read thoroughly
- Door locks and water enters drum when cycle starts
- Registration card sent in

3.2 Tools and materials needed for installation

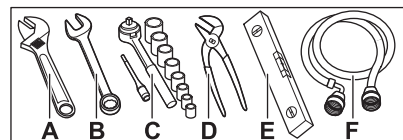

- A. Adjustable wrench
or
- B. 3/8 inch or 10 mm box wrench
or
- C. Ratchet and socket set
and
- D. Adjustable pliers
and
- E. Carpenter's level
and
- F. Inlet hose (x2)

Hoses are not included with washer purchase.

3.3 Electrical system requirements

Circuit

Individual, properly polarized and grounded 15 amp. branch circuit fused with 15 amp. time delay fuse or circuit breaker.

Power supply

2 wire, with ground, 120 volt single phase, 60 Hz, Alternating Current.

Outlet receptacle

Properly grounded 3-prong receptacle to be located so the power supply cord is accessible when the washer is in an installed position.

NOTE

Because of potentially inconsistent voltage capabilities, the use of this washer with power created by gas powered generators, solar powered generators, wind powered generators or any other generator other than the local utility company is not recommended.

WARNING!

ELECTRIC SHOCK HAZARD

Certain internal parts are intentionally not grounded and may present a risk of electrical shock if contacted during installation. Do not contact the following parts while the appliance is energized

- Pump
- Drive motor
- Electrical control boards
- Water valves

WARNING!

ELECTRIC SHOCK HAZARD

Improper connection of the equipment grounding conductor can result in a risk of electrical shock. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.

WARNING!

Do not, under any circumstances, cut, remove, or bypass the grounding prong (A). Always use the power cord with 3- prong grounded plug and grounding type wall receptacle.



3.4 Grounding requirements

The washer must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electrical shock by a path of least resistance for electrical current.

Since your washer is equipped with a power supply cord having an equipment-grounding conductor and a grounding plug, the plug must be plugged into an appropriate, copper wired receptacle that is properly installed and grounded in accordance with all local codes and ordinances or in the absence of local codes, with the National Electrical Codes, ANSI/NFPA 70 (latest edition), or in Canada, the Canadian electrical code C22.1 part 1.

If in doubt, call a licensed electrician. Do not cut off or alter the grounding prong on the power supply cord. In situations where a two-slot receptacle is present, it is the owner's responsibility to have a licensed electrician replace it with a properly grounded three prong grounding type receptacle.


3.5 Water supply requirements

Hot and cold water faucets must be installed within hose length of your washer's water inlet. The faucets must be 3/4 inch (1.9 cm) with threading for laundry hose connection. Water pressure must be

between 20 and 120 psi. Pressure difference between hot and cold cannot be more than 10 psi. Your water department can advise you of your water pressure.

3.6 Drain system requirements

1. Drain capable of eliminating 17 gals (64.3 L) per min.
2. A standpipe diameter of 1-1/4 inch (3.18 cm) minimum.
3. The standpipe height above the floor:
 - Minimum height: 24 inches (61 cm)
 - Maximum height: 96 inches (244 cm).

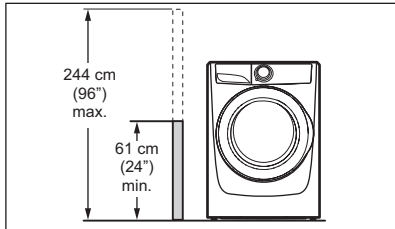

NOTE

Drain hose length is 59 inches (150 cm). For installations requiring a longer drain hose, use hose P/N 137098000, available from an authorized parts distributor.

3.7 Clearance requirements



Do not install your washer:

1. In an area exposed to dripping water or outside weather conditions.
2. In an area where gasoline or other flammables are kept or stored.
3. On carpet. Floor must be solid with a maximum slope of 1 inch (2.5 cm). To minimize vibration or movement, reinforcement of the floor may be necessary.
4. On top of another washer or on top of a dryer. Do not stack a dryer on top of washer already installed on pedestal.
5. Do not install your washer with less than 1 inch (2.5 cm) of clearance from a dryer or any other machine in any direction.

3.8 Installation in a recess or closet

If washer and dryer are installed in the same closet, door ventilation is required: A

minimum of 120 square inches (774.2 cm²) of opening, equally divided at the top and bottom of the door, is required. Louvered openings should be located 3 inches (7.6 cm) from bottom and top of door. Air openings are required to be unobstructed when a door is installed. A louvered door with equivalent air openings for the full length of the door is acceptable.

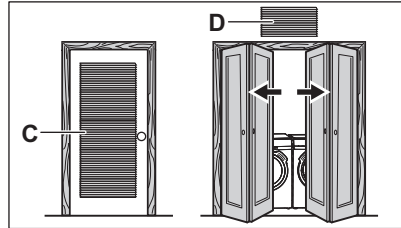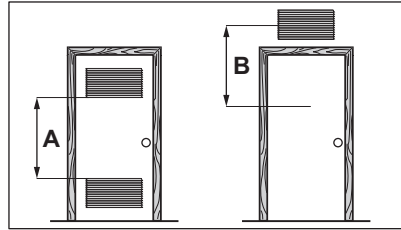

- A. 120 sq. inches equally divided split vent door (60 sq. inches each)
- B. Solid door with wall ventilation (120 sq. inches)
- C. Louvered door (120 sq. inches minimum louvered opening)
- D. Solid Bi-Fold doors with no ventilation (120 sq. inches of wall venting)
- E. Bi-Fold louvered doors with 120 sq. inches of ventilation


Min. installation clearances - inches (cm)

	Sides	Rear	Top	Front
Alcove/ recess	1 inch (2.5 cm)	1 inch (2.5 cm)	1 inch (2.5 cm)	Open

Min. installation clearances - inches (cm)				
	Sides	Rear	Top	Front
Closet with door vent	1 inch (2.5 cm)	1 inch (2.5 cm)	1 inch (2.5 cm)	1 inch (2.5 cm)

Min. installation clearances - inches (cm)				
	Sides	Rear	Top	Front
Closet with wall vent	1 inch (2.5 cm)	1 inch (2.5 cm)	1 inch (2.5 cm)	1 inch (2.5 cm)

3.9 Washer dimensions

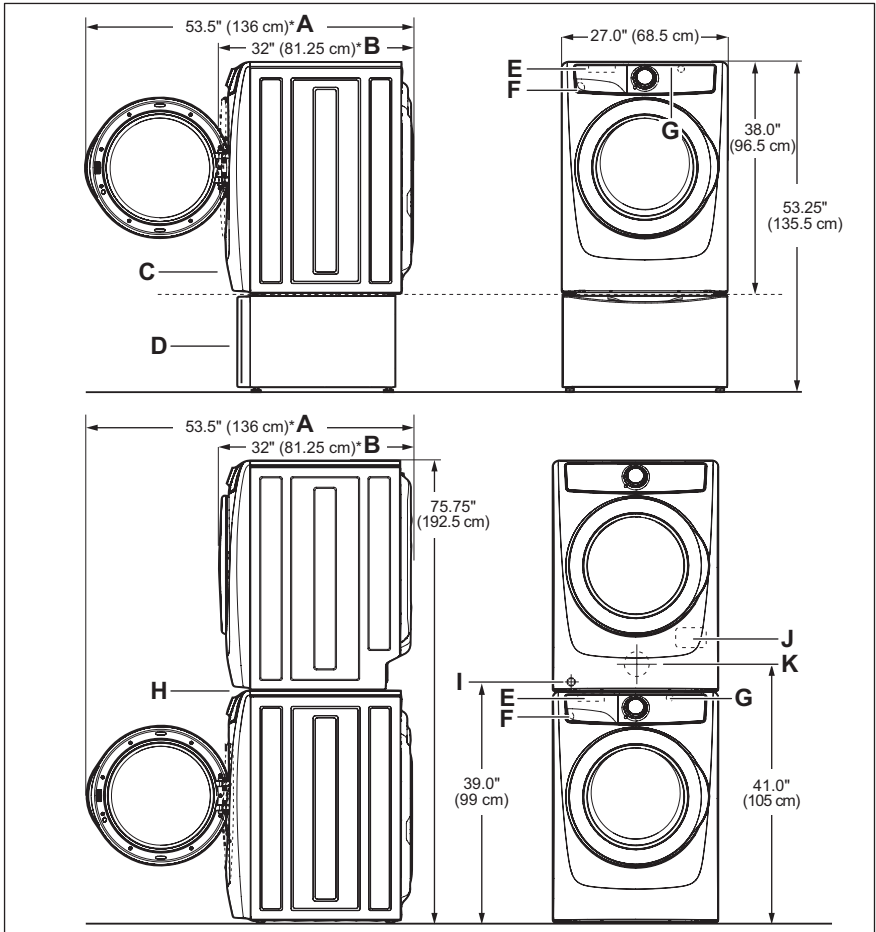

- A. To clear open door. ¹⁾
- B. To front of closed door. ¹⁾
- C. Freestanding washer on floor.
- D. Washer mounted on optional pedestal.
- E. Water supply connection on rear of unit.
- F. Drain hose on rear of unit. ²⁾
- G. Power cord on rear of unit. ³⁾
- H. Approved stacking kit (STACKIT7X) required for stacked installation.
- I. Gas supply pipe on rear of gas unit.
- J. Electrical supply on rear of unit. ⁴⁾
- K. Centerline height for rear vent.

1) Connection of water inlet hose on steam dryer adds 3/4 inch (2 cm) to installation depth.
 2) Drain hose length on washer approximately 59 inches (150 cm).
 3) Power supply cord length on washer approximately 60 inches (152.5 cm).
 4) Power supply cord length on gas dryer or electric Canadian dryer approximately 60 inches (152.5 cm).

4. INSTALLATION

4.1 Unpacking the washer

WARNING!

ELECTRICAL SHOCK HAZARD

Improper connection of the equipment grounding conductor can result in a risk of electrical shock. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.

IMPORTANT


Do not place the washer onto its back without the shipping bolts.

CAUTION!


EXCESSIVE WEIGHT HAZARD

To avoid back or other injury, have more than one person move or lift the washer.

1. Using a rug, blanket or piece of cardboard to protect the floor, carefully lay the washer on its back.

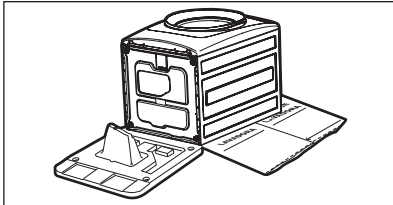

2. Remove styrofoam base and shipping plug and set them aside.

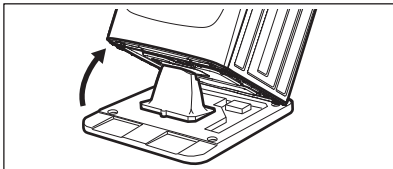


3. Carefully return the washer to an upright position.
4. Carefully move the washer to within 4 feet (1 m) of its final location.

IMPORTANT

Save styrofoam base and shipping plug for use to help prevent washer damage during any future moves.

IMPORTANT


Do not tip washer upside down onto its top or onto its right side for any reason.

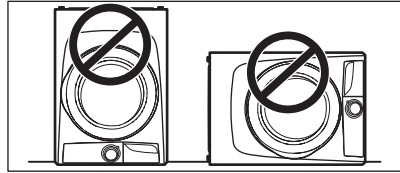

4.2 Removing shipping hardware

IMPORTANT

Failure to remove shipping hardware completely could result in damage to the appliance, damage to your home, or unexpected washing results. Save all shipping bolts and spacers for future use. If the washer is to be transported at a later date, the shipping hardware must be reinstalled to help prevent shipping damage.

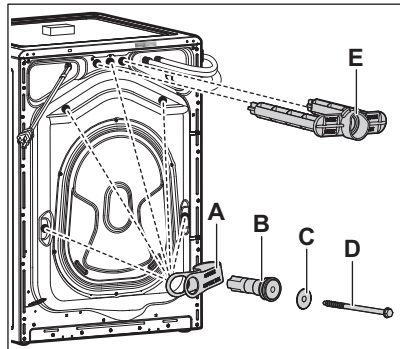

For 300, 400 and 500 Series remove all of the following:

- A. 3 P-Clamps
- B. 4 black spacers
- C. 4 shims
- D. 4 bolts

For 600 and 700 Series remove all of the following:

- A. 4 P-Clamps
- B. 4 black spacers and 1 white spacer (on select models)
- C. 5 shims


- D. 5 bolts
- E. 1 shipping fork (on select models)

NOTE

Rubber expansion material on spacers may need time to relax before they can be easily pulled through shipping hole.

4.3 Installing hole plugs


Locate hole plugs in the small bag supplied with washer instruction manuals. Insert them in the holes in the washer back panel where the shipping hardware has been removed.

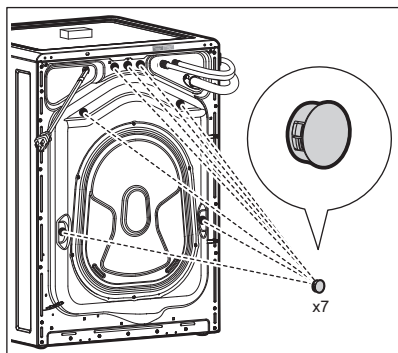


4.4 Leveling the washer

Excessive noise and vibration can be prevented by properly leveling the washer.


1. For free standing installation and with the washer within 4 feet (1 m) of its final location, place a level on top of the washer.

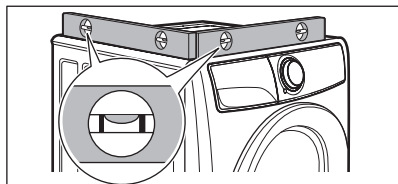

2. Use an adjustable wrench to adjust the leveling legs so the washer is level front-to-rear and side-to-side, and stable corner-to-corner.

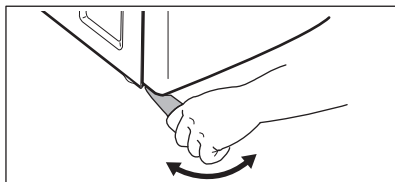

3. Press down on alternate corners and sides and feel for the slightest movement. Adjust the appropriate leg(s) so the washer sits solidly on the floor on all four legs. Keep the leveling leg extension at a minimum for best performance of the washer.

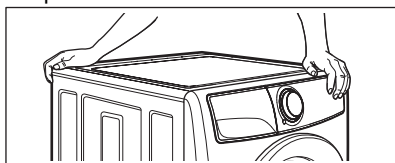


NOTE


For pedestal installations, see additional installation instructions included with the pedestal.

4.5 Connecting the water

 1. Run some water from the hot and cold faucets to flush the water lines and remove particles that might clog the water valve screens and to determine which faucet is hot and which is cold supply.
2. Check to ensure that the inlet hoses have the rubber washer firmly in place.




3. Connect the hot inlet hose (**B**, color: red) to the hot inlet connection on the washer and the cold inlet hose (**A**, color: blue) to the cold inlet connection on the washer.

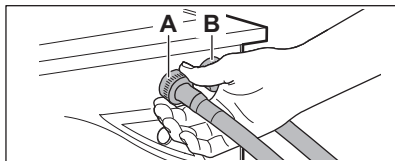


Cold inlet shown on left side (400, 500, 600, 700 models only). On 300 series, the cold inlet is on the right side.

4. Tighten by hand until snug. Then tighten each supply connection

another 2/3 turn with pliers. Do not cross thread or over-tighten these connections.

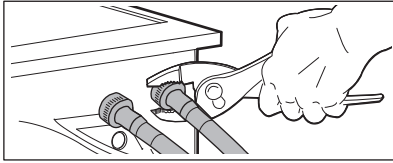

5. Connect the hot inlet hose to the hot water supply and the cold inlet hose to the cold water supply.
6. Tighten by hand until snug. Then tighten each supply connection another 2/3 turn with pliers. Do not bend, kink or pinch water inlet hoses.

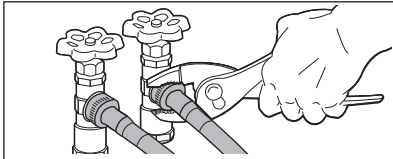

7. Turn on the water and check for leaks.

IMPORTANT

 
The cold water inlet will have a blue cap cover on the inlet connection and the hot water inlet will have a red cap cover on the inlet connection. Additionally, depending on the model, the hot and cold inlet connections will be marked with either an adhesive label or markings directly on the unit to indicate which side is cold and which side is hot.



Rubber washers (A) must be present. Use only new hoses.


4.6 Connecting the drain

1. Verify the antisiphon disc (A) is in place.



2. Form a "U" shape on the end of the drain hose with the hose pointed toward the drain.
3. Place the formed end in a laundry tub or a standpipe, (A) insert less than 8.5 inches (21.5 cm)

4. Secure the drain hose with the cable tie (B) to the standpipe, inlet hose, laundry tub, etc. so the hose does not pull out from the force of the water. Cable ties provided in the manual bag.

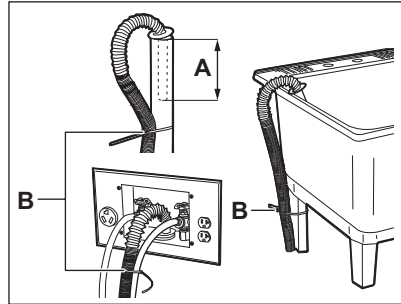

IMPORTANT

Check to ensure the power is off at a circuit breaker/fuse box before plugging the power cord into an outlet.

NOTE

The standpipe inside diameter must be 1-1/4 inch (3.2 cm) minimum. There must be an air gap around the drain hose in the standpipe. A snug hose fit can cause a siphoning action.

4.7 Completing the installation

WARNING!

ELECTRICAL SHOCK HAZARD

Improper connection of the equipment grounding conductor can result in a risk of electrical shock. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.

1. Plug the power cord into a grounded outlet.
2. Turn on the power at a circuit breaker / fuse box.
3. Carefully slide the washer to its final position. Recheck for level and rock corners for stability. Refer to Leveling the washer. Remove and discard door tape.
4. Run the washer through a complete cycle, checking for water leaks and proper operation.

- If you have any questions during initial operation, refer to Troubleshooting section before calling for service.
- Place these instructions in a location near the washer for future reference.

NOTE

A wiring diagram and technical data sheet are located under the washer top panel, on top of the detergent dispenser housing.


4.8 Reversing the door

NOTE

Door reversibility is available on all models.

Before you reverse washer door:

- Be sure you have adequate swing area before reversing door.
- Gather your tools - including a screw driver (A) with a #2 square bit and plastic knife (B), or small, flat prying tool that won't damage paint.

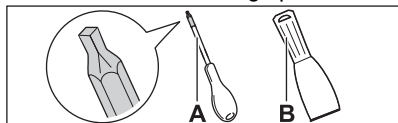


- Protect flat work surface, such as top of washer or floor near washer, with a soft cloth or towel.
- Be sure washer is unplugged from power source.

WARNING!


ELECTRICAL SHOCK HAZARD
Failure to disconnect power source before servicing could result in personal injury or even death.

Removing door assembly

- Completely open the door to expose all four hinge screws.
- Remove all four hinge fine thread screws with #2 square bit driver. Save for reinstalling later.

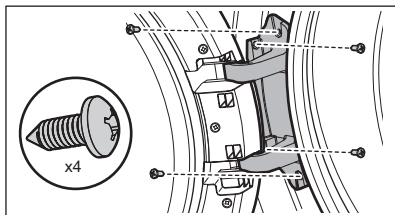


- Hold the door with one hand supporting the handle area and one hand supporting the hinge. While supporting the door at the hinge, press firmly with the other hand until the locating pins on the back of the hinge plate dislocate from the front panel.

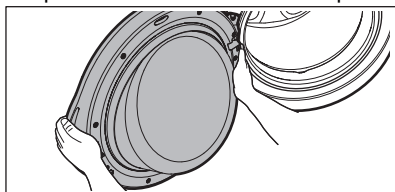


- While supporting the door with one hand, pinch the tabs to release the plastic terminal cap from the hinge plate.

IMPORTANT

Take care not to pull the door away from the washer until you remove the wiring harness terminal cap.

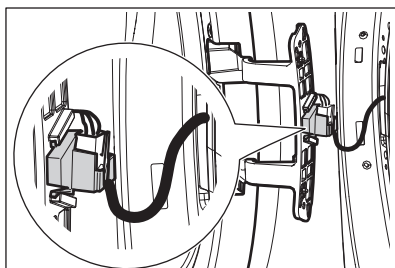


- Set the door face down on a flat surface protected by soft cloth or towel.
- Release wiring harness from retainer on plastic terminal cap. Then release terminal from terminal cap. Save the cap to reinstall later.

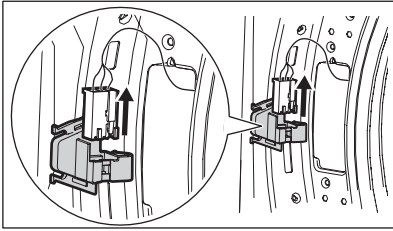


Removing door lock and plastic hole cover

1. Locate and remove both coarse thread screws from door lock. Save screws for later.
2. Rotate the lock as you pull it out through the front panel. Take care not to pull too hard or too far as the lock is still attached to the wiring harness.

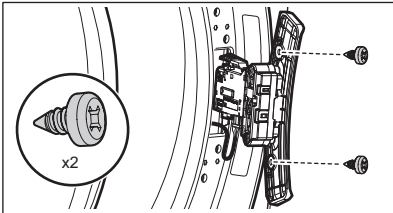


3. Disconnect the wiring harness terminal from the door lock. Set the door lock aside for reinstallation later.
4. Pry the bottom of the plastic hole cover upward to release it from the front panel. You may have to use a non-scratching plastic knife if you are unable to release it manually. Then, slide the cover down slightly and remove it from the front panel.

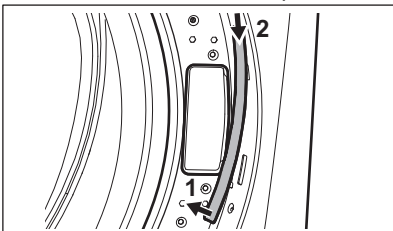


Reinstalling door lock and hole cover

1. Move the plastic cover to the other side of the front panel. Position the cover so the "hook" is at the bottom.

Insert hook into lower slot, slide the cover down, and press upper retention tabs into opening until they snap into place.

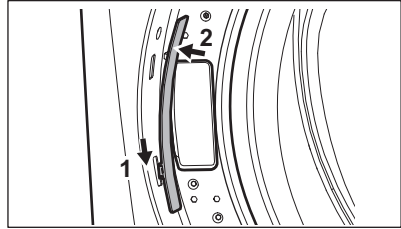


2. Insert wiring harness into door lock.
3. Insert door lock into front panel and reinstall both door lock coarse thread screws.

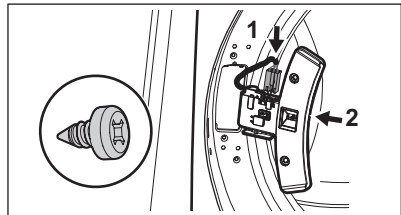


Reversing door assembly


1. Locate nine screws on inner door ring. Remove each and save for reinstallation later. Remove inner door (with hinge) and carefully set aside.

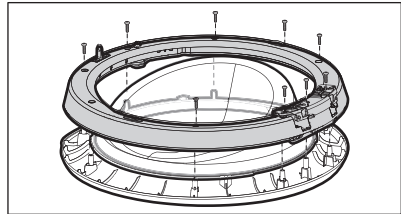

2. Lift door bowl slightly and rotate 180 degrees, setting it back onto outer door.

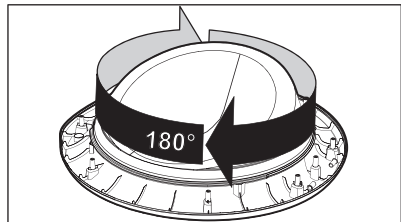


3. Make sure the alignment tabs reengage.

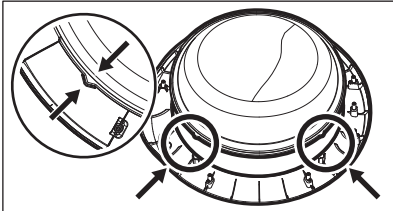


4. Reattach the inner door to the outer door using the nine screws removed earlier. See illustration, Step 1.
5. Check to verify that the scoop (wider section) of the door bowl is situated at the bottom of the door.

Reinstalling door assembly


1. Insert the wiring harness terminal into the terminal cap and wrap the harness into the harness retainer.

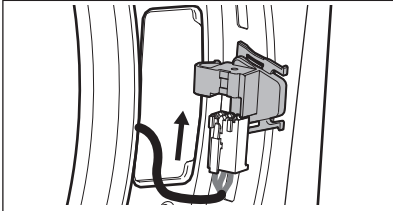


2. Slide terminal cap onto back of hinge plate until tabs snap into place.

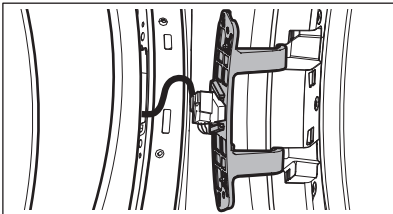

3. Insert hinge locating pins into the hole that were previously covered by the plastic hole cover. Press on the face of the hinge to snap the other locating pins into place.

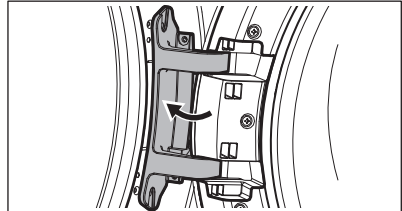


4. Reinstall all four fine thread screws removed earlier - two front screws first, then two side screws.

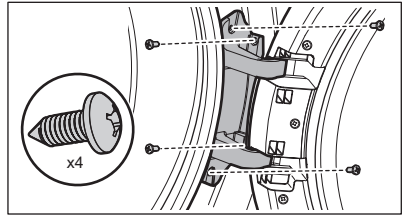

Verify reversed door operation

1. Test door for free, smooth swinging operation and secure latching when closed.
2. Verify inner door bowl is in the correct orientation with the "scoop" at the bottom.

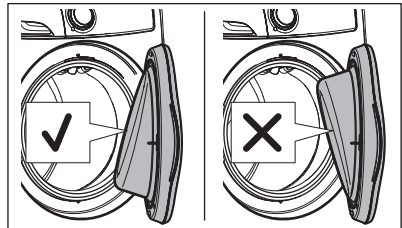

3. Plug in washer and close the door. Test correct door lock operation by starting a test cycle: lock should engage, and door should not be able to be opened until cycle is paused or canceled.

5. ACCESSORIES AND REPLACEMENT PARTS

5.1 Accessories


CAUTION!

Failure to use accessories manufactured by (or approved by) the manufacturer could result in personal injury, property damage or damage to the washer.

Matching storage pedestal ⁵⁾

- White Pedestal - P/N EPWD257UIW
- Titanium Pedestal - P/N EPWD257UTT

A storage pedestal accessory, specifically designed for this washer may be used to elevate the washer for ease of use. This pedestal will add about 15 inches (38 cm) to the height of your unit.

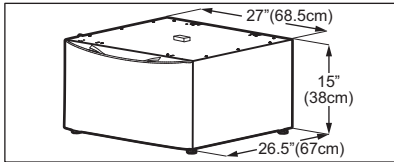

Dryer stacking kit

- P/N STACKIT7X

Depending on the model purchased, a kit for stacking a matching dryer on top of this washer may have been included in the initial purchase of your dryer. If your model did not include a stacking kit or you desire another stacking kit, you may order one.

Inlet hose kits

Please call 866-233-8353 (in Canada, 800-265-8352) to explore hose kit options

that will meet your specific installation needs.

Drain hose extension kit

 
- P/N 137098000

In order to reach standpipe heights or distances beyond the reach of the drain hose supplied, order the drain hose extension kit.

Universal appliance wrench

- P/N 137019200

A Universal Appliance Wrench is available to aid in dryer/washer/pedestal feet adjustment.



Touch up paint pens ⁵⁾

- White - P/N 5304468812
- Titanium - P/N 5304475700

5.2 Replacement parts in U.S. and Canada

If replacements parts are needed for your washer, you can contact the source where you purchased your washer, call 1-877-4ELECTROLUX (1-877-435-3287) in the U.S. or 1-800-265-8352 in Canada, or visit our website, www.electroluxappliances.com in the U.S. or www.electroluxappliances.ca in Canada for the Electrolux Authorized Parts Distributor nearest you.


6. CONTROLS AND SETTINGS

6.1 Model series


This manual covers many models and not all cycles, options, or features listed are available on every model. Consoles shown below for reference only. Your model may differ.

⁵⁾ Other colors may be available. Contact the source where you purchased your washer.


300 Series

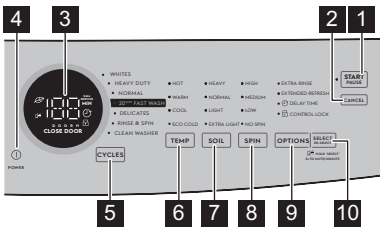


400 Series

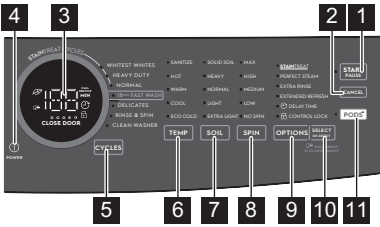


500 Series

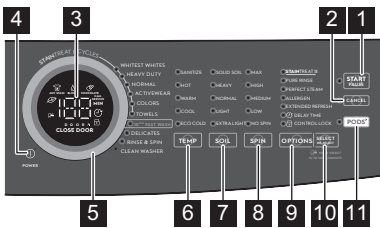

600 Series

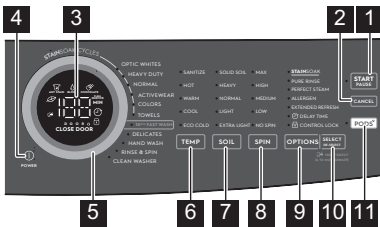


700 Series

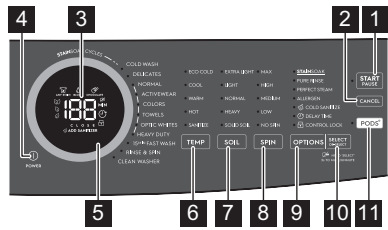

- 1 Start
- 2 Cancel
- 3 LED display
- 4 Power
- 5 Cycle selector
- 6 Temperature
- 7 Soil level
- 8 Spin speed
- 9 Options
- 10 Set / select
- 11 PODS® (select models) 6)

6) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

6.2 Settings chart - 300 series washer

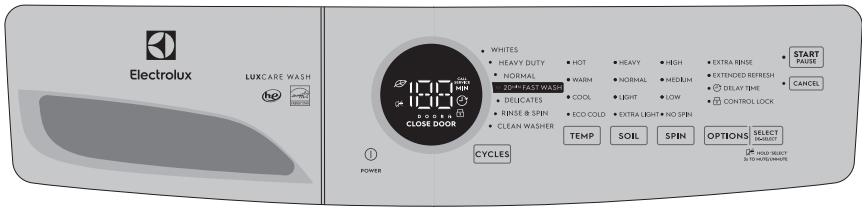

These temperature, spin speeds, soil levels and options are available with the following cycles:

Cycle settings and options	Whites	Heavy Duty	Normal	20 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
Temp							
Hot	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Warm	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Cool	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Eco Cold	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Soil							
Heavy	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Normal	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Light	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Extra Light	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Spin							
High	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Medium	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Low	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
No Spin	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Options							
Extra Rinse	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Extended Refresh	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Delay Time	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Cycle settings and options	Whites	Heavy Duty	Normal	20 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
Control Lock	✓	✓	✓	✓	✓	✓	✓
Mute / Unmute	✓	✓	✓	✓	✓	✓	✓

✓ = Available selections.


☐ = Factory presets.

■ = Non-modifiable presets.

✗ = Unavailable selections.

⊗ = Unavailable selections. Do not load any items in drum during system clean cycle.

6.3 Settings chart - 400 series washer

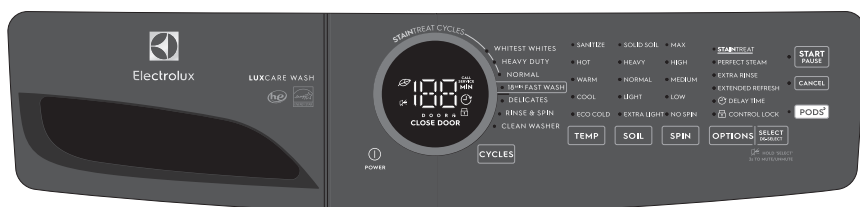

These temperature, spin speeds, soil levels and options are available with the following cycles:

Cycle settings and options	Whitest Whites	Heavy Duty	Normal	18 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
Temp							
Sanitize	✓	✓	✓	✗	✗	✗	⊗
Hot	☐	☐	✓	✗	✗	✗	⊗
Warm	✓	✓	☐	☐	☐	✗	⊗
Cool	✓	✓	✓	✓	✓	✗	⊗
Eco Cold	✓	✓	✓	✗	✓	☐	⊗
Soil							
Solid Soil	✓	☐	✓	✗	✗	✗	⊗

Cycle settings and options	Whitest Whites	Heavy Duty	Normal	18 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
Heavy	✓	✓	✓	×	×	×	⊗
Normal	□	✓	□	×	✓	×	⊗
Light	×	×	✓	✓	□	×	⊗
Extra Light	×	×	✓	□	✓	×	⊗
Spin							
Max	□	□	✓	■	×	□	⊗
High	✓	✓	✓	×	×	✓	⊗
Medium	✓	✓	□	×	□	✓	⊗
Low	✓	×	✓	×	✓	✓	⊗
No Spin	✓	×	✓	×	✓	✓	⊗
Options							
StainTreat	✓	✓	✓	×	×	×	⊗
Perfect Steam™	✓	✓	✓	×	×	×	⊗
Extra Rinse	✓	□	✓	×	✓	□	⊗
Extended Refresh	✓	✓	✓	×	✓	×	⊗
Delay Time	✓	✓	✓	✓	✓	✓	⊗
Control Lock	✓	✓	✓	✓	✓	✓	✓
Mute / Unmute	✓	✓	✓	✓	✓	✓	✓
PODS® 1)	✓	✓	✓	✓	✓	×	✓

1) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

✓ = Available selections.

□ = Factory presets.

■ = Non-modifiable presets.

× = Unavailable selections.

⊗ = Unavailable selections. Do not load any items in drum during system clean cycle.

6.4 Settings chart - 500 series washer



These temperature, spin speeds, soil levels and options are available with the following cycles:

Cycle settings and options	Whitest Whites	Heavy Duty	Normal	Active Wear	Colors	Towels	15 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
Temp										
Sanitize	✓	✓	✓	✗	✗	✓	✗	✗	✗	✗
Hot	□	□	✓	✗	✗	□	✗	✗	✗	✗
Warm	✓	✓	□	□	□	✓	□	□	✗	✗
Cool	✓	✓	✓	✓	✓	✓	✓	✓	✗	✗
Eco Cold	✓	✓	✓	✓	✓	✓	✓	✓	□	✗
Soil										
Solid Soil	✓	✓	✓	✓	✓	✓	✗	✗	✗	✗
Heavy	✓	□	✓	✓	✓	✓	✗	✗	✗	✗
Normal	□	✓	□	□	□	□	✗	✗	✗	✗
Light	✓	✓	✓	✓	✓	✓	✗	✓	✗	✗
Extra Light	✗	✗	✓	✓	✓	✗	■	□	✗	✗
Spin										
Max	□	□	✓	✓	✓	□	■	✗	□	✗
High	✓	✓	✓	✓	✓	✓	✗	✗	✓	✗
Medium	✓	✓	□	□	□	✓	✗	□	✓	✗
Low	✓	✗	✓	✓	✓	✓	✗	✓	✓	✗
No Spin	✓	✗	✓	✓	✓	✗	✗	✓	✓	✗
Options										

Cycle settings and options	Whitest Whites	Heavy Duty	Normal	Active Wear	Colors	Towels	15 min Fast Wash	Delicates	Rinse & Spin	Clean Washer
StainTreat II	✓	✓	✓	✓	✓	✓	×	×	×	⊗
Pure Rinse	✓	☐	✓	☐	✓	✓	×	✓	☐	⊗
Perfect Steam™	✓	✓	✓	✓	✓	✓	✓	×	×	⊗
Allergen	✓	✓	×	×	×	✓	×	×	×	⊗
Extended Refresh	✓	✓	✓	✓	✓	✓	×	×	×	⊗
Delay Time	✓	✓	✓	✓	✓	✓	✓	✓	✓	⊗
Control Lock	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Mute / Unmute	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
PODS® 1)	✓	✓	✓	✓	✓	✓	✓	✓	×	✓

1) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

✓ = Available selections.


☐ = Factory presets.

■ = Non-modifiable presets.

×

⊗ = Unavailable selections. Do not load any items in drum during system clean cycle.

6.5 Settings chart - 600 series washer

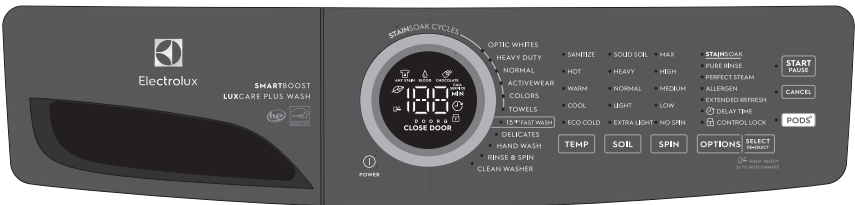

These temperature, spin speeds, soil levels and options are available with the following cycles:

Cycle settings and options	Optic Whites	Heavy Duty	Normal	Active Wear	Colors	Towels	15 min Fast Wash	Delicates	Hand Wash	Rinse & Spin	Clean Washer
Temp											
Sanitize	✓	✓	✓	×	×	✓	×	×	×	×	⊗
Hot	□	□	✓	×	×	□	×	×	×	×	⊗
Warm	✓	✓	□	□	□	✓	□	□	✓	×	⊗
Cool	✓	✓	✓	✓	✓	✓	✓	✓	□	×	⊗
Eco Cold	✓	✓	✓	✓	✓	✓	✓	✓	✓	□	⊗
Soil											
Solid Soil	✓	✓	✓	✓	✓	✓	×	×	×	×	⊗
Heavy	✓	□	✓	✓	✓	✓	×	×	×	×	⊗
Normal	□	✓	□	□	□	□	×	×	×	×	⊗
Light	✓	✓	✓	✓	✓	✓	×	✓	✓	×	⊗
Extra Light	×	×	✓	✓	✓	×	■	□	□	×	⊗
Spin											
Max	□	□	✓	✓	✓	□	■	×	×	□	⊗
High	✓	✓	✓	✓	✓	✓	×	×	×	✓	⊗
Medium	✓	✓	□	□	□	✓	×	□	□	✓	⊗
Low	✓	×	✓	✓	✓	✓	×	✓	✓	✓	⊗
No Spin	✓	×	✓	✓	✓	×	×	✓	✓	✓	⊗
Options											
StainSoak	✓	✓	✓	✓	✓	✓	×	×	×	×	⊗
Pure Rinse	✓	□	✓	□	✓	✓	×	✓	×	□	⊗
Perfect Steam™	✓	✓	✓	✓	✓	✓	✓	×	×	×	⊗
Allergen	✓	✓	×	×	×	✓	×	×	×	×	⊗
Extended Refresh	✓	✓	✓	✓	✓	✓	×	×	×	×	⊗
Delay Time	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	⊗
Control Lock	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Mute / Unmute	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓


Cycle settings and options	Optic Whites	Heavy Duty	Normal	Active Wear	Colors	Towels	15 min Fast Wash	Delicates	Hand Wash	Rinse & Spin	Clean Washer
----------------------------	--------------	------------	--------	-------------	--------	--------	------------------	-----------	-----------	--------------	--------------

PODS® 1) ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ × ✓

1) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

- ✓ = Available selections.
- = Non-modifiable presets.
- ⊗ = Unavailable selections. Do not load any items in drum during system clean cycle.
- = Factory presets.
- × = Unavailable selections.

6.6 Settings chart - 700 series washer

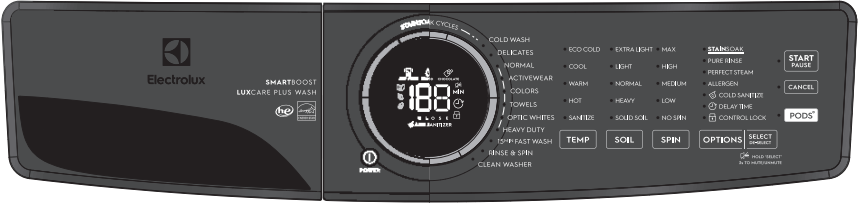

These temperature, spin speeds, soil levels and options are available with the following cycles:

Cycle settings and options	Cold Wash	Delicates	Normal	Active Wear	Colors	Towels	Optic Whites	Heavy Duty	15 min Fast Wash	Rinse & Spin	Clean Washer
Temp											
Sanitize	×	×	✓	×	×	✓	✓	✓	×	×	⊗
Hot	×	×	✓	×	×	□	□	□	×	×	⊗
Warm	×	□	□	□	□	✓	✓	✓	□	×	⊗
Cool	✓	✓	✓	✓	✓	✓	✓	✓	✓	×	⊗
Eco Cold	□	✓	✓	✓	✓	✓	✓	✓	✓	□	⊗
Soil											
Solid Soil	✓	×	✓	✓	✓	✓	✓	✓	×	×	⊗

Cycle settings and options	Cold Wash	Delicates	Normal	Active Wear	Colors	Towels	Optic Whites	Heavy Duty	15 min Fast Wash	Rinse & Spin	Clean Washer
Heavy	✓	×	✓	✓	✓	✓	✓	□	×	×	⊗
Normal	□	×	□	□	□	□	□	✓	×	×	⊗
Light	✓	✓	✓	✓	✓	✓	✓	✓	×	×	⊗
Extra Light	✓	□	✓	✓	✓	×	×	×	■	×	⊗
Spin											
Max	□	×	✓	✓	✓	□	□	□	■	□	⊗
High	✓	×	✓	✓	✓	✓	✓	✓	×	✓	⊗
Medium	✓	□	□	□	□	✓	✓	✓	×	✓	⊗
Low	✓	✓	✓	✓	✓	✓	✓	×	×	✓	⊗
No Spin	✓	✓	✓	✓	✓	×	✓	×	×	✓	⊗
Options											
StainSoak	×	×	✓	✓	✓	✓	✓	✓	×	×	⊗
Pure Rinse	✓	✓	✓	□	✓	✓	✓	□	×	□	⊗
Perfect Steam™	×	×	✓	✓	✓	✓	✓	✓	✓	×	⊗
Allergen	×	×	×	×	×	✓	✓	✓	×	×	⊗
Cold Sanitize	✓	✓	✓	✓	✓	✓	✓	✓	×	×	⊗
Delay Time	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	⊗
Control Lock	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Mute / Unmute	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
PODS® 1)	✓	✓	✓	✓	✓	✓	✓	✓	✓	×	✓

1) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

✓ = Available selections.

□ = Factory presets.

■ = Non-modifiable presets.

× = Unavailable selections.

⊗ = Unavailable selections. Do not load any items in drum during system clean cycle.

6.7 Cycle selection

Press the **Power** button to turn on the unit. Then, turn the cycle selector in either direction or press the cycles button (dependent on model) to scroll to the

desired cycle. The indicator light for that cycle will be illuminated.

The estimated cycle time will appear on the LED display and indicator lights adjacent to the default settings (water

temperature, final spin speed, and soil level) will illuminate for the cycle selected. Refer to Settings charts for default settings for each cycle.

Cycle settings and cycle options can be changed using the **Temp**, **Spin** and **Soil** buttons. Refer to Cycle settings and Cycle options for detailed directions and descriptions of available settings.

To change the cycle once the cycle has begun, press **Cancel**, select a new cycle, and press **Start** again.

NOTE

Turning the cycle selector knob without canceling the cycle first, will not change the cycle.

To stop the cycle, press **Cancel**.

NOTE

Using PODS® setting may increase fast wash time by several minutes.

NOTE

For **spin only** cycle deselect **Extra Rinse**.
 For **drain only** cycle select **No Spin**.
 Refer to Cycle options for rinse options and Cycle settings for spin settings.

For best results

Follow the fabric care label instructions on items to be washed.



6.8 Cycles table

The following cycles are not available on every model, refer to Settings charts.

Load	Load type	Cycle description
Optic Whites	White loads	SmartBoost action Longer agitation Optimized temperatures
Whitest Whites	White loads	Longer agitation Higher temperatures
Whites	White loads	Longer agitation

Load	Load type	Cycle description
Heavy Duty	Large heavily soiled loads	Longer agitation Aggressive cleaning motion Higher temperatures
Normal	Normally soiled cotton clothing, mixed loads and bedding except comforters	Moderate agitation Moderate cleaning motion Most energy efficient
Active Wear	Highly solid lightweight synthetic apparel	Longer agitation Mild cleaning motion Extra rinse
Colors	Lightly soiled dark or dyed fabrics	Mild cleaning motion Lower temperatures
Towels	Towels and bedding including comforters	Long agitation Higher temperatures
Fast wash 15/18/20 min	Small lightly soiled loads (3-5 pieces)	Aggressive cleaning motion Extra rinse
Delicates	Small lightly soiled loads (delicate fabrics)	Shorter agitation Gentle cleaning motion Lower temperatures Lower spin speeds
Cold Wash	All types of clothing, mixed loads and bedding except comforters	Moderate agitation Moderate cleaning motion Cold temperature
Hand Wash	Small, lightly soiled loads and very delicate fabrics	Very short agitation Long soaking times Lower temps Lower spin speeds
Rinse & Spin	Rinse and spin only (cold rinse or add fabric softener)	Cold temperature
Clean Washer	Refer to Care and Cleaning	

6.9 Cycle settings

Washing temperature

The appropriate washing temperature will automatically be indicated for the cycle selected. To change the preset temperature, press the **Temp** button to scroll to the desired setting. Select a wash water temperature according to fiber content, colorfastness and soil level.

To protect your fabrics, not all temperatures are available with every cycle. If a temperature is not appropriate for the cycle, it cannot be selected and will not be lit by pressing the **Temp** button.

The temperature selected for the cycle will be remembered and recalled each time that cycle is selected in the future.

All wash water temperatures are automatically regulated to maximize detergent effectiveness and improve washing performance. The water heater setting and its distance from the washer, water usage in other parts of the home, and seasonally low ground water temperature in some geographic areas can affect water temperature.

Sanitize (on select models)

Use the sanitize setting to clean and sanitize heavily soiled, colorfast fabrics including towels, bedding, cloth diapers, and children's clothing.

It is recommended that you set your water heater to 120°F (49°C) or higher to ensure proper performance during this cycle. If the setting is lower or the load is extra large, the cycle time may be extended.

When used with the heavy duty, towels, optic whites and whitest whites, cycles, the sanitize setting will kill 99.9% of bacteria with no carryover of bacteria between loads. No bleach or harsh chemicals are needed, but higher temperatures are required. Check fabric care labels to prevent damage.

NOTE

The **Heavy Duty, Towels, Optic Whites** and **Whitest Whites** with **Sanitize** setting cycles have been designed to meet the requirements of NSF P172 protocol for sanitization efficacy.



NSF Protocol P172
Sanitization Performance of Residential
and Commercial, Family-Sized Clothes
Washers

NOTE

If the voltage at your outlet is under 110v, the internal heater may not adequately heat the wash water. If the cycle is interrupted while the water is heating, the final temperature of the wash water may be lower and sanitation may be reduced.

The wash water is heated by an internal boost heater to a maximum of 152°F (67°C) as the load tumbles. Cold water is added to cool down the load prior to drain and spin.

As a precaution, the washer door remains locked when the water temperature reaches 130°F (55°C)

NOTE

If the wash cycle is paused or canceled while the internal drum temperature is above 130°F (55°C), the door will remain locked until it cools. You may manually perform a Rinse & Spin cycle to cool the internal temperature sooner.

Allergen (on select models)

Removes dust mites and dander from household objects. The temperature does increase on this setting.

NOTE

The **Heavy Duty**, **Optic Whites** and **Towels** cycles with the **Allergen** option selected have been designed to meet the requirements of the NSF P351 protocol for allergen reduction efficacy. These cycles and settings will kill dust mites and eliminate at least 95% of pet dander. Since higher temperatures are required, please check fabric care labels to prevent damage.



NSF Protocol P351
Allergen Reduction Performance
of Residential and Commercial,
Family-Sized Clothes Washers


Hot

Use this setting for heavily soiled white or colorfast cottons and blends.

Warm

Use this setting for normally soiled white or colorfast cottons or blends.

Eco Cold (on select models)

Wash and rinse temperatures are equivalent to temperature of cold tap supply. Use this selection for fabrics and colors that are prone to dye transfer. For use with cold water  detergents.

NOTE

The washer will always use a small amount of hot water to dissolve the pack when the PODS® option has been selected.

Soil level

Adjust the wash time based on the soil level of each load. **Solid Soil** (on select models), **Heavy**, **Normal**, **Light** and **Extra Light** (on select models) soil levels are available.

Spin speed

Max (on select models), **High**, **Medium** and **Low** (on select models) spin speeds are available for each cycle. The spin speed and/or duration of final spin vary from model to model and cycle to cycle.

Increasing the spin speed will extract more water, decrease drying time and conserve

energy. Decreasing the spin speed will reduce wrinkling.

Select low spin speed (on select models) to gently spin items that should be line dried.

Use no spin to omit the final spin at the end of the cycle. The load will be very wet. Remove items from the wash drum to drip dry or select a spin only cycle to remove excess water at a more convenient time.

6.10 Cycle options

The default options for each cycle will automatically be chosen when a cycle is selected. To protect fabrics, not all options are available for all cycles. If an option is not available for a cycle, the indicator will not light.

Selecting options

Press the **Options** button to scroll through the options until the indicator light for the desired option flashes, then press **Select**. The indicator light will illuminate when the option has been selected. Follow the same steps to deselect an option. The indicator light will turn off when the option is deselected.



NOTE

If changes to the settings or options are attempted after the cycle starts, you will hear several beeps when the buttons are pressed. To change settings or options, press **Start/Pause**, make the new selections and press **Start/Pause** again.

All settings or options selected for the cycle, except **Sanitize** (on select models), **Perfect Steam™** (on select models), and stain treatment options, will be remembered and recalled each time that cycle is selected in the future. To return to factory settings, press and hold **Soil** and **Options** buttons at the same time and hold for 3 sec until the confirmation signal sounds. To prevent unintentional and accidental exposure of delicate material to excess heat or unexpected steam, the **Sanitize**, **Perfect Steam™** and all stain

treatment options will need to be reselected each time.

Stain treatment options (on select models)




Your washer is equipped with powerful stain treatment tools. Depending on your model, use one of the options below to deal with tough stains on your garments.

StainTreat (400 series washer)

Use this option to add a short initial wash period to available cycles using the stain treatment additives in the stain soak/treat compartment. After the stain wash phase, the load will automatically advance to the main wash cycle.

StainTreat II (500 series washer)

Use this option when available and rotate the cycle selector to rotate through the stain types below. Stain treatment and main detergent will recirculate in the agitating load for approximately 20 min and then the washer will advance to the main wash cycle.

-  **Any Stain** - recirculating wash solution will be heated by boost heater.
-  **Blood** - recirculating wash solution will not be heated by boost heater to prevent setting blood stains.
-  **Chocolate** - stain wash time is extended with additional heating by boost heater.

StainSoak (600/700 series washer)

Similar to **StainTreat II** above with the added feature of detergent/treatment mixing with **SmartBoost** pump technology before the stain washing phase.

Perfect Steam™ (on select models)

Use this option to add approximately 20 min of tumbling in steam.

NOTE

Steam may not necessarily be visible inside drum during a steam wash cycle. Steam may not be present during entire steam wash cycle.

IMPORTANT

If steam is selected, rinse temperatures will be elevated. If the wash cycle is paused or cancelled during a steam cycle, the door will remain locked until it cools. You may manually perform a rinse & spin cycle to cool the internal temperature sooner. During a steam cycle, steam exiting from the rear vent of the washer is normal and not cause for alarm.

Control options

Control Lock

To lock the controls between cycles, scroll to the control lock option and press **Select**. The control lock icon will show on the LED display. To unlock the controls scroll to the control lock option again and press **Select**. Use this feature to reduce the likelihood of accidental operation by children. Washer cycles will not run when control lock is activated.

Delay Time


Use this option to delay the start of the washing cycle from 30 min to 12 h.

To turn on this option, press **options** to scroll to the **Delay Time** and press **Select**. Use the **Cycles** button (300/400 models) or turn the cycle selector (500/600 models) to select the desired delay time and press **Start**. The delay time icon will illuminate on the LED display to indicate the delay time option is activated. The time will begin counting down on the LED display once the washer **Start/Pause** button has been pressed.

Chime

A signal will sound at the end of each cycle (and periodically during extended refresh) if option is activated. To mute or unmute the chime, press and hold **Select** button for 3 sec.



 hold 'select' 3 s to mute/unmute

Wash cycle options

Extra Rinse (on select models)

Use this option when additional rinsing is desired to remove excess dirt and detergent. It is recommended for heavily soiled loads or if household members have sensitive skin.

Pure Rinse (on select models)

Use this option to reduce detergent residues and fragrances that can irritate skin which rinses cleaner than the extra rinse cycle.

Wrinkle release (on select models)

After the final spin, the washer will perform a “dry” agitation to loosen the garments from the side of the drum.

Extended Refresh (on select models)

Use this option if you will be unable to remove the load right after the cycle is complete. The washer recognizes the load has sat too long and will do a rinse and spin to keep the load fresh for up to 12 hours. When you are ready to remove the load during the **Extended Refresh** segment, you must press **Cancel** to end the cycle and open the door.

Cold Sanitize (on select models)

Select Cold Sanitize when using Lysol® Laundry Sanitizer / Lysol® Laundry Disinfectant⁷⁾. This option is optimized to use the sanitizer/disinfectant according to the label instructions. Refer to dosage instructions on the Lysol® Laundry Sanitizer / Lysol® Laundry Disinfectant bottle⁷⁾.

The liquid sanitizer/disinfectant must be dispensed in the corresponding compartment of the Adaptive Dispenser™. Do not use powder sanitizer and do not mix with bleach in the Adaptive Dispenser™.

For models not equipped with the Cold Sanitize option, manually follow the sanitizer/disinfectant instructions. Check fabric care labels to prevent damage.

PODS® (on select models)


Use this option when using a detergent pack in a model equipped with a **PODS®**⁶⁾ button (on select dispenser only). This option will divert the flow of water to the detergent pack compartment optimizing the detergent pack performance.

6.11 Other features

LED display

The estimated total cycle time will be displayed when the cycle is selected. The time may increase if water pressure is low, oversudsing occurs or the load becomes unbalanced. The approximate time remaining will be displayed during the cycle. **The eco, control lock, close door, mute (some models),** and delay time will also appear on this LED display.

Icons may vary according to model.

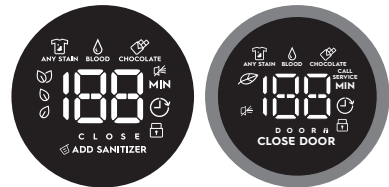

Eco indicator

The eco symbol will light up on the LED display to indicate that the selected combination of temperature, spin speed and options are eco friendly. For the 700 series, the eco indicator has 3 levels. Combinations with higher numbers of leaves are more eco friendly.

Oversuds protection

A situation where oversudsing has been detected by the washer will result in the washer requiring additional rinses until the suds have been cleared. Each extra rinse the washer performs to clear the suds will add approximately 5 min to the cycle duration. The LED will display “SU” followed by “dS” and then the remaining

7) Lysol® is a registered trademark of Reckitt Benckiser LLC, Parsippany NJ, used under license by Electrolux.

6) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

cycle time (0 min) for 60 sec and then repeat. Press **Cancel** to turn off the alert message. The washer will continue to perform rinse cycles until suds are removed.



Reversed hose detection

If condition is detected where the inlet hoses have been installed incorrectly (hot supply to cold inlet and cold supply to hot inlet), the washer will alert you. The LED will display "HO" followed by "SE" and then the remaining cycle time (0 min) for 60 sec and then repeat. Acknowledge the reversed hose condition by pressing the **Cancel** button. Shut off each water supply valve and attach each supply hose to the correct inlet connection on the washer.



Drum light (on select models)

The drum light will come on whenever the door is opened to illuminate the drum during loading and unloading. Closing the door turns off the light. The drum light will automatically turn off if the door is left open more than 3 min.

Reversible door (on select models)

Your washer may be equipped with a reversible door. The door can be hinged on the right or left side.

Trapped item detection

If an item is detected to be trapped between the door and the door gasket, the washer will pause the cycle and play an

alert chime. The LED will display a loop of "CLEAr door" as shown below until the **Cancel** button is pressed. Press the **Cancel** button to unlock the door and remove the trapped item, then close the door and restart the cycle.




Door stand ventilation

Help prevent odor buildup and reduce humidity between washes by utilizing your washer's door stand ventilation feature. Open the door, locate the stand below the door latch and rotate the stand counterclockwise to unlock it.

If unable to rotate the stand by hand, a coin or flat blade screw driver can be used.

The stand is spring loaded and will extend. Rotate it clockwise to lock in the extended position.

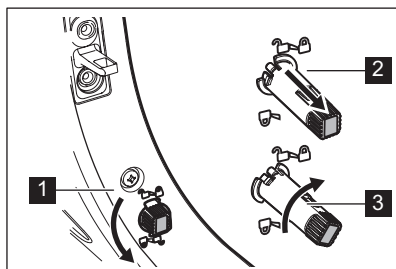

To disengage the stand, rotate to unlock, push the stand in and rotate to lock position.

NOTE

If door stand will not turn to locked position, fully turn it to unlock position and try to lock again.

7. OPERATING INSTRUCTIONS

7.1 Operating the washer

WARNING!

To reduce the risk of fire, electric shock or injury to persons, read the **Important Safety Instructions** in this User Manual before operating your washer.

WARNING!

RISK OF INJURY

Do not wash water resistant and water repellent clothing or other materials. Failure to follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

CAUTION!

ENTRAPMENT and TIP-OVER HAZARD


Do not leave the door open if there are small children or pets present. An open door could entice children to hang on the door or crawl inside the washer. If there are no small children present, you may leave the door ajar to prevent odor build up.

Steps	Tips	Important
1. Sort laundry into loads that can be washed together.	Sort by recommended cycle and water temperature. Separate white, light, and colorfast items from dark and non-colorfast items. Separate items that shed lint from items that attract lint. Casual, synthetic, knit, and corduroy items will pick up lint from towels, rugs, and bedspreads. Separate heavily soiled items from lightly soiled items. Separate lacy, sheer, loosely knit, or delicate items from durable items.	Do not machine wash items containing fiberglass. Small particles of fiberglass left in drum may transfer to fabrics in other loads and cause skin irritation and/or damage to fabrics. Do not wash water resistant and water repellent type clothing or other materials.
2. Prepare items for washing.	Empty pockets. Brush off lint and dirt. Shake out rugs and beach towels. Close zippers, fasten hooks, button buttons, and tie strings/sashes. Remove non-washable trims and ornaments. Place delicate and small items (bras, hosiery, etc.) in a mesh bag (not included).	Mend rips and tears to prevent further damage during washing. Turn knit items inside out to prevent pilling.
3. Pretreat stains and heavy soil.	Refer to stain treatment function in Cycle options for your particular model or Stain Removal Guide for more information.	
4. Add laundry load to wash tub.	Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load. Washing single items is inefficient and may cause an out-of-balance load. Add 1 or 2 similar items to help balance load. Wash single heavy items (comforter, sleeping bag, etc.) separately. The washer can be fully loaded, but the items should not be tightly packed. The door should close easily.	Do not overload the washer. Do not wash water resistant and water repellent clothing or other materials.

Steps	Tips	Important
5. Add wash products to dispenser.	Water conditioners, detergent boosters and enzyme products may be added with detergent. Refer to Adding laundry products for detailed information on the use of the product dispensers and the use of various wash products (detergent, bleach, stain treatment, fabric softener, etc).	Follow manufacturer's instructions and recommendations when using wash products. Open and close the dispenser drawer slowly. Closing the drawer too quickly could result in early dispensing of the bleach or fabric softener.
6. Select the cycle and settings for the load.	Refer to Cycle selection, Cycle settings and Cycle options for detailed descriptions of cycle controls. Refer to Settings charts to determine which settings are available for each cycle. To provide the best care, not every setting or option is available with every cycle. If a setting or option is not available for the cycle selected, the indicator will not light.	Follow fabric care label instructions on items to be washed. Make sure that the PODS® option is selected when using models that have a separate detergent pack compartment. Refer to Adding laundry products, Adding laundry detergent to the Adaptive Dispenser™.
7. Start the washer.	Close the door and press Start/Pause . The washer will not operate with the door open. "Close door" will be displayed as a reminder to close the door. To add a forgotten item to the washer any time during the wash portion of the cycle, press Start/Pause . When the door unlocks, open the door, add the item, close the door and press Start/Pause to resume cycle. To change settings or options after the cycle has begun, press Start/Pause , change the settings, and then press Start/Pause . If the cycle is not paused first, the unit will emit several beeps when the buttons are pressed but no changes to the cycle will be applied. To change the cycle once the cycle has begun, press Cancel to cancel the cycle, select the new cycle, and press Start/Pause to begin the new cycle. Changing a cycle selection without cancelling the current will not change the cycle. To cancel a cycle, press Cancel . A signal will sound at the end of the cycle if the chime option is not set to mute.	Do not force door open. As a safety measure, the door will automatically lock during the entire wash cycle. Pause or cancel the wash load to unlock the door. If the cycle is interrupted during spin, the door lock will not release until the tub has stopped spinning. If the water level is above the bottom of the door opening/flexible door gasket, the lock will not release.
8. Remove items from washer when cycle has ended.	Remove items when the cycle ends and place in dryer, line dry or dry flat as directed on the fabric care label.	Excess wrinkling, color transfer or odors may develop in items left in the washer after the cycle has ended.


7.2 Laundry product dispensers

Three compartment dispenser (300 Series)

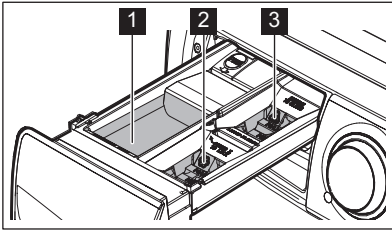

- 1 Detergent - liquid or powder
- 2 Liquid fabric softener
- 3 Liquid bleach


Adaptive Dispenser™ (400, 500, 600 and 700 Series)

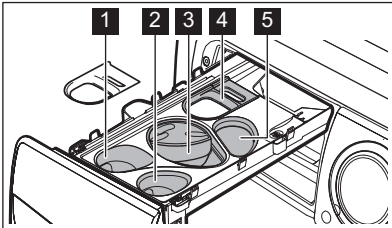


- 1 Liquid bleach or sanitizer ⁸⁾
- 2 Liquid fabric softener
- 3 Detergent - liquid or powder
- 4 Detergent pack compartment (max. 2 packs per load)
- 5 StainSoak / StainTreat

Detergent, stain treatment (on select models), liquid chlorine bleach and liquid fabric softener will be dispensed at the proper times in the cycle.

NOTE

Use a low-sudsing, high efficiency detergent to prevent oversudsing in front load washers. Look for this symbol on the detergent label: 

Open and close the dispenser drawer slowly. Closing the drawer too quickly could result in early dispensing of the bleach or fabric softener.

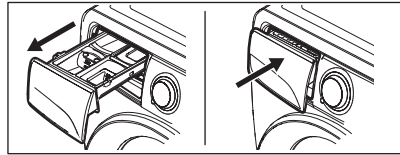

7.3 Adding laundry products

Adding laundry detergent to the three compartment dispenser

Liquid or powder detergent


Use the cap or scoop provided by the detergent to add recommended amount of detergent.

Amount of detergent may need to be adjusted for water temperature, water hardness, load size, and soil level. Follow manufacturer's instruction.

In a three compartment dispenser use either liquid or powder detergent. Do not mix both.

IMPORTANT

Do not mix liquids and powders.
Do not exceed MAX fill line.

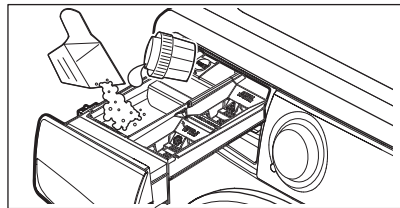

IMPORTANT

Do not add detergent packs into the three compartment dispenser.
Detergent packs should be added directly into the drum.


Adding laundry detergent to the Adaptive Dispenser™

Liquid detergent

Use the cap or scoop provided by the detergent to add recommended amount of detergent to the detergent compartment. Pour directly into the detergent cup, not over the blue cover.

8) Sanitizer available only on 700 series.

Amount of detergent may need to be adjusted for water temperature, water hardness, and load size. Follow manufacturers instructions.

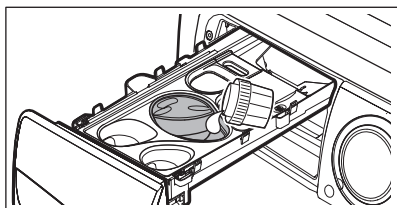


▶ IMPORTANT

Pour liquid into the liquid detergent cup. Do not pour over the blue cover. Do not exceed MAX fill line.

Powder detergent

Remove the liquid detergent cup and blue cover before adding powder detergent.

Add powder detergent directly to the powder detergent compartment.

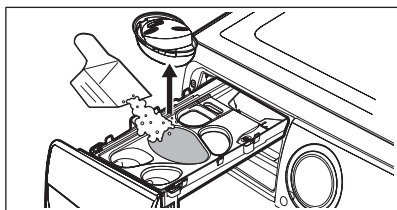

▶ IMPORTANT

Save the liquid detergent cup and blue cover for future use. Do not discard it while you are using powder detergent. Do not exceed MAX fill line.

Detergent pack

For 300 series models

Add detergent pack directly to the empty drum before placing laundry into the unit.

Do not place detergent packs directly into the detergent drawer. The gel coating may cause the detergent drawer to become clogged.

For 400, 500, 600 and 700 series models

Add the recommended quantity of high efficiency detergent packs to the detergent pack compartment in the dispenser.

Do not place more than two packs into the dispenser.

When using the fast wash cycle, only one detergent pack should be used.

⚠ CAUTION!

Keep detergent packs away from children.


▶ IMPORTANT

PODS®

When using the detergent pack compartment, make sure to select the **PODS®⁶⁾** option before starting the load.

Once the **PODS®** option has been chosen, the washer will retain the **PODS®** setting until manually changed.

The washer will always use a small amount of hot water to dissolve the pack when the **PODS®** option has been selected.

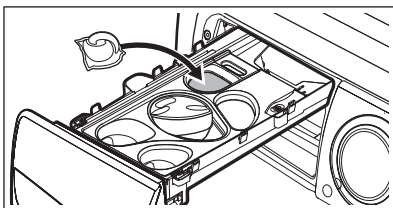

⚡ NOTE

From time to time you may see water in the dispenser. This is part of the normal operation of the washer.

Adding other wash products

Color-safe bleach, water conditioner, detergent booster and enzyme products may be added with detergent.

Put liquid products in the **Main Wash - liquid detergent** compartment or powder

⁶⁾ PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

products in the **Main Wash - powder detergent** compartment.

IMPORTANT

Do not mix liquids and powders.

Stain treatment (on select models)


For heavily soiled or stained loads, select the stain option (StainTreat, StainTreat II or StainSoak) and add the recommended amount of detergent or stain treatment to stain soak / treat compartment (on select models).

Refer to Cycle options for information about stain options for your model. Refer to Stain Removal Guide for additional suggestions.

IMPORTANT

Use powder detergent in the stain soak / stain treat compartment for the 400, 500, 600 and 700 Series models with Adaptive Dispenser™.

Liquid chlorine bleach

If desired, add liquid chlorine bleach to the compartment labeled Liquid Bleach and marked with this symbol: 

Do not fill above the MAX fill line.

Add color-safe bleach with detergent.

IMPORTANT

To prevent fabric damage, do not overfill the liquid bleach compartment or pour bleach directly onto the load.

Liquid sanitizer


Whenever using the option **Cold Sanitize**, add liquid sanitizer to the compartment labeled **Sanitizer or Liquid bleach**.

Do not fill above the MAX fill line.

IMPORTANT

To prevent fabric damage and inefficient sanitization, do not overfill the Sanitizer or Liquid bleach compartment or pour sanitizer directly onto the load.

Liquid fabric softener

If desired, pour the recommended amount of liquid fabric softener into the compartment labeled **Fabric softener** and marked with this symbol: 

Do not fill above the MAX fill line.


NOTE

To prevent staining, do not overfill fabric softener compartment or pour liquid fabric softener directly on wash load.

Use of a fabric softener-dispensing ball is not recommended in front load washers.

8. NORMAL OPERATING SOUNDS

You may or may not hear the following sounds from your new washer:

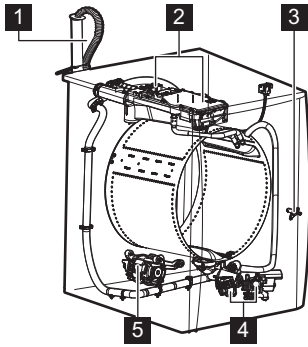

- 1 Drain hose.** The washer has a flexible drain hose to carry water from the washer to the stand pipe of your home. You will hear water flowing into your stand pipe. This is a normal part of the operation of the washer.
- 2 Water valves / dispenser.** As water enters the dispenser system, it is common to hear a water flowing sound. This normal sound will vary slightly based on the water pressure in your home.
- 3 Door lock.** Your washer is equipped with a door lock with an electric solenoid. There will be a clicking

sound as the washer door is locked or unlocked.

- 4 Drain / recirculation pumps.** Your washer is equipped with multiple high velocity system pumps. It is normal to hear humming and gurgling sounds as water is either pumped from the washer during the drain phase or recirculated during the prewash and wash phases. Both of these sounds are normal and indicate that your pump is functioning correctly.
- 5 High speed motor.** A powerful motor is used to drive the drum to high spin speeds to extract water from your load. You will hear a sound associated with these higher spin speeds. This sound is normal and will vary slightly as the spin speed varies with load size and cycle selected.

⚠ CAUTION!

Abnormal, on-going sounds may be an indication of a pending washer failure and should be investigated by a qualified technician. Refer to noise section of the Troubleshooting chapter.

9. STAIN REMOVAL GUIDE

9.1 Stain removal procedures

To reduce the risk of fire or serious injury to persons or property, comply with the basic warnings listed below:

- Read and comply with all instructions on stain removal products.
 - Keep stain removal products in their original labeled containers and out of children's reach.
 - Thoroughly wash any utensils used.
 - Do not combine stain removal products, especially ammonia and chlorine bleach. Dangerous fumes can result.
 - Never wash items which have been previously cleaned in, washed in, soaked in or spotted with gasoline, dry cleaning solvents or other flammable or explosive substances because they give off vapors that could ignite or explode.
- Never use highly flammable solvents, such as gasoline, inside the home. Vapors can explode on contact with flames or sparks.

For successful stain removal:

- Remove stains promptly.
- Determine the kind of stain, then follow the recommended treatment in the stain removal chart on the next page.
- To pretreat stains, use a stain treatment product, liquid detergent, or a paste made from powder detergent and water.
- Use cold water on unknown stains as hot water can set stains.
- Consult care label instructions for treatments to avoid on specific fabrics.
- Check for colorfastness by testing stain remover products on an inside seam.
- Rinse and wash items after stain removal.



WARNING!

HARMFUL VAPOR HAZARD

Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acids such as vinegar, or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.



9.2 Stain removal suggestions

Stain	Treatment
Adhesive tape, gum, rubber cement	Apply ice. Scrape off excess. Place stain down on paper towels. Saturate with prewash stain remover or nonflammable dry cleaning fluid.
Baby formula, dairy products, egg	Use product containing enzymes to pretreat or soak stains. Soak for 30 min or more. Wash.
Beverages (coffee, tea, soda, juice, alcoholic beverages)	Pretreat stain. Wash using cold water and bleach safe for fabric.
Blood	Rinse with cold water. Rub with bar soap. Or, pretreat or soak with product containing enzymes. Wash using bleach safe for fabric.
Candle wax, crayon	Scrape off surface wax. Place stain face down between paper towels. Press with warm iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with prewash stain remover or nonflammable dry cleaning fluid. Hand wash to remove solvent. Wash using bleach safe for fabric.
Chocolate	Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric.
Collar or cuff soil, cosmetics	Pretreat with prewash stain remover or rub with bar soap.
Dye transfer on white fabric	Use packaged color remover. Wash using bleach safe for fabric.
Grass	Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric.
Grease, oil, tar (butter, fats, salad dressing, cooking oils, car grease, motor oils)	Scrape residue from fabric. Pretreat. Wash using hottest water safe for fabric. For heavy stains and tar, apply nonflammable dry cleaning fluid to back of stain. Replace towels under stain frequently. Rinse thoroughly. Wash using hottest water safe for fabric.
Ink	Some inks may be impossible to remove. Washing may set some inks. Use prewash stain remover, denatured alcohol or nonflammable dry cleaning fluid.

Stain	Treatment
Mildew, scorch	Wash with chlorine bleach if safe for fabric or soak in oxygen bleach and hot water before washing. Badly mildewed fabrics may be permanently damaged.
Mud	Brush off dry mud. Pretreat or soak with product containing enzymes.
Mustard, tomato	Pretreat with prewash stain remover. Wash using bleach safe for fabric.
Nail polish	May be impossible to remove. Place stain face down on paper towels. Apply nail polish remover to back of stain. Repeat, replacing paper towels frequently. Do not use on acetate fabrics.
Paint, varnish	Water based: Rinse fabric in cool water while stain is wet. Wash. Once paint is dry, it can't be removed. Oil based and varnish: Use solvent recommended on label. Rinse thoroughly before washing.
Perspiration	Use prewash stain remover or rub with bar soap. Rinse. Wash using non chlorine bleach in hottest water safe for fabric.
Rust, brown or yellow discoloration	Use rust remover safe for fabric. Do not use chlorine bleach because it may intensify discoloration.
Shoe polish	Liquid: Pretreat with a paste of powder detergent and water. Paste: Scrape residue from fabric. Pretreat with prewash stain remover or nonflammable dry cleaning fluid. Rinse. Rub detergent into dampened area. Wash using bleach safe for fabric.
Urine, vomit, mucus, feces	Pretreat or soak in product containing enzymes. Wash using bleach safe for fabric.
Wine	Pretreat or soak in cold water. Wash in hottest water and bleach safe for fabric

10. CARE AND CLEANING

WARNING!

Refer to Safety chapters.

10.1 Inside routine cleaning (preventative)

To help prevent odors or humidity accumulation leave the door open with the door stand ventilation feature (on select models) for a few hours after use or whenever the washer is not in use.

CAUTION!

ENTRAPMENT and TIP-OVER HAZARD

Do not leave the door open if there are small children or pets present. An open door could entice children to hang on the door or crawl inside the washer. If there are no small children present, you may leave the door ajar to prevent odor build up.

To refresh or clean inside of washer

To clean and freshen the washer, perform the clean washer cycle. For best results perform the cycle once a month.

NOTE

Every 50 cycles, your washer will remind you to perform the clean washer cycle by illuminating the **Clean Washer** cycle indicator.

To begin the cycle, select the **Clean Washer** cycle. If installed, remove the liquid detergent cup from the dispenser. Remove all items from wash drum before filling the detergent compartment with one (1) cup of liquid chlorine bleach or one (1) pouch of Tide™⁹ Washing Machine Cleaner. Do not use both. Press **Start/Pause** to begin.

IMPORTANT

Items left in washer while performing the clean washer cycle will cause a severe out-of-balance situation that could damage the washing machine.

For best results

Immediately follow up with Rinse & Spin cycle. Select max spin with no detergent or bleach to help clear any residual bleach left after the clean washer cycle.

WARNING!

HARMFUL VAPOR HAZARD

Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acids such as vinegar, or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.


To clean the dispenser drawer

NOTE


Detergent and fabric softener may build up in the dispenser drawer. Residue should be removed once or twice a month.

Cleaning the three compartment dispenser


1. Remove the drawer by pulling the drawer out until it stops.
2. Reach back into the left rear corner of the drawer cavity and press down firmly on the lock tab. Pull out the drawer.

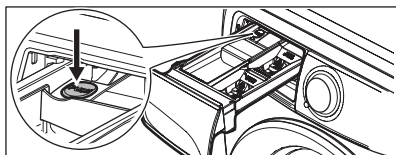

3. Remove all inserts from the drawers.

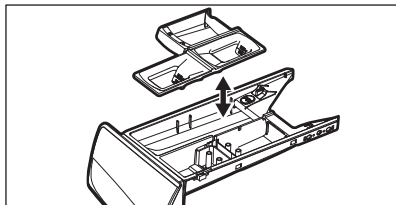

4. Rinse the drawer and inserts with hot tap water to remove traces of accumulated powders and liquids. Large amounts of fabric softener residue may indicate improper dilution or more frequent cleaning is required.
5. To clean the drawer opening, use a small brush to clean the recess. Remove all residue from the upper and lower parts of the recess.

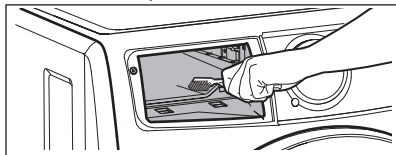


6. Replace the insert by pressing it in place until you hear a slight click.
7. Return the dispenser drawer to the unit.

Cleaning Adaptive Dispenser™


1. Remove the drawer by pulling the dispenser out until it stops.
2. Reach back into the right rear corner of the dispenser cavity and press

⁹) Tide is a trademark of The Procter & Gamble Company, Cincinnati, Ohio.

down firmly on the lock tab. Pull out the dispenser drawer.

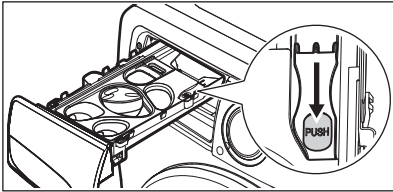

3. Remove the detergent cup and top cover from the dispenser drawer.
4. Remove the bottom cover from the dispenser drawer.
 - a. First, pull the two lock tabs at the rear of the dispenser drawer to unlatch the back cover.
 - b. Then, gently pull back the two clips on the front of the bottom cover to fully release it from the dispenser drawer.

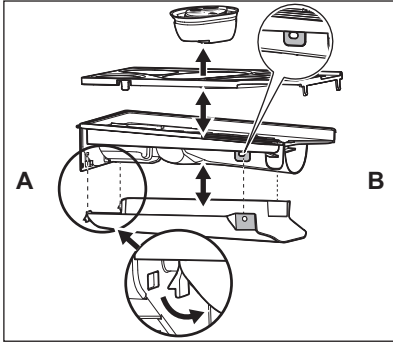

A. Front
B. Rear

5. Rinse the dispenser drawer, covers, and detergent cup with hot tap water to remove traces of accumulated powders and liquids. Large amounts of fabric softener residue may indicate improper dilution or more frequent cleaning is required.
6. To clean the dispenser drawer opening, use a small brush to clean the recess. Remove all residue from the upper and lower parts of the recess.
7. Reassemble dispenser drawer and check to ensure that all pieces are securely in place.
8. Return the dispenser drawer to the unit.

10.2 Inside cleaning (aggressive)

In cases where clean washer cycle along with care and cleaning of rubber gasket folds isn't done, and severe odor or residue buildup have developed, follow the below cleaning procedure to help alleviate the problem.

Cleaning procedure-washer drum

Ensure the wash tub is empty. Open the detergent drawer and pour eight cups of bleach into the Main Wash detergent compartment. Select **Clean Washer** cycle as described previously in Inside Routine Cleaning (Preventative).

Upon cycle completion inspect the interior of the washer to see if the odor/residue has been eliminated. If any additional cleaning is required, repeat the above procedure.

This may take several cycles depending on the severity of the odor/residue. You may observe some remaining discoloration due to the long term effects of this residue.

For especially contaminated areas visible inside the drum (including the front rubber seal), these areas might be more effectively cleaned by spraying a bleach cleaner on a scrub brush, soft sponge, or towel and scrubbing.

IMPORTANT

Always wear rubber or latex gloves and protect floor and clothing from damage.

If odor is still left after bleach cycle(s) and bleach cleaner, open the detergent drawer and pour one (1) pouch of Tide™ Washing Machine Cleaner in detergent drawer. Select **Clean Washer** cycle as above and start the washer.


For best results

Immediately follow up with Rinse & Spin cycle. Select max spin with no detergent or bleach to help clear any residual bleach left after the clean washer cycle.


IMPORTANT

Refer to Inside routine cleaning for future cleaning maintenance which is necessary to avoid repeating issues.

Three Compartment Preventative Cleaning

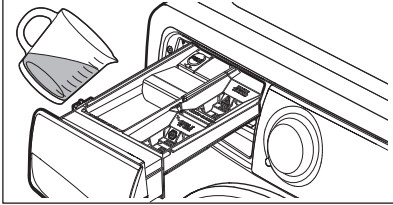

Adaptive Dispenser™ Preventative Cleaning

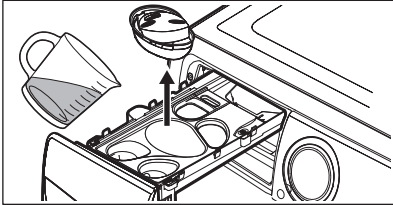

WARNING!

HARMFUL VAPOR HAZARD

Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acids such as vinegar, or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.

10.3 Outside routine cleaning

- When washing is completed, wipe top and sides of washer with a damp cloth.
- Clean the cabinet with mild soap and water. Never use harsh, gritty or abrasive cleansers.
- If the cabinet becomes stained, clean with diluted chlorine bleach (1 part bleach to 8 parts water). Rinse several times with clear water.
- Remove glue residue from tape or labels with a mixture of warm water and mild detergent. Or, touch residue with the sticky side of tape.
- When cleaning chrome parts, it is best to use only a damp cloth.

- Before moving the washer, place a strip of cardboard or thin fiberboard under the front leveling legs to prevent damage to the floor.

IMPORTANT

Do not store or place laundry products on top of washer at any time. They can damage the finish or controls. It is recommended to keep laundry products in the storage drawer between cycles if installed on a pedestal.



10.4 Winterizing instructions

1. Turn off water supply faucets.
2. Disconnect hoses from water supply and drain water from hoses. Vacuum out each water supply inlet with a waterproof utility vac to ensure water valves are completely drained. Damage will occur if water in water inlet valves are allowed to freeze.
3. Plug electrical cord into a properly grounded electrical outlet.
4. Add 1 gallon (3.8 L) nontoxic recreational vehicle (RV) antifreeze to empty wash drum. Close door.
5. Select any cycle. Press **Start/Pause** and let the washer drain for 1 min to drain out all the water. Not all of the RV antifreeze will be expelled.
6. Press **Cancel**, unplug electrical power cord, dry off drum interior and close door.
7. Remove dispenser drawer. Drain any water in compartments and dry compartments. Replace drawer.
8. Store washer in an upright position.
9. To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load.

IMPORTANT

If the washer is stored in an area where freezing can occur or moved in freezing temperatures, follow these winterizing instructions to prevent damage to the washer:



Follow winterizing instructions for cold weather storage and care.



10.5 Water inlet hose inspection

Periodically inspect all water inlet hoses for water leaks, wear, cuts, corrosion and bulges. Replace all hoses, if any sign of the above is visible.

All hoses should be replaced every 5 years to reduce the risk of hose failures. When replacing hoses, refer to the Installation sections of this User Manual for proper installation instructions.

Do not overtighten or cross thread the fittings. Do not allow the hose to rub against sharp objects. Always ensure the hose fitting rubber gasket is installed and free from water leaks when water pressure is applied.



Rubber washers (**A**) must be present. Replace hoses every 5 years.

10.6 Instructions for limited use, vacation and away from home

CAUTION!

Your washer should be operated only when you are home. Water leakage is a safety issue and can cause personal injury or property damage. If you are away from home or not using your washer for extended periods of time, follow these steps:

1. Turn off the water supply to washer to avoid water leaks due to water

pressure surges and unforeseen occurrences in the water supply.

2. Disconnect or unplug the electrical power to the washer.
3. Remove excess water from the dispenser, interior door and tub and perform the Care and Cleaning steps.

10.7 Reconnecting water supply and electrical

IMPORTANT

When reinstalling the washer after disconnecting the water supply lines and electrical power, please follow the steps below:

1. Review the Installation section of this manual to ensure the appliance is level and the water and electrical power supply is properly connected.
2. Ensure the water lines are flushed of debris, prior to connecting the water lines to the washer inlet.
3. Check for water leaks and replace supply hoses if needed.

CAUTION!

Damaged or improperly installed water lines can cause the water lines or connections to leak. Water leakage is a safety issue and can cause personal injury or property damage.

WARNING!

Improper grounding of the washer may cause serious injury or death. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.

WARNING!

Do not, under any circumstances, cut, remove, or bypass the grounding prong (**A**). Always use the power cord with 3- prong grounded plug and grounding type wall receptacle.



11. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

11.1 Common washing inquiries

Many washing problems involve poor soil and stain removal, residues of lint and scum, and fabric damage. For satisfactory washing results, follow these suggestions provided by The Soap and Detergent Association.

Problem	Possible causes	Solutions	Preventive measures
Blue stains	Undiluted liquid detergent or fabric softener dispensed directly onto fabric.	If caused by detergent, mix 1 cup (240 ml) white vinegar with 1 quart (.95 L) water in plastic container. Soak 1 h. Rinse. If caused by fabric softener, rub stains with bar soap. Wash.	Avoid overfilling detergent and fabric softener compartments of dispenser.
Discoloration, graying	Not enough detergent. Wash water temperature too low. Incorrect sorting.	Rewash with correct amount of detergent and hottest water safe for fabric. Add bleach safe for fabric.	Sort items by soil level and color. Use correct amount of detergent, hottest water and bleach safe for fabric.
Greasy, oily stains	Not enough detergent. Undiluted liquid fabric softener poured directly on fabric.	Treat with prewash stain remover or liquid detergent. Increase detergent and water temperature. Rewash. Rub fabric softener stains with bar soap.	Use correct amount of detergent and hottest water safe for fabric. Do not pour liquid fabric softener directly on fabric.
Holes, tears, or snags	Incorrect use of chlorine bleach. Unfastened zippers, hooks, buckles. Rips, tears and broken threads. Overloading washer. Degradation of fabric.	May be irreversible if rips, tears and seams cannot be mended.	Never pour chlorine bleach directly on fabric. Check condition of items before washing.
Lint	Incorrect sorting. Tissues left in pocket. Overloading washer. Not enough detergent. Undissolved detergent has left a residue resembling lint. Static cling is attracting lint. Load washed too long.	Reduce load size. Rewash using correct water temperature, water level, and amount of detergent. Add nonprecipitating water conditioner to wash water to remove detergent residue. Add liquid fabric softener to final rinse. Dry load in dryer. Remove lint with lint brush or roller.	Refer to Operating Instructions. Do not overload washer. Use correct temperature and amount of detergent, water and wash time.

Problem	Possible causes	Solutions	Preventive measures
Pilling (Fibers ball up and cling to fabric.)	Pilling is normal with synthetic and permanent press fabrics. This is due to abrasion from normal wear.	Use a lint brush or shaver to remove pills.	Use fabric softener in washer to lubricate fibers. When ironing, use spray starch or fabric finish on collars and cuffs. Turn items inside out to reduce abrasion.
Residue or powder on dark items; Stiff, harsh fabrics.	Undissolved detergent. Some granular detergents can combine with hard water minerals to form a residue. Overloading washer.	Rewash load.	Increase water temperature using hottest water safe for fabric. Do not overload washer. Use liquid detergent or non-precipitating water conditioner with powder detergent.
Wrinkling	Overloading washer. Incorrect wash cycle for wash load.	Reduce load size. Rinse in cold water with liquid fabric softener using the casual or delicate cycle.	Do not overload washer. Remove items from washer as soon as cycle is completed. Use liquid fabric softener.
Yellow buildup of body soil on synthetic fabrics	Agitation time too short. Wash water temperature too low. Not enough detergent.	Soak in detergent booster or product containing enzymes. Wash in hottest water safe for fabric using casual cycle. Increase detergent. Add bleach safe for fabric or treat with color remover.	Select correct cycle. Use correct amount of detergent. Wash synthetics frequently using hot or warm water.
Yellow or brown rust stains	Iron or manganese in water supply, water pipes, or water heater.	To restore discolored load of whites, use rust remover safe for fabric. Do not use chlorine bleach to remove rust stains. It may intensify discoloration.	Use nonprecipitating water softener. Before washing, run hot water for a few minutes to clear lines. Drain water heater occasionally. For an ongoing problem, install an iron filter in your water supply system.
Discoloration stains	Use of chlorine bleach as sanitizer for color fading clothes during the cold sanitize option.	May be irreversible.	Never pour chlorine bleach in the liquid sanitizer compartment when using the cold sanitize option with clothes that may fade.
Residue stain buildup in gasket	Moisture in washer. Use of non-HE detergent. Overdosing detergent. Overloading wash drum. Leaving a wet load set in washer. Cold water washes which may not completely dissolve and remove detergents.	Perform clean washer cycle. Scrub gasket with Comet™ Spray Gel Mildew Stain Remover - use brush to remove stains. Use only HE (high efficiency detergent) along with recommended dosage. Remove wash load immediately upon cycle completion.	Run dehumidifier in laundry room. Avoid overfilling detergent and fabric softener compartments of dispenser. Dry the inside of washer and gasket after every run.

Problem	Possible causes	Solutions	Preventive measures
Residue stain buildup in dispenser drawer or detergent pack not dissolved.	Moisture in the washer. Use of non-HE detergent. Overdosing detergent. Adding more than two detergent packs to detergent pack compartment. PODS® 1) option not selected when using detergent pack (on select models).	Remove and clean dispenser and inserts with combination of ¾ cup liquid chlorine bleach and one gallon hot water. Rinse well, and repeat if necessary. NOTE: Wear rubber of latex gloves. Protect floor and clothing from bleach damage. Use only HE (high efficiency detergent) along with recommended dosage.	Avoid overfilling detergent and fabric softener compartments of dispenser. Check that PODS® option is selected and detergent pack is placed in PODS® dispenser compartment when using detergent pack (on select models).
Water in fold of flexible gasket	Result of washing and part of normal operation.	At the end of each wash, dry inside of gasket fold with clean dry towel all around gasket.	
Odor	Moisture in the washer. Use of non-HE detergent. Overdosing detergent. Leaving a wet load remain in washer. Cold water washes which may not completely dissolve and remove detergents.	Perform clean washer cycle. At the end of each wash, dry inside of gasket fold with clean, dry towel all around gasket. Use only HE (high efficiency detergent) along with recommended dosage. Remove wash load immediately upon cycle completion. Pour one cup liquid chlorine bleach in standpipe; let remain a day and flush with water.	Utilize the door stand ventilation feature for a few hours after use or whenever washer is not in use.

1) PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

11.2 Before calling

Before calling for service, review this list. It may save both time and expense. The list includes common occurrences that are not the result of defective workmanship or materials in this washer.

Problem	Possible causes	Solutions
NOISE (Refer to "Normal Operating Sounds")		
High pitch "jet engine" noise	A certain amount of motor whine is normal during the spin cycle.	
Rattling and clanking noise	Foreign objects such as coins or safety pins may be in drum or pump. Belt buckles and metal fasteners are hitting wash drum.	Stop washer and check drum. If no objects are found, perform cycle with empty drum. If noise continues, item may be in pump. Call your authorized service technician. To prevent unnecessary noise and damage to drum, fasten fasteners and turn items inside out.

Problem	Possible causes	Solutions
Thumping sound	Heavy wash loads may produce a thumping sound. This is usually normal. If sound continues, washer is probably out of balance.	Stop washer and redistribute wash load.
Vibrating noise	Washer is not resting firmly on floor. Shipping bolts and foam block have not been removed during installation. Wash load unevenly distributed in drum.	Move washer so it rests firmly on floor. Adjust leveling legs. Refer to Leveling the washer. Refer to Installation sections of this manual for removing shipping bolts and foam block. Stop washer and rearrange wash load.

OPERATING

Residue left in drum	Heavily soiled items.	Wipe drum with a nonabrasive household cleanser, then rinse. Shake or brush excess dirt and sand from items before washing.
LED displays "dri"	Washer has been programmed to temporarily perform a repeating demo cycle.	Reset the unit back to factory default settings. <ol style="list-style-type: none"> 1. Press power to turn off unit. Press power again to turn unit on. Look for console to light up. 2. Wait at least 10 sec, then simultaneously press and hold Soil and Options buttons for 3 sec. 3. Lights will turn OFF and ON, indicating the unit has been reset to factory default.
Washer won't spin	Load is too small.	Add 1 or 2 similar items to help balance the load.
LED Displays "CLEAR door"	Washer has detected something trapped between the door and door gasket.	Press Cancel button to unlock the door, remove the trapped item, close the door and restart the cycle.
Washer does not start	Electrical power cord may not be plugged in or connection may be loose. House fuse blown, circuit breaker tripped, or a power outage has occurred. Action of pressing Start/Pause button on "touch screen" style console not recognized. Water supply faucets are not turned on. Motor is overheated. Washer motor will stop if overheated. Door may be open. Unit will not operate with door open. Light next to Start/Pause button is flashing indicating unit is paused.	Make sure plug fits tightly in wall outlet. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. If problem is a power outage, call local electric company. Press Start/Pause button with bare fingertip. Turn on water supply faucets. It will automatically restart after a cool down period of up to 30 min (if washer has not been manually turned off). Press Start/Pause button to continue the cycle.

WATER

Water collects in folds of the door gasket at the end of the cycle	This is a result of the washing action and is part of the normal operation of the washer.	Wipe and dry the gasket to remove water and any debris remaining in the gasket after use.
--	---	---

Problem	Possible causes	Solutions
Water collects in bleach and fabric softener compartments	This is a result of the siphoning action and is part of the normal operation of the washer.	Water may be removed by removing the dispenser drawer and draining water into the empty drum or sink. Refer to Care and Cleaning
Wash load too wet after spin	Washer is overloaded. Load is too small. Load is out of balance. Drain hose is kinked.	Do not overload washer. Refer to Operating Instructions Add 1 or 2 similar items to help balance load. Rearrange load to allow proper spinning. Straighten drain hose.
Water does not enter washer or it enters slowly	Water supply is not adequate in area. Water supply faucets are not completely open. Water is being used elsewhere in the house. Water pressure must be at least 30 psi (260 kPa). Water inlet hoses are kinked. Water inlet screens plugged.	Check another faucet in the house. Wait until water supply and pressure increase. Fully open hot and cold faucets. Avoid running water elsewhere while washer is filling. Straighten hoses. Remove hose from inlets and clean screens.
Warm or hot water is not hot enough	Hot water heater is set too low or is a distance from washer. Hot water is being used elsewhere in the house.	Measure hot water temperature at nearby faucet with candy or meat thermometer. Water temperature should be at least 120°F (49°C). Adjust water heater as necessary. Avoid using hot water elsewhere before or during washer use. There may not be enough hot water available for proper cleaning. If problem persists, your hot water system may be unable to support more than 1 use at a time.
Water in washer does not drain or drains slowly	Drain hose is kinked or clogged. Drain hose standpipe is too tall. Maximum standpipe height is 8 feet (2.4 m). House drain pipes are clogged.	Clean and straighten the drain hose. Reduce standpipe height to less than 8 feet (2.4 m). Refer to Pre-Installation Requirements Unclog drain pipes. Contact plumber if necessary.
Water leaks	Fill hose connection is loose at faucet or washer. Dispenser drawer not completely closed Water hoses have damage, cuts or corrosion.	Check and tighten hose connections. Install rubber sealing washers provided. Close dispenser drawer completely. Replace hoses.
Oversudsing	HE detergent is not being used. Too much detergent.	Run rinse cycle. Use a lowsudsing, high efficiency detergent. Run rinse cycle. Use less detergent in future loads.
Incorrect wash and rinse temperatures. The LED display will alert this condition with "HOSE" alarm	Hot and cold water hoses are connected to wrong supply faucets.	Connect hot water hose to hot water faucet and cold water hose to cold water faucet.
Water is entering washer but tub does not fill	Drain hose standpipe is too low. Standpipe must be a min of 23.6 inches (60 cm) high to prevent siphoning.	Increase standpipe height to at least 23.6 inches (60 cm). Refer to Installation sections of this manual.

12. LIMITED WARRANTY

For the applicable warranty period as set forth below, as measured from your original date of purchase, Electrolux will repair or replace any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

Warranty Periods:

- All parts - One year including labor. In addition, your appliance is covered by a one year, parts only, limited warranty. During the 2nd year from your original date of purchase, Electrolux will pay for parts needed for this appliance that have proven to be defective in materials or workmanship when your appliance is installed, used, and maintained in accordance with the provided instructions.
- Inner wash tub (washer) - Functional life of the product (excluding labor)
- Wash tub drive motor (washer), non-cosmetic defects - Ten years (excluding labor)

Exclusions

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Products used in a commercial setting.
6. Service calls which Do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the

appliance when it is shipped from the factory.

9. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
10. Pickup and delivery costs; your appliance is designed to be repaired in the home.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during transportation or installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. **CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR.** ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF

INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance

is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-877-435-3287

Electrolux Major Appliances

North America

10200 David Taylor Drive

Charlotte, NC 28262

Canada

1-800-265-8352

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada L5V 3E4

13. LIMITED WARRANTY

Your appliance is covered by a one year limited warranty. For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

Exclusions

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Food loss due to any refrigerator or freezer failures.
6. Products used in a commercial setting.

7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.

12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

**Disclaimer of implied warranties;
Limitation of remedies**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Consumer Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-877-435-3287

Electrolux Major Appliances

North America

10200 David Taylor Drive

Charlotte, NC 28262

Canada

1-800-265-8352

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada L5V 3E4







