


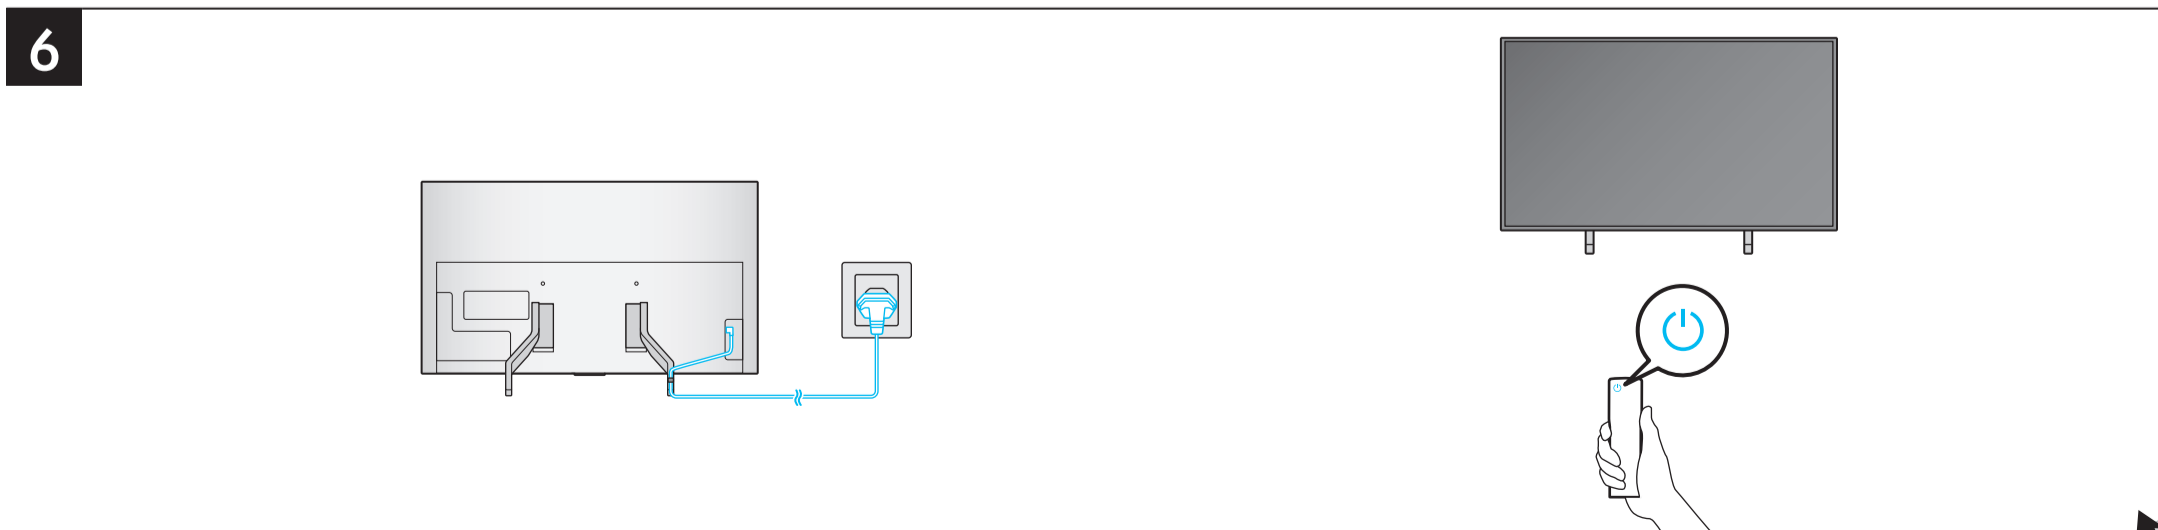
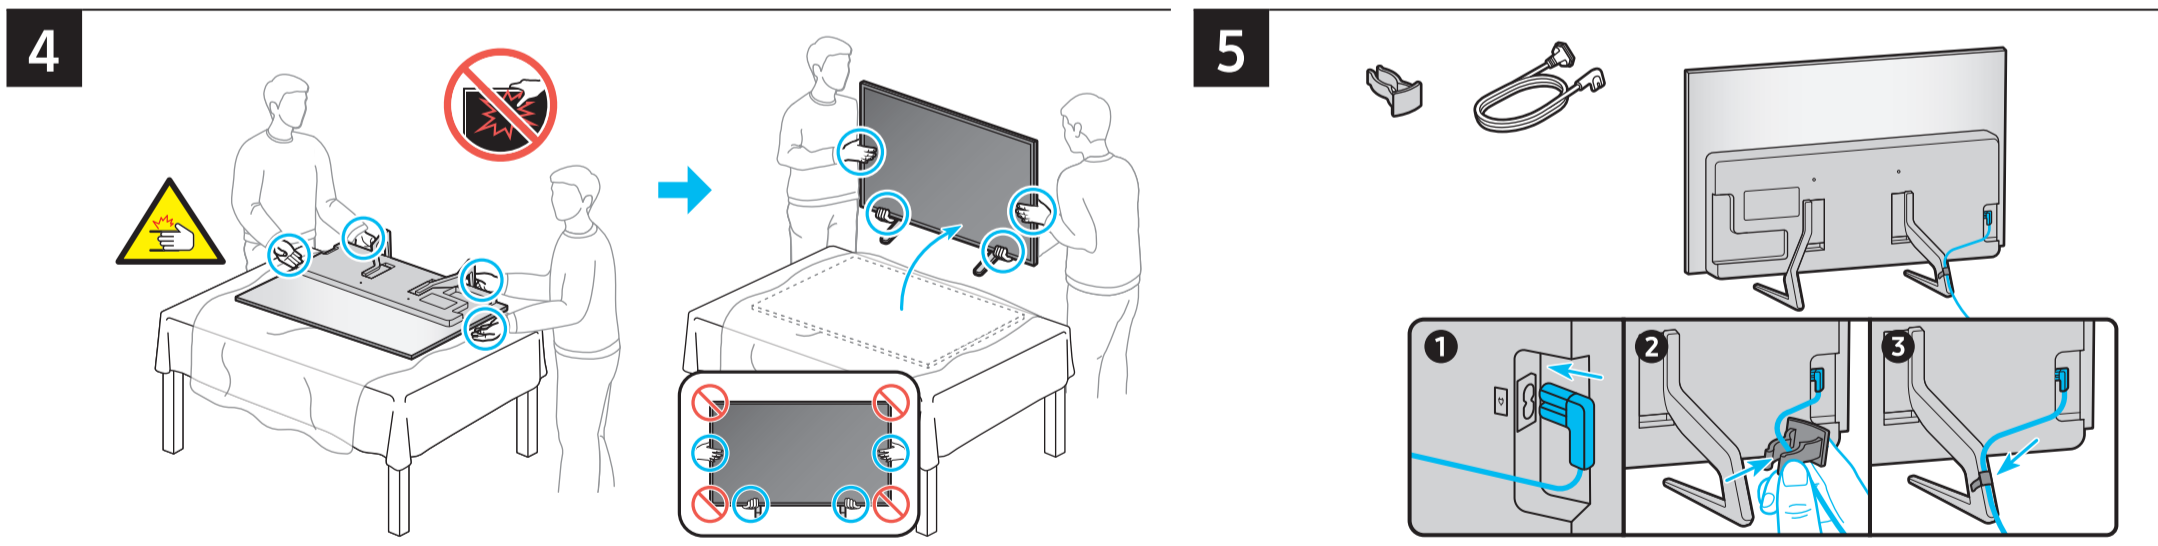
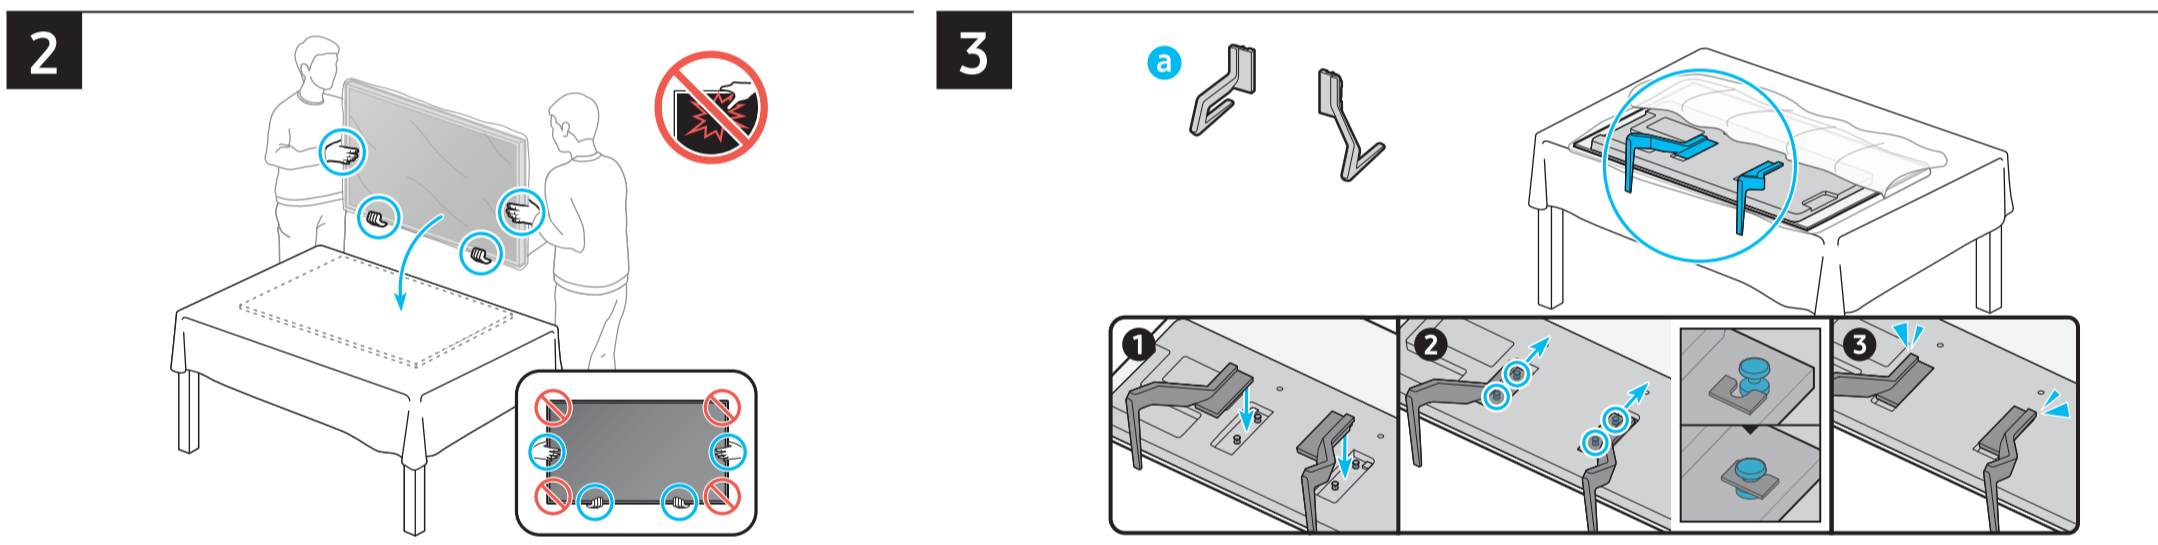
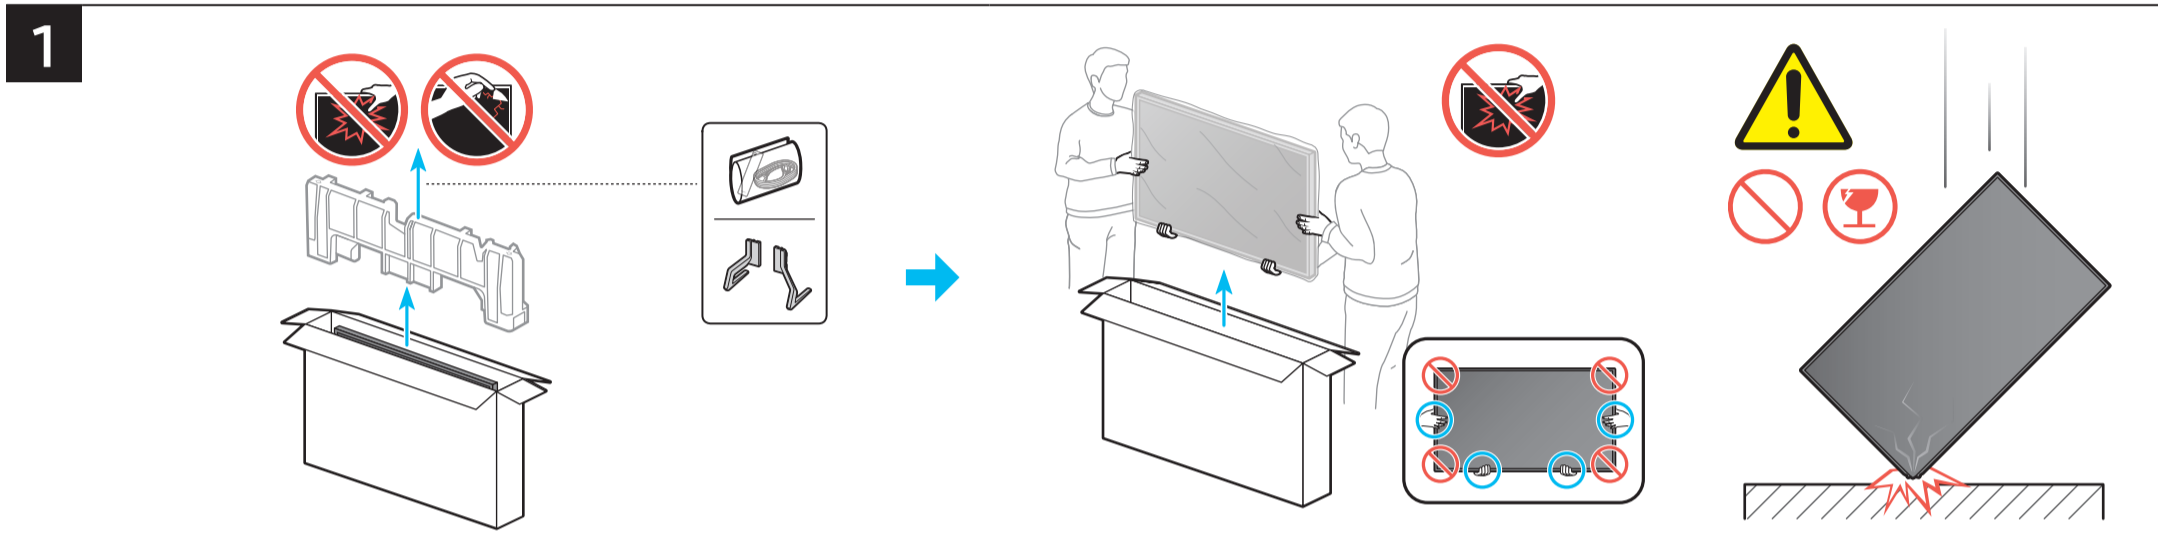


SAMSUNG

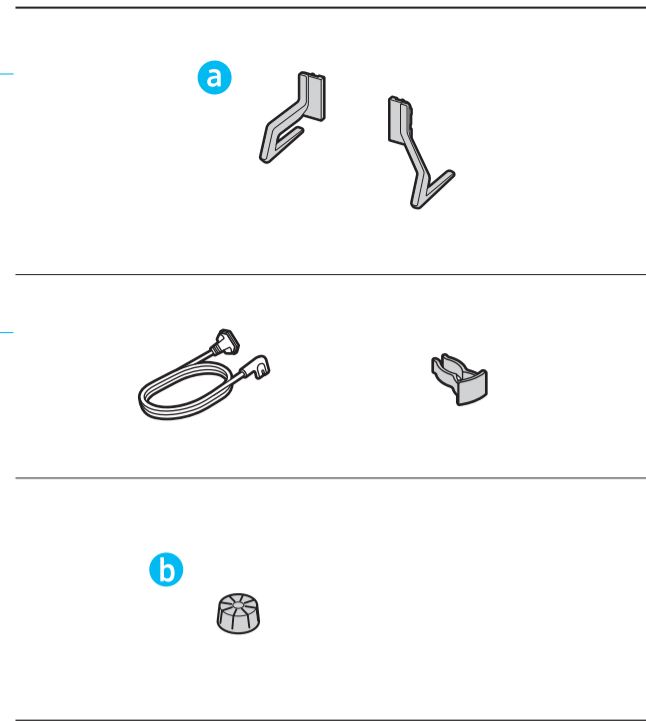


Unpacking and Installation Guide
 Guide de déballage et d'installation
 Guía de desembalaje e instalación
 Manual de desempacotamento e instalação
 Auspacken und Installationsanleitung
 Guida al disimballaggio e all'installazione
 Руководство по распаковке и установке
 Қаптамадан шығару және орнату нұсқаулығы
 Посібник з розпаковки та встановлення
 Qadoqdan chiqarish va o'rnatish qo'llanmasi

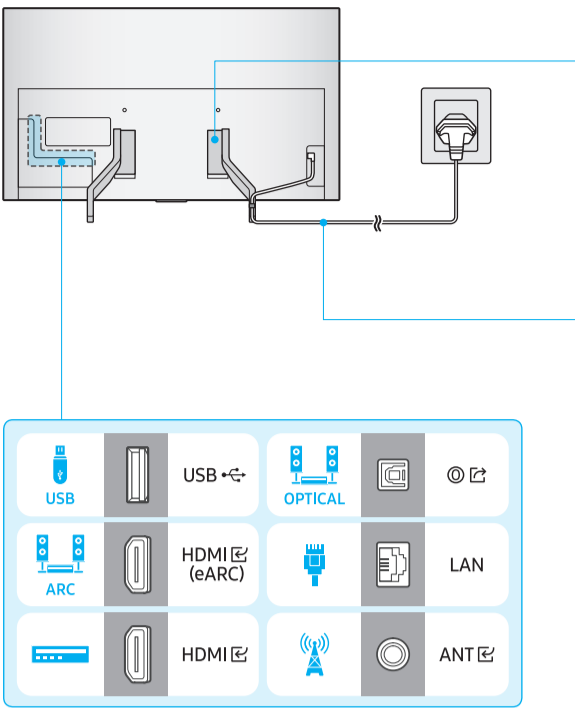

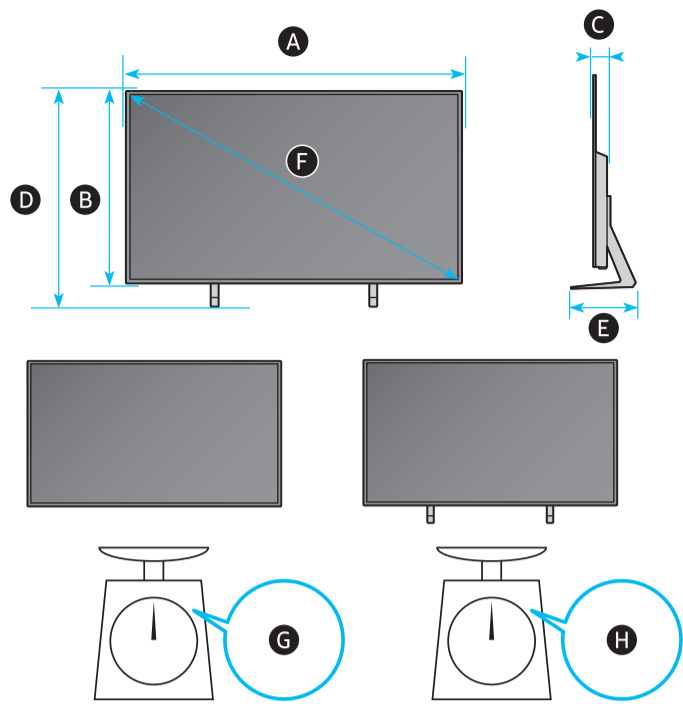

	A	B	C	D	E	F	G	H
48S8*H	42.1 inches	24.4 inches	1.6 inches	26.9 inches	8.2 inches	47.5 inches	23.1 lbs	25.1 lbs
48SH8*	(1069.3 mm)	(619.9 mm)	(39.6 mm)	(682.6 mm)	(209.5 mm)	(120 cm)	(10.5 kg)	(11.4 kg)
48S9*H	(1069.3 mm)	(619.9 mm)	(39.6 mm)	(682.6 mm)	(209.5 mm)	(120 cm)	(10.5 kr)	(11.4 kr)
48SH9*	(106.93 cm)	(61.99 cm)	(3.96 cm)	(68.26 cm)	(20.95 cm)	(120 cm)		

*: 0-9, A-Z

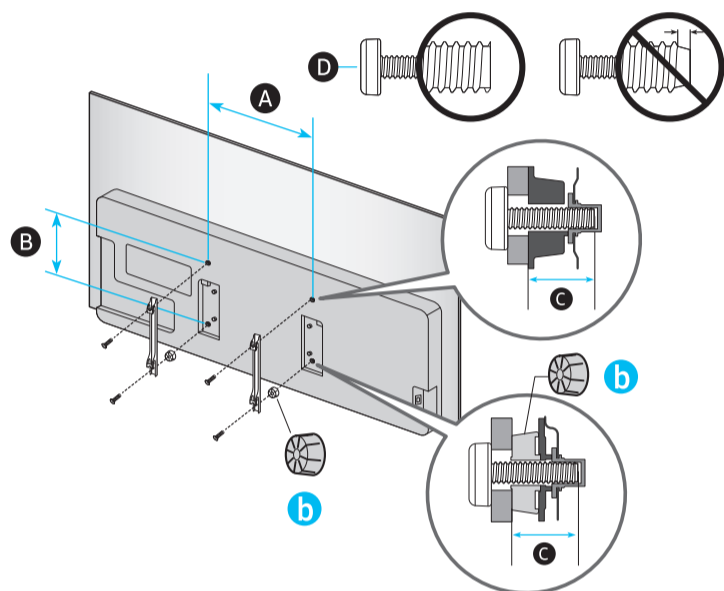

	VESA A x B (mm) VESA A x B (mm)	C (mm) C (mm)	D x 4
48S8*H 48SH8* 48S9*H 48SH9*	300 x 200	28-30	M8

*: 0-9, A-Z