



Free Standing Wine and Beverage Cooler Collection



MFSBC130BL | MFSWC130-DBL

Congratulations on the purchase of your new Marathon appliance!

To activate your Warranty, please register your appliance at www.stirlingmarathon.com or by completing and mailing the enclosed Warranty Registration Card. We are confident you will have years of hassle-free enjoyment and ask that you please retain the Use & Care Guide for future reference and your safety.


Before installing please, read your Use & Care Guide carefully and pay special attention to the Safety & Warning information outlined in the following pages.

For immediate assistance: 1-844-309-9777
www.stirlingmarathon.com

Table of Contents

Important Safeguards.....	3
Environment Protection.....	7
Operating Instructions.....	8
Important Information.....	9
Installation Instructions.....	10
Care and Maintenance.....	11
Operating Your Appliance - Temperature Settings	18
Troubleshooting.....	14
Warranty.....	15

IMPORTANT SAFEGUARDS

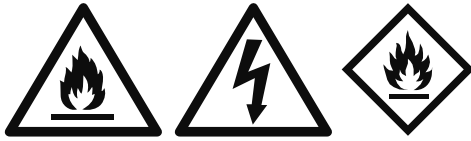

1. **WARNING:** Risk of fire/Flammable materials.
2. **For EN (European) Standard:** This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concernin use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and upload refrigerating appliances
3. **For IEC (International Electrotechnical Commission) Standard:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. When children are present, they should be supervised to ensure that they do not play with this refrigerator.
5. If the power cord is damaged or the socket hole is loose, it must be replaced by the manufacturer, its service agent or similar institutions to avoid danger.
6. Do not store explosive substances (such as aerosol tanks with flammable propellants) in the refrigerator.
7. The power plug of the equipment must be unplugged after use and before self cleaning of equipment.
8. LED lamp were used, it can only be replaced by the manufacturer or its service agent, together with a part of the appliance
9. **WARNING:** Ensure there are no obstacles in the ventilation holes in the equipment shell. or built-in structure.
10. **WARNING:** Do not use mechanical devices or other means to speed up defrosting excep the process recommended by the manufacturer.
11. **WARNING:** Do not damage the pipes of the refrigerant circuit.
12. **WARNING:** Do not connect the plug adapter or other accessories to the power plug.
13. **WARNING:** Please dispose the refrigerator according to local regulations, because it uses flammable cyclopentane and refrigerant.
14. **WARNING:** When positioning the equipment, make sure that the power cord is not clamped or damaged.
15. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
16. **WARNING:** Do not modify or extend the power cord,
17. **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
18. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
19. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
20. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

21. **WARNING:** Connect to potable water supply only.
22. Before disposing of the old refrigerator:
 - Remove the refrigerator doors.
 - Put the bottle racks and doors in a proper place to prevent children from entering and playing to cause accidents.
23. To avoid food contamination, please abide by the following instructions:
 - Please do not open the door for a long time, otherwise it will lead to leakage of cold air, causing the internal temperature of the refrigerator to rise and food to easily deteriorate.
 - Store raw meat and fish in proper containers in the refrigerator so that they do not touch on other foods.
 - If the refrigeration equipment is idle for a long time, please thaw, clean and dry the equipment before leaving, close the door and cut off the power to prevent mold in the container.
24. The refrigeration equipment is not intended to be used as a built-in equipment appliance

REFRIGERANT GAS WARNINGS

1. **DANGER:** Risk of Fire or Explosion. Flammable Refrigerant Used. Do not use mechanical devices to defrost the refrigerator. Do not puncture refrigerant tubing.
2. **DANGER:** Risk of Fire or Explosion. Flammable Refrigerant Used. To be repaired only by trained service personnel. Do not puncture refrigerant tubing.
3. **CAUTION:** Risk of Fire or Explosion. Flammable Refrigerant Used. Consult the repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
4. **CAUTION:** Risk of Fire or Explosion. Dispose of the unit in accordance with federal and local regulations. Flammable refrigerant used.
5. **CAUTION:** Risk of Fire or Explosion Due to Puncture of Refrigerant Tubing. Follow handling instructions carefully. Flammable refrigerant used.
6. **CAUTION:** To Prevent a Child from Being Entrapped. Keep out of reach of children and do not place the unit in an area accessible to children.
7. **CAUTION:** Risk of Fire



R600a
 ISOBUTANE



FLAMMABLE LIQUID
LÍQUIDO INFLAMABLE
LIQUIDE INFLAMMABLE

CAUTION: Risk of fire or explosion due to flammable refrigerant used. Follow handling instructions carefully in compliance with U.S. government regulations.

ADVERTENCIA: Riesgo de incendio o explosión debido al refrigerante inflamable utilizado. Siga las instrucciones de manejo con cuidado, cumpliendo con las regulaciones del gobierno de EE. UU.

ATTENTION : Risque d'incendie ou d'explosion en raison du réfrigérant inflammable utilisé. Suivez attentivement les instructions de manipulation conformément aux règlements du gouvernement des États-Unis.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

ELECTRICAL CONNECTION

WARNING

Improper use of the grounded plug can result in the risk of electrical shock.

Pour votre sécurité, cet appareil doit être correctement mis à la terre. Le cordon d'alimentation est muni d'une fiche à trois broches. This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third ground prong from the power cord supplied. For personal safety, this appliance must be properly grounded.

This appliance requires a standard 115/120 Volt AC ~/60Hz electrical ground outlet with three-prong. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury.

The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevent overloading house wiring circuits that could cause a fire hazard from overheated. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

EXTENSION CORD

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord it is absolutely necessary that it be a UL/CUL Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes

SURGE PROTECTOR

Most electrical appliances use a series of electric control boards to operate. These boards are very susceptible to power surges and could be damaged or destroyed.

If the appliance is going to be used in an area or if your city/country is prone to power surges / outages; it is suggested that you use a power surge protector for all electrical devices/appliances you use. The surge protector that you select must have a surge block high enough to protect the appliance it is connected to. If you have any questions regarding the type and size of surge protector needed contact a licensed electrician in your area.

Damages due to power surges are not considered a manufacturer covered defect and will void your product warranty.

A stylized lightning bolt icon.

WARNING

A stylized lightning bolt icon.

To reduce the risk of fire, electrical shock, or injury when using your refrigerator-freezer, follow these basic precautions:

- Read all instructions before using the refrigerator-freezer.
- **DANGER** or **WARNING**: Risk of child entrapment.
- Child entrapment and suffocation remain significant safety hazards. Unused or discarded refrigerator-freezers must be properly secured or disposed of to prevent accidents.
- Before you throw away your old refrigerator-freezer: Take off the doors. Leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the refrigerator-freezer.
- Never clean refrigerator-freezer parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other refrigerator-freezer. The fumes can create a fire hazard or explosion.

ENVIRONMENT PROTECTION



This appliance does not contain gases which could damage the ozone layer, in either its refrigerant circuit or insulation materials. Do not dispose of this appliance with household waste. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations as obtained from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used in this appliance marked by the symbol Oare recyclable.



This symbol on the product or on its packaging indicates that this product may not be treated as typical household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

PACKAGING MATERIALS

The materials with the symbol Oare recyclable. Dispose the packaging in a suitable collection containers to recycle it.

DISPOSAL OF THE APPLIANCE

1. Disconnect the power plug from the main socket.
2. Cut off the power cable and discard it.



OPERATING INSTRUCTIONS

BEFORE USE

- Remove the exterior and internal packaging.
- Let the wine or beverage cooler stand upright for approximately 2 hours before connecting it to the power supply. This will reduce the possibility of a cooling-system malfunction caused by handling during transportation.
- Clean the interior surfaces with a soft cloth and warm water.
- This product is intended for household and similar applications, such as:
 - Staff kitchen areas in stores, offices, and other work environments;
 - Farmhouses and guest rooms in hotels, motels, and other residential-type environments;
 - Bed-and-breakfast environments;
 - Catering and similar non-retail applications.

IMPORTANT INFORMATION

- Store wine in sealed bottles;
 - Do not overload the cabinet;
 - Do not open the door unless necessary;
 - Do not cover shelves with aluminum foil or any other shelf material that may hinder air circulation;
 - If the wine or beverage cooler will be unused for an extended period, leave the door slightly open to allow air to circulate inside the cabinet and help prevent condensation, mould, and odours.
 - If the power cord is damaged or badly worn, it must be replaced by an authorized service provider, or a similarly qualified person. Do not replace it yourself.
1. **WARNING:** Keep ventilation openings in the appliance enclosure or built-in structure clear of obstructions.
 2. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process unless recommended by the manufacturer.
 3. **WARNING:** Do not damage the refrigerant circuit.
 4. **WARNING:** Do not use electrical appliances inside the storage compartment unless they are recommended by the manufacturer.

Product Model Description

MFSBC130BL: Single-temperature zone beverage cooler

MFSWC130-DBL: Dual-temperature zone wine cooler

INSTALLATION

INSTALLATION OF YOUR APPLIANCE

This product is designed for freestanding installation. Built-in installation may cause performance problems. This product is designed specifically for storing wine or beverages.

- Place your wine or beverage cooler on a floor strong enough to support it when fully loaded. To level the appliance, adjust the leveling feet at the bottom.
- This appliance uses a flammable refrigerant. Do not damage the refrigerant tubing during transportation.
- Keep the wine or beverage cooler away from direct sunlight and heat sources such as stoves, heaters, and radiators. Direct sunlight may affect the exterior finish, and heat sources may increase energy consumption.
- Extremely cold ambient temperatures may also prevent the appliance from operating properly.
- Do not install the appliance in a damp or wet location.
- Plug the wine or beverage cooler into a properly installed, dedicated wall outlet. Never cut off or remove the third (ground) prong from the power cord.
- If you have questions about the power supply or grounding, consult a certified electrician or an authorized service centre.



CARE AND MAINTENANCE

IMPORTANT INFORMATION

If the appliance is unplugged, switched off, or loses power, wait 3 to 5 minutes before restarting it. The appliance may not restart if you attempt to turn it on sooner. When the appliance is used for the first time or after an extended period of non-use, the displayed temperature may differ from the set temperature. The temperature will stabilize after the appliance has operated for a while.

SHELVES

To prevent damage to the door gasket, make sure the door is fully open before pulling a shelf out of the cabinet.

Pull a shelf forward along its guides to access stored items. A notch on each side of the shelf track prevents the shelf from being pulled out accidentally and prevents bottles from falling.

Before removing or repositioning a shelf, remove all wine bottles or beverages from it. Pull the shelf straight out, then insert it into the desired slots.

CLEANING YOUR APPLIANCE

- Turn off and unplug the appliance, then remove all items, including the shelves.
- Wash the interior surfaces with warm water and a mild cleaning solution.
- Wash the shelves with a mild detergent solution.
- When cleaning the control area or any electrical component, wring excess water from the sponge or cloth.
- Wash the exterior with warm water and a mild liquid detergent. Rinse, then dry with a clean, soft cloth.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the appliance's temperature if you minimize how often the door is opened. If the power will be off for an extended period, take appropriate steps to protect the contents.

VACATION TIME

- Short vacations: Leave the wine or beverage cooler operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all items and turn it off. Clean and dry the interior thoroughly. To prevent odours and mould growth, leave the door slightly open, blocking it open if necessary.

MOVING YOUR APPLIANCE

- Remove all contents.
- Remove loose items, such as shelves, or secure them with foam.
- Turn the adjustable legs fully into the base to prevent damage.
- Tape the door shut.
- Keep the appliance upright during transportation. Protect the exterior with a blanket or similar covering.


ENERGY SAVING TIPS

- Place the wine or beverage cooler in the coolest area of the room, away from heat-producing appliances and direct sunlight.

OPERATING YOUR APPLIANCE & SETTING THE TEMPERATURE

FOR SINGLE-ZONE COOLERS

CONTROL PANEL OPERATION

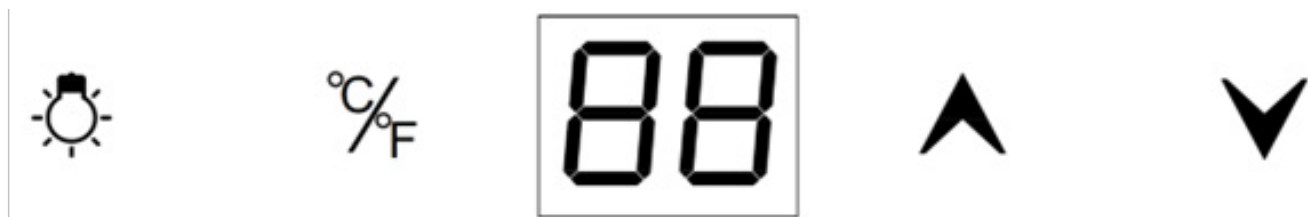

Power button: After the appliance is connected to power, press and hold the Power button for 5 seconds to turn it on or off.

°C/°F button: Press the °C/°F button to switch the temperature display between Celsius and Fahrenheit.

Temperature buttons: Press a temperature setting button to make the set temperature flash on the display. Press the up button to raise the set temperature or the down button to lower it. After 5 seconds, the display will return to the measured internal temperature.

Display window: The two-digit LED display shows the set temperature or the actual internal temperature.

Light button: Press this button to turn the interior light on or off.

Single Zone Cooler Temperature Setting Range:

The temperature can be set between 2°C and 20°C.

OPERATING YOUR APPLIANCE & SETTING THE TEMPERATURE

FOR DUAL-ZONE COOLERS

CONTROL PANEL OPERATION



Power button: After the appliance is connected to power, press and hold the Power button for 5 seconds to turn it on or off.

°C/°F button: Press and hold the °C/°F button for 3 seconds to switch the temperature display between Celsius and Fahrenheit.

Temperature buttons: Press a temperature setting button to make the set temperature flash on the display. Then press the up or down button to raise or lower the set temperature.

Display windows: The two-digit LED display on the left shows the set or actual temperature of the upper zone. The display on the right shows the set or actual temperature of the lower zone.

Light button: Press this button to turn the interior light on or off.

Dual-Zone Cooler Temperature Setting Ranges:

The upper-zone temperature can be set between 5°C and 12°C.

The lower-zone temperature can be set between 12°C and 20°C.

TROUBLESHOOTING

You can easily resolve many common wine and beverage cooler problems, potentially saving the cost of a service call. Try the following suggestions before contacting a service provider.

Common Wine and Beverage Cooler Problems

PROBLEM	POSSIBLE CAUSES
Unit does not operate	The appliance is not plugged in. The appliance is turned off. The circuit breaker has tripped or a fuse has blown.
The unit is not cold enough	Check the temperature-control setting. The ambient temperature may require a colder setting. The door is opened too often. The door is not fully closed. The door gasket does not seal properly
The appliance turns on and off frequently	The room temperature is higher than normal. The cabinet is overloaded. The door is opened too often. The door is not fully closed. The temperature-control setting is incorrect. The door gasket does not seal properly.
The LED light does not work	The appliance is not plugged in. The circuit breaker has tripped or a fuse has blown. The LED light has failed. The light button is set to OFF.
The appliance vibrates	Check that the wine or beverage cooler is level.
The appliance is too noisy	A gurgling sound caused by refrigerant flow is normal. You may hear sounds as each cooling cycle ends. Expansion and contraction of the interior walls may cause popping or cracking sounds. The wine or beverage cooler is not level.
The door does not close properly	The wine or beverage cooler is not level. The door was reversed but not installed correctly. The gasket is dirty. The shelves are out of position.

2 YEAR LIMITED WARRANTY

When operated and maintained according to the instructions in the Use & Care Guide, MARATHON, a registered trademark of Stirling Marathon Limited, warrants to the original purchaser for 2 years from the date of original purchase and/or agrees to pay for parts and service/labour required to correct defects in materials or workmanship. Any service must be approved and provided by an authorized Stirling Marathon Service Center, **YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AT THE SOLE DISCRETION OF STIRLING MARATHON LIMITED AS PROVIDED HEREIN.**

This limited warranty is valid only in Canada and the Continental United States with proof of original purchase and confirmed warranty registration.

TERMS OF WARRANTY BY PRODUCT

Product Category	Capacity/Type	Warranty Type
Freestanding Refrigerators, Wine & Beverage Coolers and Freezers	Less than 6 cu. ft.	Carry-In
Refrigerators & Freezer	Greater than 6 cu. ft.	In-Home
Electric & Gas Ranges	All Sizes	In-Home

HOW TO OBTAIN SERVICE

Carry-In: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service Center presenting a copy of the original bill of sale or Warranty Registration Confirmation.

In-Home: Contact Authorized Service Center and provide a copy of the Original bill of sale or Warranty Registration Card. If you are in a remote area or the closest Authorized Service Center is further than 100 km (60 miles), you will be required to deliver the appliance to the closest Service Center at your expense.

Stirling Marathon is not responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

ITEMS EXCLUDED FROM WARRANTY

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Commercial or Rental Use Limited to 90 days Parts & Labour.
- Plastic parts such as door bins, panels, door shelves, racks, light bulbs, etc.
- Punctures to the evaporator system due to improper defrosting of the unit.
- Service or Repair by an unauthorized service technicians.
- Service calls that do not involve defects in material and workmanship such as instruction on the proper use of the product, door reversal or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Delivery costs incurred as the result of a unit that fails.
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an unauthorized service technician is not available.
- The removal and reinstallation of your appliance if it is not installed correctly or is in an inaccessible location, as per the published installation instructions.
- Liability under this warranty is limited to repair, replacement or refund. If a replacement unit is not available or the unit cannot be repaired, liability is limited to the actual purchase price paid by the consumer.
- This warranty applies only to the original purchaser and does not extend to any subsequent owner(s) and is non-transferable.
- No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following: accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (extremely high or low room temperature).
- Use for commercial or industrial purposes (i.e. If the appliance is not installed in a domestic residence). Fire, water damage, theft, war,
- riot, hostility, acts of God such as hurricanes, floods etc.
- Service calls resulting in customer education.
- Improper installation (i.e. Building-in of a free-standing appliance or using an appliance outdoors that is not approved for outdoor application).



For Service or Assistance please contact us at:
info@stirlingmarathon.com | 1-844-309-9777 | www.stirlingmarathon.com