

Whirlpool® 20 cu. ft. Upright Freezer with Temperature Alarm

WZF79R20DW

Available Finishes/Colours

WZF79R20DW
White

Put a spotlight on your frozen favorites inside this 20 cu. ft. upright freezer with LED interior lighting. Activating Fast Freeze quickly drops the temperature to help lock in freshness and flavor, and the temperature alarm will notify you if the freezer gets too warm. The upright freezer prevents frost build-up for a hassle-free defrosting experience, and you can choose the ideal temperature for whatever frozen foods you're storing with electronic temperature controls. Plus, you can be sure there is plenty of ice on hand with the optional icemaker.

Top Features

LED Interior Lighting

Fast Freeze

Electronic Temperature Control

Manuals & Literature:

Dimension Guide
Energy Guide
Owners Manual
Warranty Information

Dimensions

Depth	29.13
Height	60.75
Width	33.25

Freezer Compartment

Light	Yes
Basket Description	1 Deep Wire Basket; 1 Shallow Wire Basket
Shelves	4 Adjustable Full-Width Wire
Freezer Number Of Shelves	4 Adjustable Full-Width Wire

Features

Ice Maker Compatible	Yes
Freezer On Indicator Light	No
Fast Freeze Setting	Yes

Exterior

Freezer Handle Type	Reach Through Handle
Freezer Door Lock	Yes
Defrost Drain	No
Reversible Door	No
Hidden Hinge	Yes
Handle Material	Plastic
Door Style	Contour
Door Opening	Right Swing
Door Finish	Smooth

Controls

Temperature Monitor Alarm	Yes
Defrost Type	Automatic Defrost
Temperature Range	15.8 F to -15.3 F (-9.3 C to -26.3C)

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice. Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Upright Freezer

PRODUCT MODEL NUMBERS

WZF56R16D
WZF79R18D
WZF79R20D
WZF57R16F


Recommended grounding method
A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See “Using the Controls.”

Water Pressure
A cold water supply with water pressure of between 30 and 120 psi (207 to 827 kPa) is required to operate the water dispenser and ice maker.


Reverse Osmosis Water Supply
The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the freezer needs to be between 30 and 120 psi (207 and 827 kPa).

PRODUCT DIMENSIONS

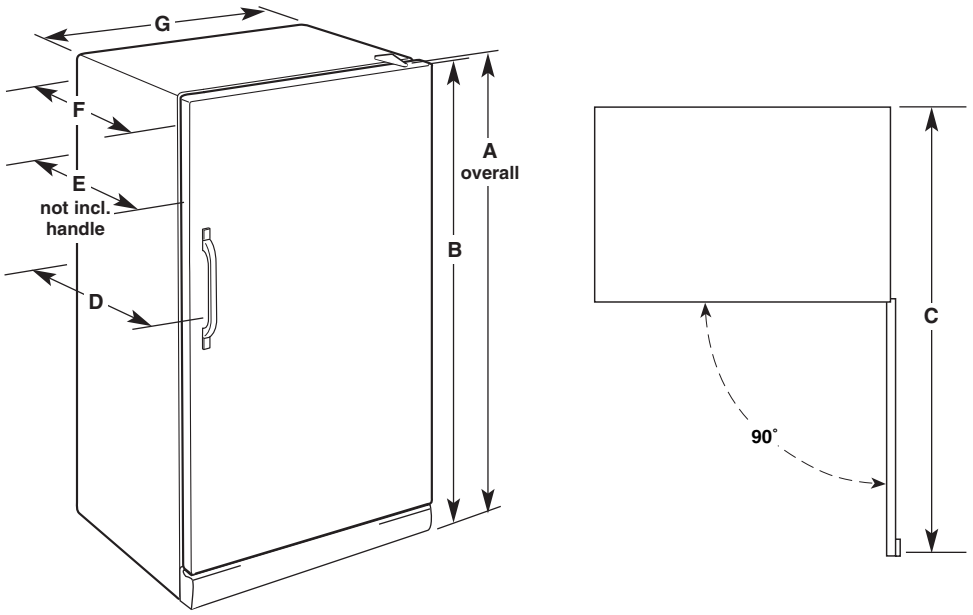

Model Number	Door Swing	Model Size	Height - Overall “A”	Height - Top of Cabinet “B”	Depth - Door Open 90° “C”	Depth - With Handles “D”	Depth - Without Handles “E”	Depth - Cabinet Only “F”	Width - Cabinet “G”
WZF56R16D	Right	15.7 cu. ft.	60¾" (154.3 cm)	60¼" (153.0 cm)	55⅞" (141.9 cm)	30¼" (76.8 cm)	29⅛" (74.0 cm)	24⅝" (62.5 cm)	30¼" (76.8 cm)
WZF79R18D	Right	17.7 cu. ft	66¾" (169.5 cm)	66¼" (168.3 cm)	55⅞" (141.9 cm)	30" (76.2 cm)	29⅛" (74.0 cm)	28" (71.1 cm)	30¼" (76.8 cm)
WZF79R20D	Right	19.6 cu. ft	66¾" (169.5 cm)	66¼" (168.3 cm)	58⅞" (149.5 cm)	30" (76.2 cm)	29⅛" (74.0 cm)	28" (71.1 cm)	33¼" (84.5 cm)
WZF57R16F	Right	16 cu. ft	60¾" (154.3 cm)	60¼" (153.0 cm)	55⅞" (141.9 cm)	30¼" (76.8 cm)	29⅛" (74.0 cm)	24⅝" (62.5 cm)	34" (86.3 cm)

LOCATION REQUIREMENTS

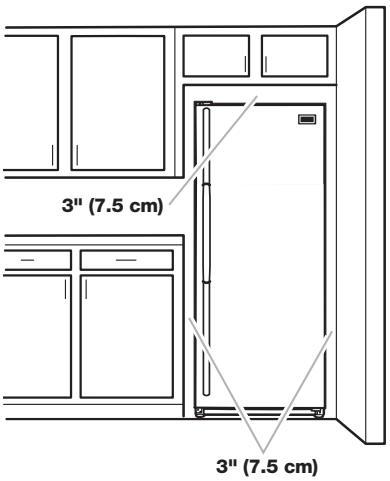

Ventilation and Clearance

- Allow at least 3" (7.5 cm) of air space at the top and on both sides of the freezer. Allow at least 1" (2.54 cm) between back of cabinet and the wall.
- If you are installing your refrigerator next to a fixed wall, leave extra space on the hinge side so the door can open wider.
- Keep flammable materials and vapors, such as gasolline, away from freezer.
- Do not cover the freezer with items such as blankets, sheets, tablecloths, etc. This reduces air circulation.

Temperature
Your freezer operates most efficiently when located in an area where the temperature will not fall below 40°F (5°C). Place your freezer in a location where the temperature will not fall below this recommended temperature.

Because Whirlpool Corporation policy includes a continuous commitment to improve our products, we reserve the right to change materials and specifications without notice.

Dimensions are for planning purposes only. For complete details, see Installation Instructions packed with product. Specifications subject to change without notice.

Ref. W10668404B
5/16