



Maytag® Réfrigérateur à portes françaises avec distributeur d'eau extérieur - 30 po - 20 pi cu

MFW2055FRZ

Finis/couleurs disponibles



MFW2055FRZ
Acier inoxydable résistant
aux traces de doigts

Dimensions		Distributeur	
Profondeur	34.38	Options de distributeur	Contrôle / verrouillage enfant; Eau filtrée
Hauteur	68.38		
Largeur	30.13		

Compartment du congélateur		Extérieur	
Tiroir/panier de congélation	1 Plastique inférieur pleine largeur;	Couleur de la grille de base	Grey
	1 Plastique supérieur pleine largeur	Couleur de la caisse	Grey
Type de porte	Extraire	Fini de la caisse	Texturé
Type de congélateur	Porte coulissante à 2 niveaux	Fini de la porte	Smooth
Éclairage	Éclairage à incandescence	Style de porte	Incurvée
		Charnière dissimulée	Oui
		Nombre de portes	3
		Couleur de la poignée	Stainless Steel

Caractéristiques clés

Acier inoxydable résistant aux traces de doigts

Tiroir à charcuterie à température contrôlée Wide-N-Fresh™

Éclairage à DEL BrightSeries™

Distributeur	
Type de distributeur	Eau extérieure seulement

Guides et documentation:

 [Guide des dimensions](#)

 [Guide énergétique](#)

 [Guides d'installation](#)

 [Renseignements sur la garantie](#)



Étant donné que la politique de Whirlpool Canada LP comprend un engagement continu dans l'amélioration de ses produits, nous nous réservons le droit de modifier les matériaux et les fiches techniques sans préavis. Les dimensions sont à des fins de planification uniquement. Pour des informations complètes, veuillez vous référer aux instructions d'installation fournies avec le produit. Les spécifications peuvent être modifiées sans préavis.



Bottom Mount Refrigerator

PRODUCT MODEL NUMBERS

MFW2055DR MFW2055YE
MFW2055FR

Electrical: A 115-volt, 60-Hz, AC-only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

Water: A cold water supply with water pressure between 30 and 120 psi (207 and 827 kPa) is required to operate ice maker and water dispenser. If you have questions about your water pressure, call a licensed, qualified plumber.

IMPORTANT: The pressure of the water coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 30 and 120 psi (207 and 827 kPa).


Reverse Osmosis Water Supply: If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

PRODUCT DIMENSIONS

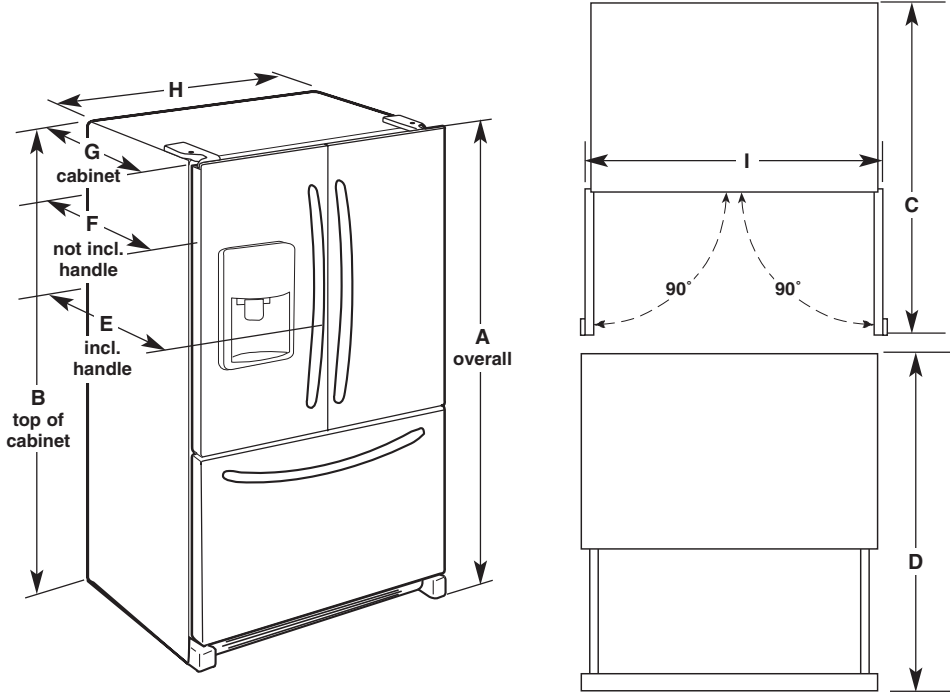

Model Number	Model Size	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Door Open 90° "C"	Depth - Drawer Open "D"	Depth - With Handles "E"	Depth - Without Handles "F"	Depth - Cabinet Only "G"	Width - Cabinet "H"	Width - Door Open 90° "I"
MFW-2055DR	19.7 cu. ft.	68 ³ / ₈ " (173.7 cm)	67 ¹ / ₂ " (171.5 cm)	44 ¹ / ₈ " (112.1 cm)	52 ¹ / ₂ " (133.4 cm)	34 ³ / ₄ " (88.3 cm)	32 ¹ / ₄ " (81.9 cm)	28" (71.1 cm)	30" (76 cm)	33 ¹ / ₄ " (84.5 cm)
MFW-2055YE	19.6 cu. ft.	68 ¹ / ₂ " (174 cm)	67 ¹ / ₂ " (171.5 cm)	43 ⁵ / ₈ " (110.8 cm)	51 ¹⁵ / ₁₆ " (131.9 cm)	34 ³ / ₄ " (88.3 cm)	31 ¹¹ / ₁₆ " (80.5 cm)	27 ⁷ / ₈ " (70.8 cm)	29 ¹ / ₂ " (74.9 cm)	33" (83.8 cm)
MFW-2055FR	19.7 cu. ft.	68 ³ / ₈ " (173.7 cm)	67 ¹ / ₂ " (171.5 cm)	44 ¹ / ₈ " (112.1 cm)	52 ¹ / ₂ " (133.4 cm)	34 ³ / ₈ " (87.3 cm)	32 ¹ / ₄ " (81.9 cm)	28" (71.1 cm)	30" (76 cm)	33 ¹ / ₄ " (84.5 cm)

LOCATION REQUIREMENTS

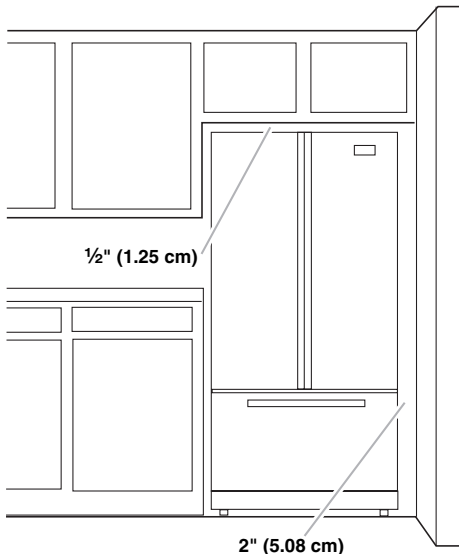

To ensure proper ventilation for your refrigerator, allow for a 1/2" (1.25 cm) space on each side and at the top. Allow for 1" (2.54 cm) of space behind the refrigerator. If your refrigerator has an ice maker, make sure you leave some extra space at the back for the water line connections.

If you are installing your refrigerator next to a fixed wall, leave 2" (5.08 cm) minimum on the hinge side (depending on your model) to allow for the door to swing open.

NOTE: This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator..