






Dimensions	
Overall Width (in.)	31 1/8"
Overall Depth (in.) including doors and handles	28 3/4"
Overall Depth (in.) without handles	27 3/8"
Overall Height (in.)	67 1/2"
Exterior Appearance	
Door Design	Flat Door
Built-in	Yes
Handle Type	Stainless steel square shape
Freestanding	Yes
Counter-Depth	Yes
Cabinet color	Grey
Frontage Color	EZKleen™; Stainless Steel
Concealed Hinges	Yes
Stainless Steel Type	430
Features	
Configuration	French Door
External Water Dispenser	Oui, Grey
Freezer Type	Drawer
Temperature Management System	ActiveSmart™
Interior Lighting	LED: Fade-in, Fade-out
Sabbath Mode	Yes
Icemaker acces	Freezer Compartment
Soft Closing Doors	Yes
SmartTouch™ Control Panel	Inside, Front right
Icemaker	Factory-Installed
Child lock	Yes
Water Filtration	Yes
Water Filter acces	Cupboard beside the refrigerator
Capacity	
Total Capacity	16.9 cu.ft.
Refrigerator Capacity	13.1 cu.ft
Freezer Capacity	4.8 cu.ft.
ActiveSmart™	
Compressor Type	Variable
Temperature Management	3 Electronic temperature sensors
Defrost Type	Variable
Vacation Mode	Automatic
Door Alarm	Yes
Multiflow Air System	Yes
Humiditi Lid System	Yes
Air Fan Management	Variable speed
Electrical Requirements	
Energy Consumption	585 kWh par année
Volts; Hertz; Amps	120V; 60Hz; 15 Amp
Accessories (Included)	
Single Bottle Holders	2
Accessories (optionnal)	
Surround Kit	# 24478
Warranty	
Full 2 years	Entire Appliance; In-Home; Parts & Labour
Limited Additional 3 years (5 Years Total)	Sealed System; Parts/Labour; In-Home

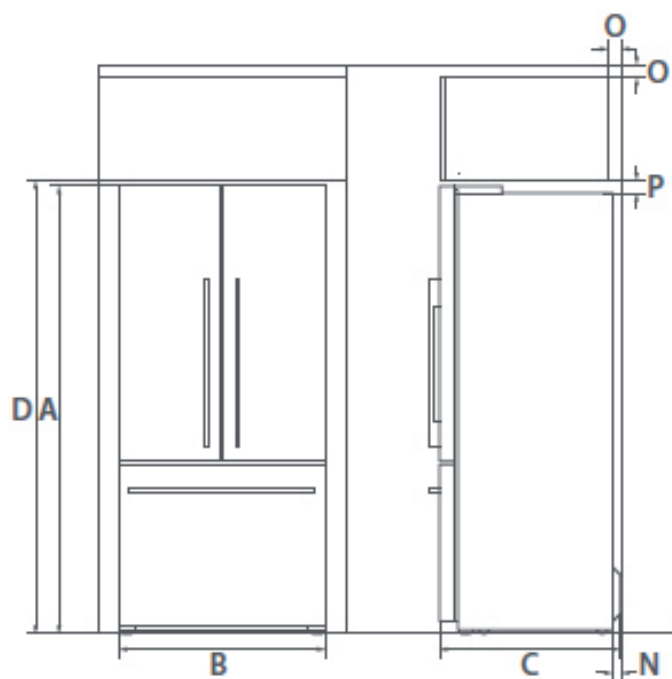


Flush with refrigerator chassis – full door rotation

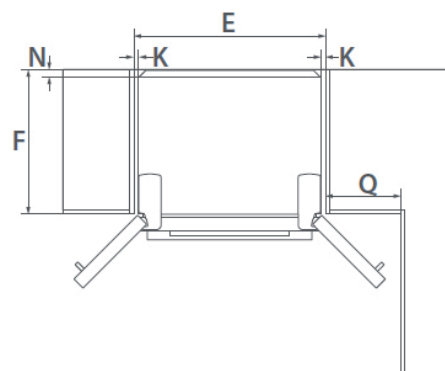

Flush with refrigerator door – full door rotation

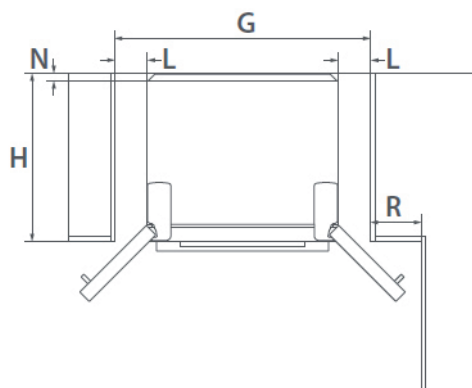


Flush with refrigerator door – 90° door rotation

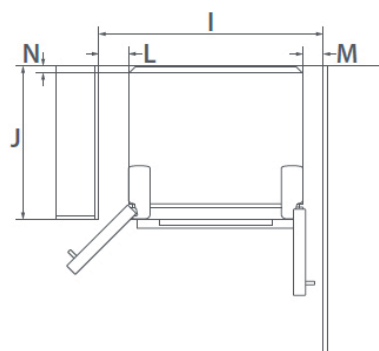




		RF170A	
Product dimensions		inches	mm
A	Overall height of product	67 ½	1715
B	Overall width of product	31 ⅞	790
C	Overall depth of product (excludes handle, includes evaporator)	27 ¾	695
Cabinetry dimensions (including minimum air clearances)			
D	Inside height of cavity	68 ¾	1735
Flush with refrigerator chassis – full door rotation			
E	Inside width	32 ¾	830
F	Inside depth	24 ¾	620
Flush with refrigerator door – full door rotation			
G	Inside width	41 ¾	1060
H	Inside depth flush to flat door	27 ¾	695
Flush with refrigerator door – 90° door rotation (for full drawer/shelf access, the doors need to be open past 90°)			
I	Inside width	40	1015
J	Inside depth flush to flat door	27 ¾	695
Minimum clearances			
K	Side clearance	¾	20
L	Side clearance – hinge side flush with door – full rotation	5 ⅝	135
M	Side clearance – hinge side flush with door – 90° rotation	3 ½	90
N	Rear clearance (incl. evaporator tray)	1 ⅞	30
O	Vent – around top of cupboard (optional)	2	50
P	Top clearance – above refrigerator cabinet	2	50
Q	Door clearance – hinge side flush with chassis – full rotation	12 ¾	325
R	Door clearance – hinge side flush with door – full rotation	8 ¼	210

Location and preparation to connect the water pipe

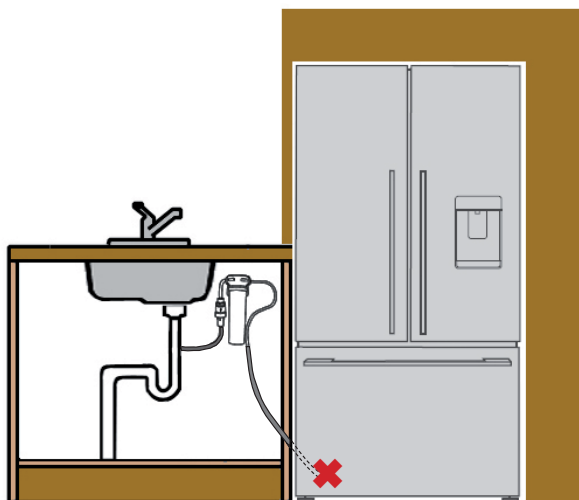

Contents of filter kit

- 1 13 ft (4 m) white ¼" (6 mm) tubing
- 2 1 x 8" (200 mm) blue tubing
- 3 1 x pressure reducing valve (PRV)
- 4 1 x double sided tape
- 5 2 x locking keys
- 6 1 x water filter cartridge and head
- 7 1 x faucet connection

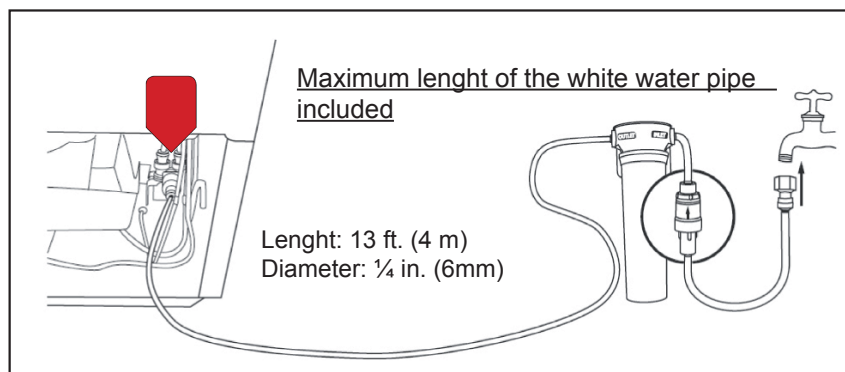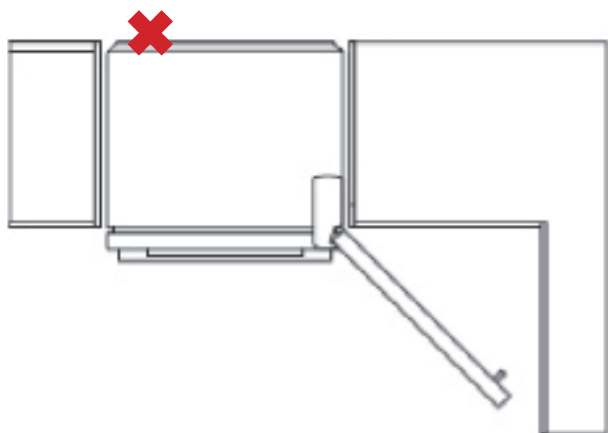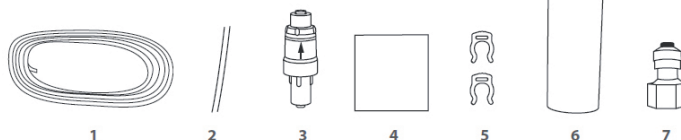

Locate desired position for water filter noting carefully the following points:

- It is recommended to fit the water filter in a vertical orientation with the water filter head at the top. This will minimize water leakage when replacing cartridge.
- Ensure the filter is in a convenient location to access every 6 months for replacement. We suggest that this location is beside the water filter supply faucet in a cupboard beside the refrigerator.
- A minimum clearance of 2 ½" (64 mm) from the bottom of the filter cartridge is required to perform cartridge removal.
- Do not screw water filter to refrigerator.

Please note: These instructions are complementary to your installation guide. Please refer to the installation guide given with your appliance in order to get all required instructions.