

## 36" ActiveSmart™ Built-in Refrigerator

Model no:

**RS36A80U1 (with Stainless Door panels PART NO. RD3680U)**

Product Dimensions	in
Ⓐ Overall height of fridge	79 7/8"
Ⓑ Overall width of fridge	35 11/16"
Ⓒ Depth of fridge front panels (excl. handles)	3/4"
Ⓓ Overall depth of fridge (excl. front door panels)	23 3/4"
Ⓔ Height from bottom datum to top of toe kick	4"
Ⓕ Depth of toe kick measured from front of door	4 3/4"
Ⓖ Height of bottom drawer panel	30 3/8"
Ⓗ Height of top door panels	45 1/4"
Ⓙ Height from bottom datum to top of drawer panel	34 7/16"
Ⓚ Gap between top and bottom door panels	5/32"
Ⓛ Height from bottom datum to centre of bottom handle	31 9/16"
Ⓛ Width of bottom handle	28 5/8"
Ⓜ Thickness of handles	5/8"
Ⓝ Height from bottom datum to bottom of top handle	37 1/8"
Ⓞ Height from bottom datum to top of top handle	65 3/4"
Ⓟ Height of top handles	28 5/8"
Ⓢ Distance from centre of fridge to the centre of top handles	2 5/8"
Ⓣ Depth of handle (measured from front of door)	1 5/8"
Ⓤ Depth of door (widest opening) measured from front of door	18 7/8"
Ⓡ Depth of drawer (open) measured from front of drawer, including handle	15 3/4"
Ⓢ Depth of drawer (open) measured from front of drawer, excluding handle	14 3/16"
Ⓥ Minimum door clearance to adjacent wall (115° - full internal access)	12 3/8"

Clearances Dimensions	in
Minimum cabinetry gap clearance from edge of product	5/32"
Overall height of cavity	80"
Overall width of cavity	36"
Overall depth of cavity	24 3/4"




INDICATES PRODUCT DATUM

INDICATES MINIMUM CABINETRY CLEARANCES

DATE: 15.10.2015

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  ( $3/32"$ ). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)

**Fisher & Paykel**

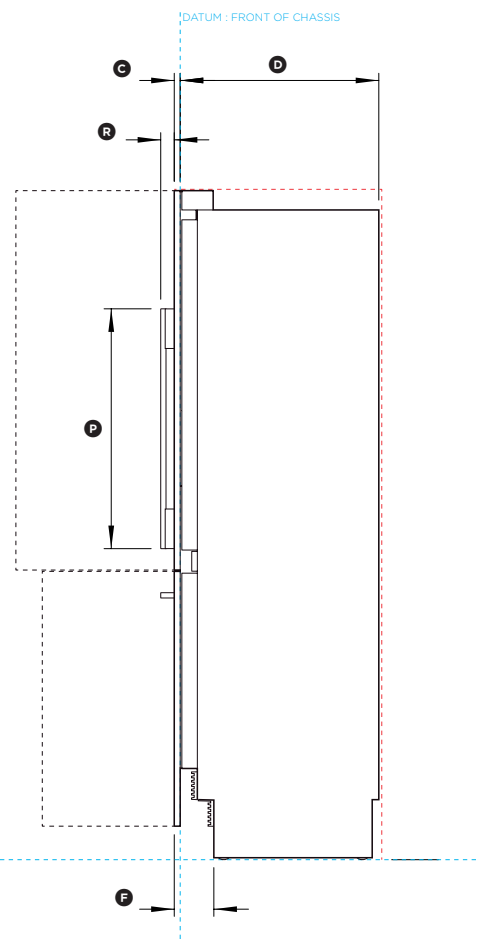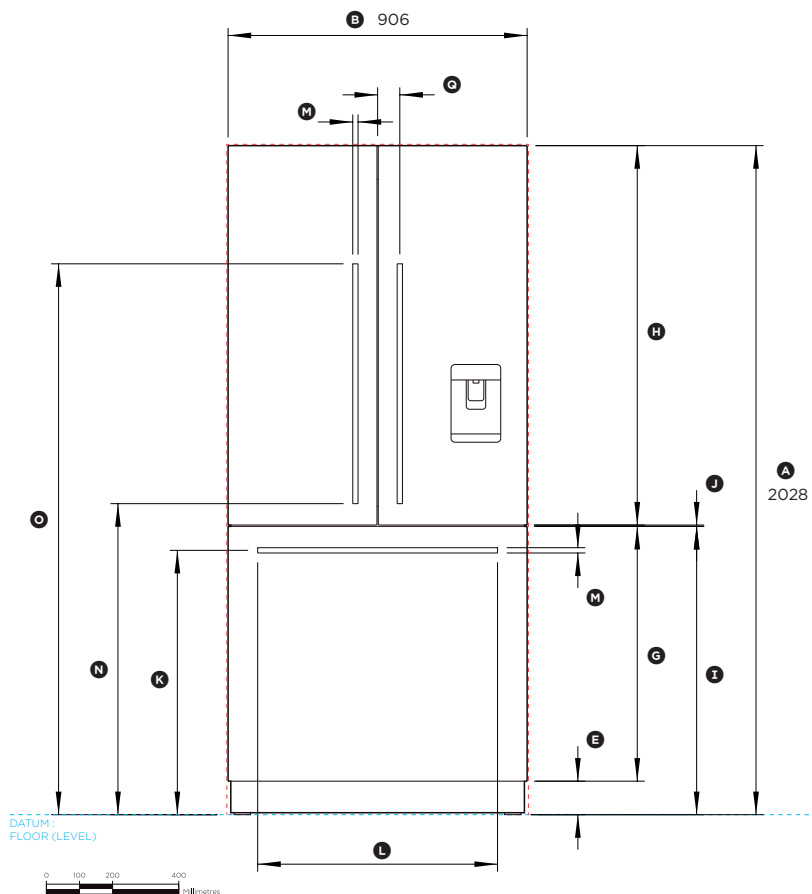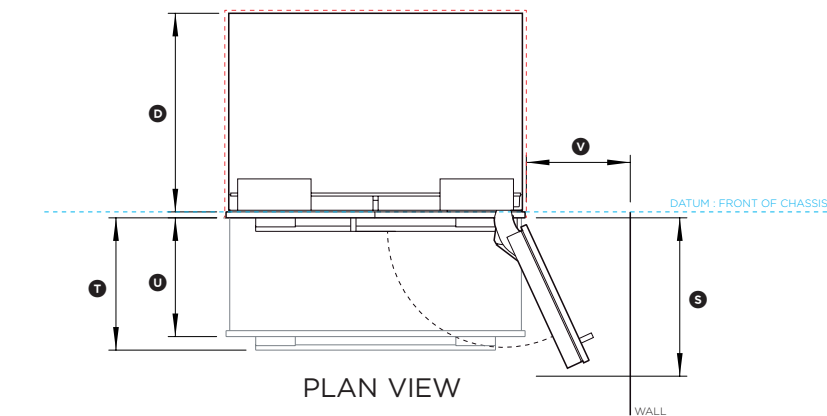

## 36" ActiveSmart™ Built-in Refrigerator

Model no:

**RS36A80U1 (with Stainless Door panels PART NO. RD3680U)**

Product Dimensions	mm
Ⓐ Overall height of fridge	2028
Ⓑ Overall width of fridge	906
Ⓒ Depth of fridge front panels (excl. handles)	19
Ⓓ Overall depth of fridge (excl. front door panels)	603
Ⓔ Height from bottom datum to top of toe kick	102
Ⓕ Depth of toe kick measured from front of door	121
Ⓖ Height of bottom drawer panel	772
Ⓗ Height of top door panels	1150
Ⓙ Height from bottom datum to top of drawer panel	874
⓫ Gap between top and bottom door panels	4
⓬ Height from bottom datum to centre of bottom handle	801
⓭ Width of bottom handle	727
⓯ Thickness of handles	16
⓰ Height from bottom datum to bottom of top handle	943
⓱ Height from bottom datum to top of top handle	1670
⓲ Height of top handles	727
⓳ Distance from centre of fridge to the centre of top handles	67
⓴ Depth of handle (measured from front of door)	41
⓵ Depth of door (widest opening) measured from front of door	480
⓶ Depth of drawer (open) measured from front of drawer, including handle	400
⓷ Depth of drawer (open) measured from front of drawer, excluding handle	360
⓸ Minimum door clearance to adjacent wall (115° - full internal access)	315

Clearances Dimensions	mm
Minimum cabinetry gap clearance from edge of product	4
Overall height of cavity	2032
Overall width of cavity	914
Overall depth of cavity	629

INDICATES PRODUCT DATUM

INDICATES MINIMUM CABINETRY CLEARANCES

DATE: 15.10.2015

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  ( $3/32"$ ). Please read the installation manual for detailed information on installing the product. [www.fisherpaykel.com](http://www.fisherpaykel.com)

**Fisher & Paykel**