

FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30"

Model nos:

HP30IDCHX4

(refer page 2 for metrical measurements)

Product Dimensions

	in
Ⓐ Overall height of range hood without ducting adapter	12 7/16"
Ⓑ Overall height of range hood with ducting adapter	15 7/16"
Ⓒ Overall width of range hood	28 3/4"
Ⓓ Overall depth of range hood (excl. cabinetry front panel)	11"
Ⓔ Diameter of ducting adaptor	6"
Ⓕ Width of range hood chassis	27 5/16"
Ⓖ Depth of range hood chassis	10 3/16"
Ⓜ Thickness of flange	1/16"
Ⓢ Distance from ducting outlet center to rear of chassis	3 1/4"
Ⓣ Height adjustability of clip that secures cooker hood (cabinet base panel thickness)	min 9/16" max 1 9/16"
Ⓚ Distance from rear to center of light	9 15/16"
Ⓛ Distance from back of chassis to hard wiring box	8 5/16"
Ⓤ Distance from center of product to hard wiring box	2 7/8"

Cavity Dimensions Standard Installation


	in
Width of cutout	27 9/16"
Depth of cutout	10 1/4"

Minimum distance above cooktops


	in
Minimum height from top of cooktop to base of product	24"

Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.


Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.

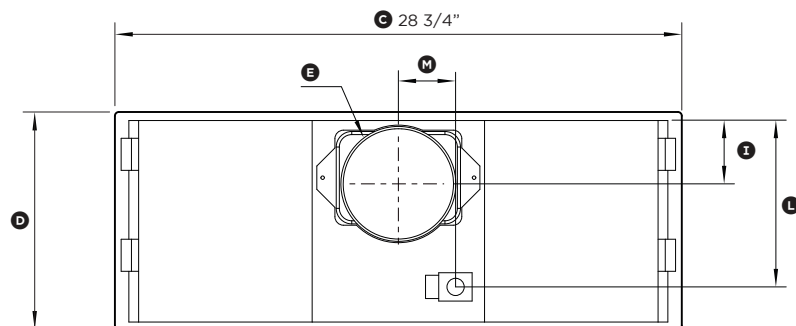

PLAN VIEW

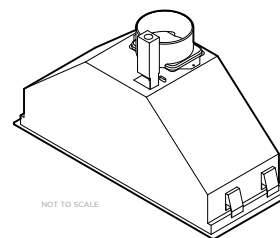


NOT TO SCALE

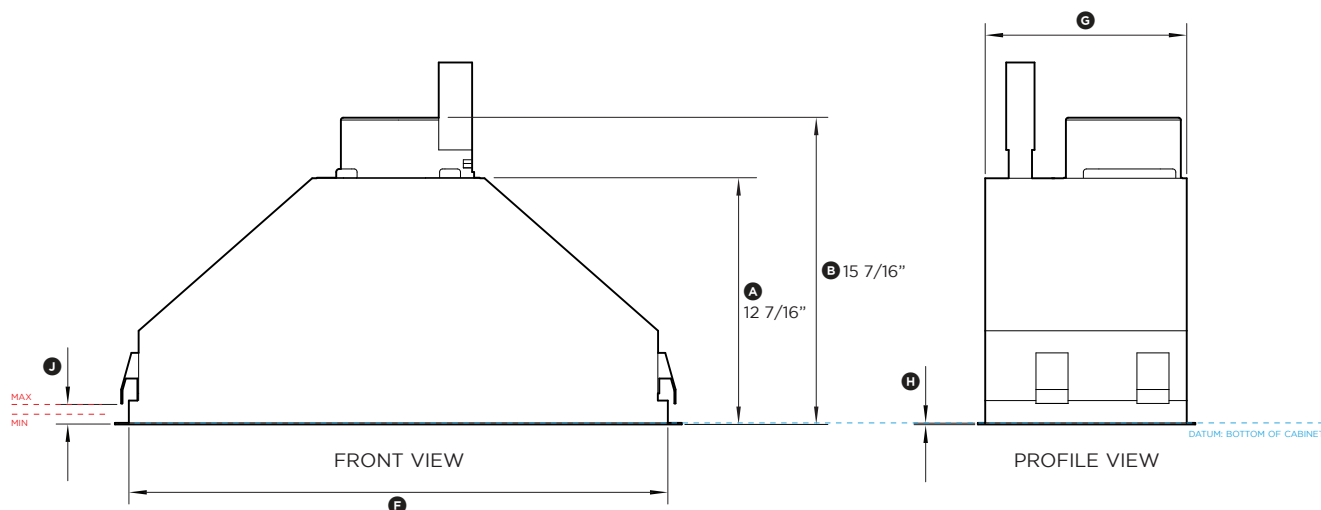


FRONT VIEW

PROFILE VIEW

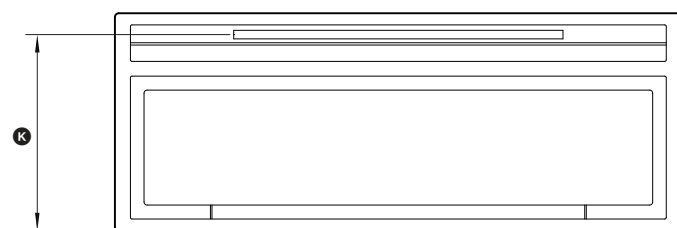

BOTTOM VIEW



INDICATES CUTOUT -----
INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

DATE: 23.08.2023

90003054A

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

FISHER & PAYKEL

DATA SHEET

Insert Range Hood, 30"

Model nos:

HP30IDCHX4

(refer page 1 for imperial measurements)

Product Dimensions

	mm
Ⓐ Overall height of range hood without ducting adapter	316
Ⓑ Overall height of range hood with ducting adapter	392
Ⓒ Overall width of range hood	730
Ⓓ Overall depth of range hood (excl. cabinetry front panel)	280
Ⓔ Diameter of ducting adaptor	150
Ⓕ Width of range hood chassis	694
Ⓖ Depth of range hood chassis	258
Ⓜ Thickness of flange	2
Ⓢ Distance from ducting outlet center to rear of chassis	82
Ⓣ Height adjustability of clip that secures cooker hood (cabinet base panel thickness)	min 15 max 40
Ⓚ Distance from rear to center of light	253
Ⓛ Distance from back of chassis to hard wiring box	211
Ⓤ Distance from center of product to hard wiring box	73

Cavity Dimensions Standard Installation

	mm
Width of cutout	700
Depth of cutout	260

Minimum distance above cooktops

	mm
Minimum height from top of cooktop to base of product	610

Minimum height may be greater if required by your cooktop. Refer to cooktop installation guide for details.


Note: We recommend the cabinet has a door or service panel that can be easily opened to access the power connection.

INDICATES CUTOUT
INDICATES PRODUCT DATUM
INDICATES CABINETY CLEARANCES


DATE: 23.08.2023

90003054A


IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the installation guide for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

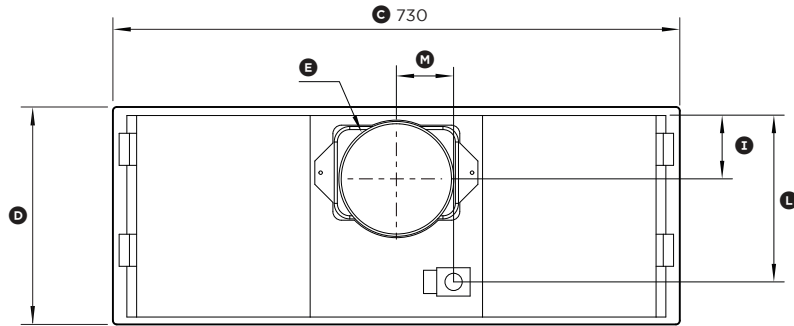

PLAN VIEW

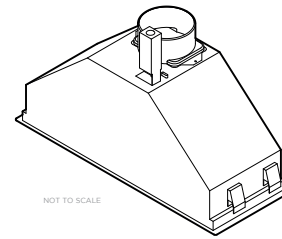


NOT TO SCALE

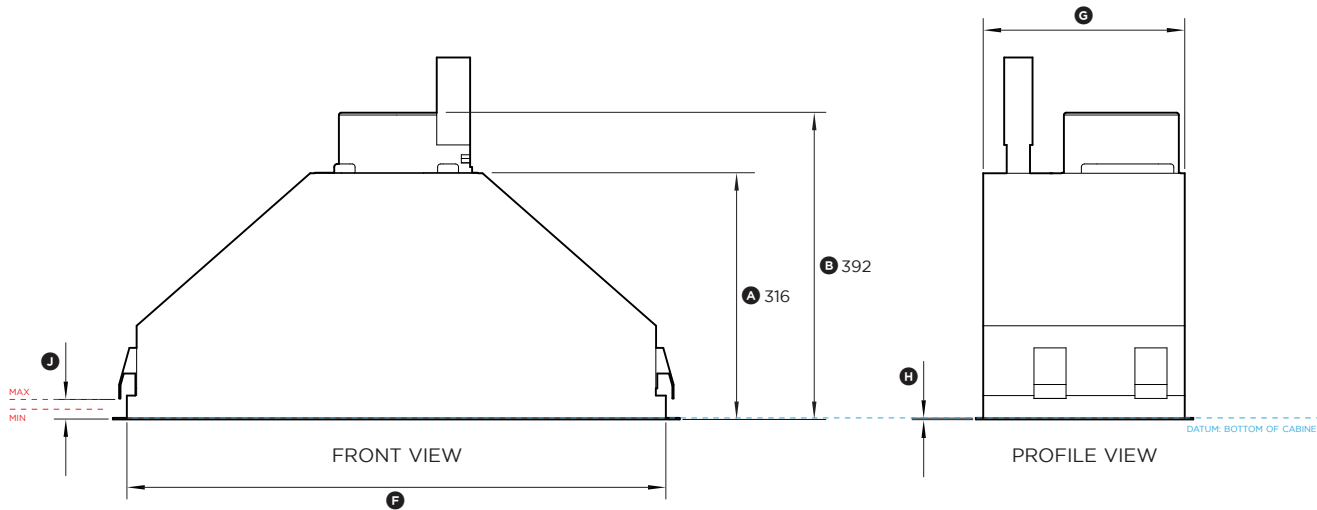

FRONT VIEW

PROFILE VIEW

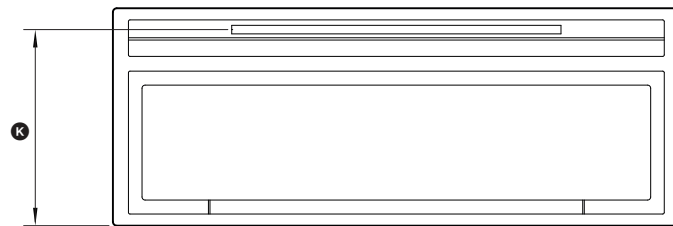

BOTTOM VIEW

