

INSTALLATION GUIDE

ACCESSORY DOOR PANELS FOR DISHWASHER

FISHER & PAYKEL

IMPORTANT!


- This guide is provided to assist in safely installing this accessory door panel to the dishwasher.
- For more information, refer to the Installation Guide supplied with your dishwasher.
- Handles are not supplied with this kit and can be purchased separately through an authorised Fisher & Paykel dealer.

ADA DOOR PANEL (82085)


The selected handle must be fitted to the panel prior to installation onto the product.

FIX SLIDER BRACKET


Top screw detail
(between panel and screw head)

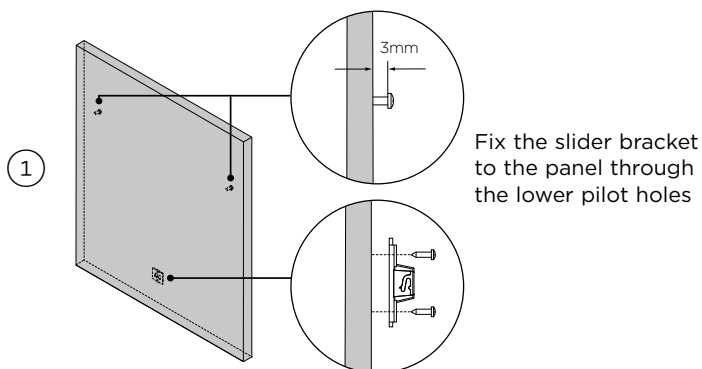


HANG DOOR PANEL

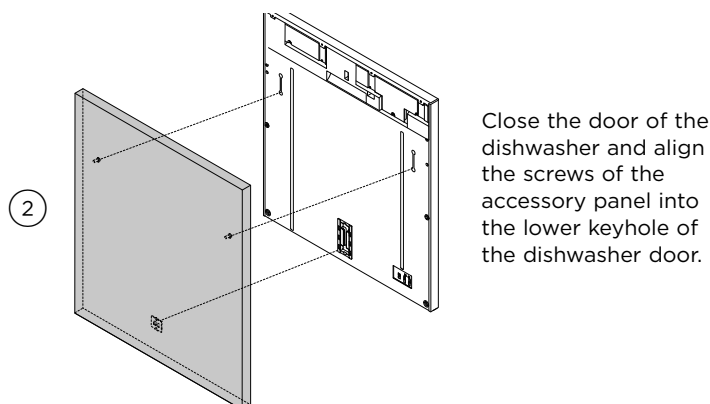


ALIGN DOOR PANEL

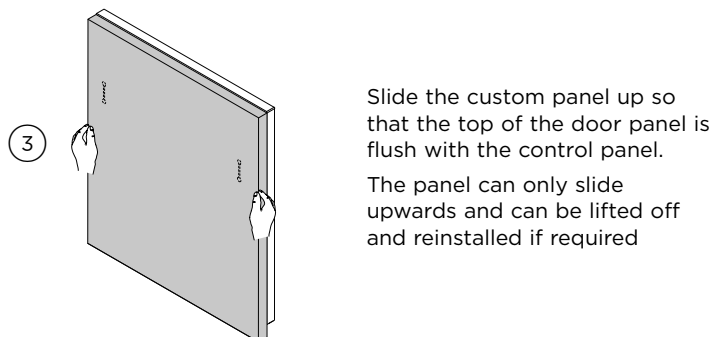

SECURE DOOR PANEL

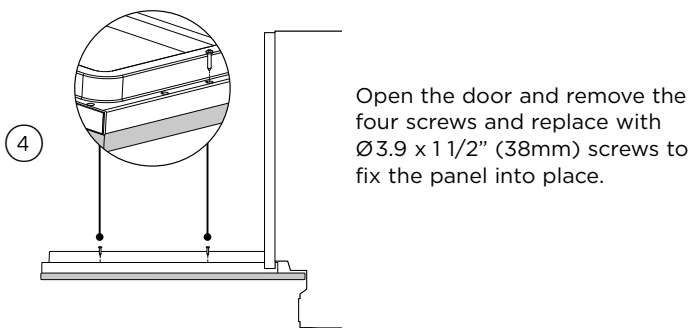

CHECK DOOR BALANCE

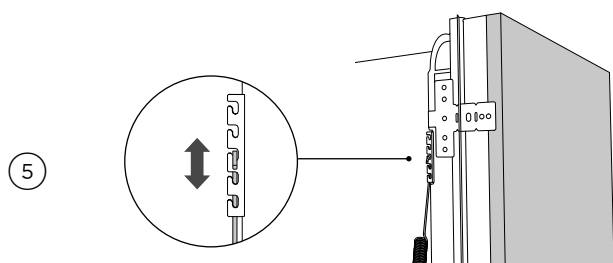

- Check the door balance by opening and closing the door.
- If the door drops when released, increase the tension.
- If the door rises when released, decrease the tension.

INSTALLATION GUIDE

ACCESSORY DOOR PANELS FOR DISHWASHER


FISHER & PAYKEL

Before installing the standard (tall) door panel, an infill bracket must be attached as a cosmetic feature to fill the gap between the top of the dishwasher and underside of cabinet top. The infill bracket is not needed for cabinets using ADA door panels.


STANDARD (TALL) DOOR PANEL (82084)

The selected handle must be fitted to the panel prior to installation onto the product.


REMOVE HOLE PLUGS

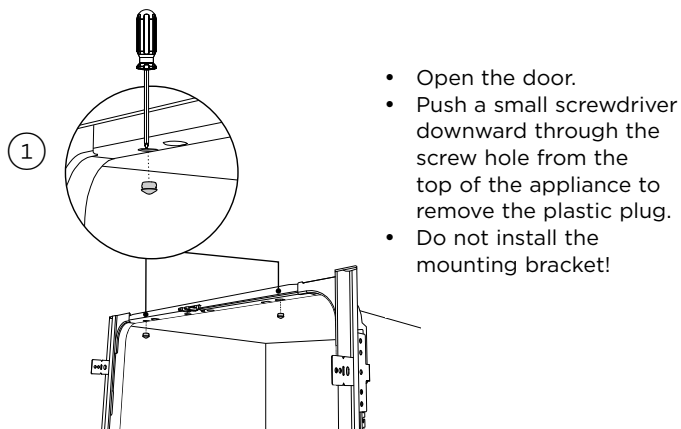

INSTALL INFILL BRACKET

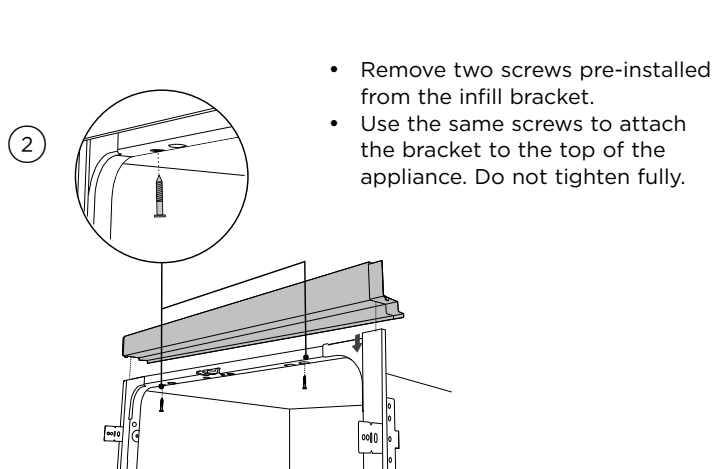


ALIGN AND SECURE DOOR PANEL

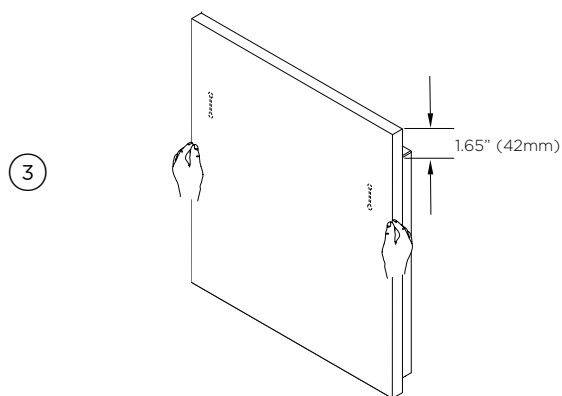

- **Fix slider bracket**
(See step 1 of ADA door panel)
- **Hang door panel**
(See step 2 of ADA door panel)
- **Align door panel**
Slide the standard door panel up so that the distance between the top of the door panel and control panel is 1.65" (42mm).
The panel can only slide upwards and can be lifted off and reinstalled if required.
- **Check door balance**
(See step 4 of ADA door panel)
- **Secure door panel**
(See step 5 of ADA door panel)

ALIGN DISHWASHER IN CABINETRY

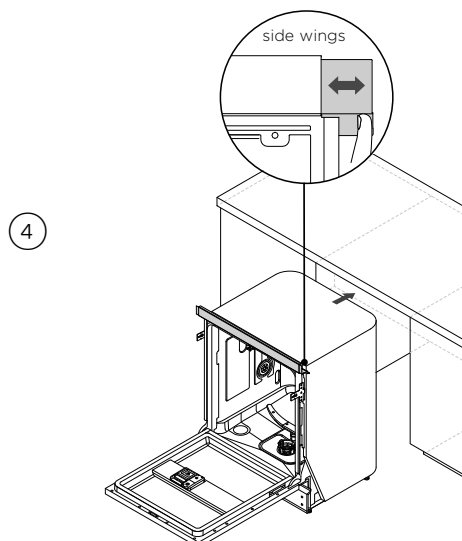

- Push the appliance into the cabinetry.
Ensure the infill bracket do not hit the top of the cabinet while pushing.
- Slide the side wings of the bracket outward to cover the hollow space.
- Hand tighten the two screws for the infill bracket and reinstall the hole plugs.