

TIME MORE
for Espresso

SET. SPIN. SAVOR.

Autospin WDT Tool



Stop stirring. Start spinning.
Eliminate channeling and unlock even
extraction with a single Tool.

12 Needle Design

Orbital full puck coverage



Fully Automatic

Starts on contact, hands-free finish



Bidirectional Cycle

Improves distribution while preventing edge build up



Full Coverage

Breaks clumps and peaks



Type-C Charging

2000+ cycles on a charge






Great coffee begins with great puck prep,
and Autospin makes it effortless.

12 Needle Planetary distribution

12×0.3 mm needles travel in a fixed orbital system. Like clockwork, they rotate to provide total bed coverage, eliminating clumps and ensuring an even distribution for every shot.



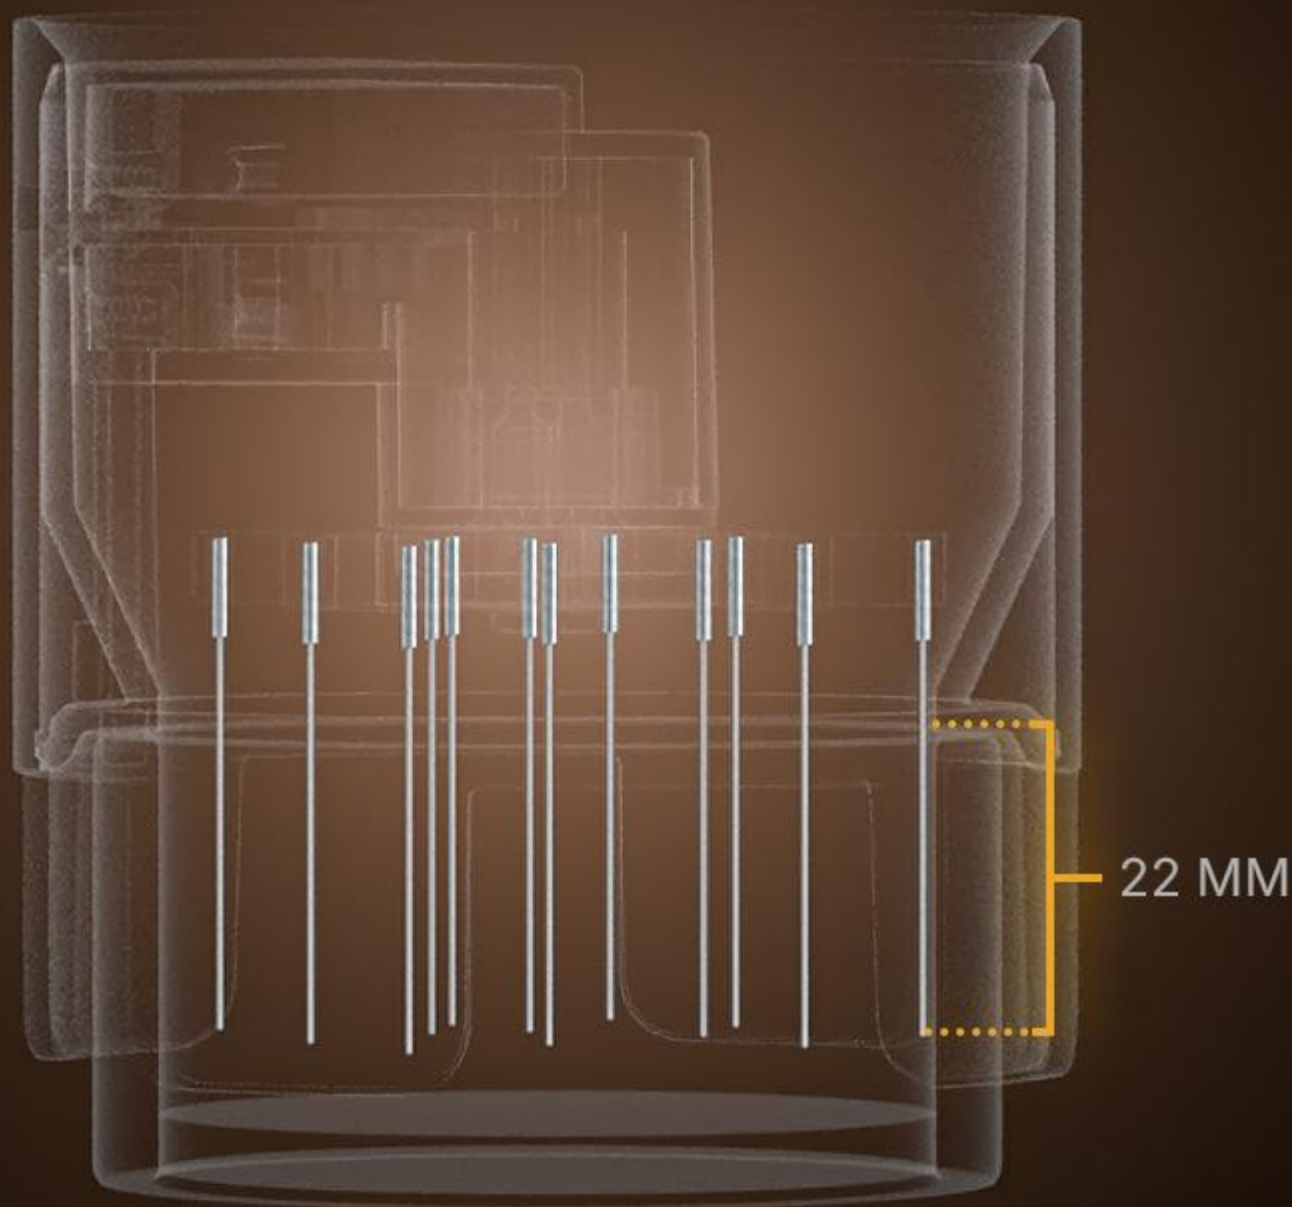

22 mm needles provide deep-reach coverage and are fully customizable to your specific basket depth. Plus, six spare needles come in the box for stress-free replacements.

Fully automated Puck prep

Place Autospin on your portafilter and it takes it from there. By alternating between clockwise and counter-clockwise orbits, Autospin achieves total uniformity without the centrifugal force that can push grounds to the edges.





Before



After



Engineered for Repeatability

Manual WDT is prone to human error — spin too fast, and you create uneven density. Autospin standardizes the RPM and cycle, ensuring your coffee bed is perfectly uniform, shot after shot.



Manual versus Automatic WDT Distribution



Manual WDT Tool



Autospin WDT Tool

Consistency

Lower

Relies on the user's hand motion, pressure, and speed, making outcomes variable.

High

A precision motor and calibrated motion deliver uniform distribution.

Repeatability

Limited

Results can vary from shot to shot depending on technique.

High

A fixed program repeats the same distribution cycle every time.

Extraction

Variable

A precision motor and calibrated motion deliver uniform distribution.

Stable

Even puck density reduces channeling and supports more consistent extraction.

Long battery life

Equipped with a 500 mAh lithium battery and Type-C charging, Autospin reaches a full charge in just 1.5 hours — powering over 2,000 cycles. That is a lot of Espresso.


*We recommend charging every three months, cable not included.



Open-top Architecture

An open-top design allows you to watch the planetary orbital movement in real-time, making your puck prep as engaging as the extraction itself.


* To protect the motor, do not pour coffee grounds into the top of the device.

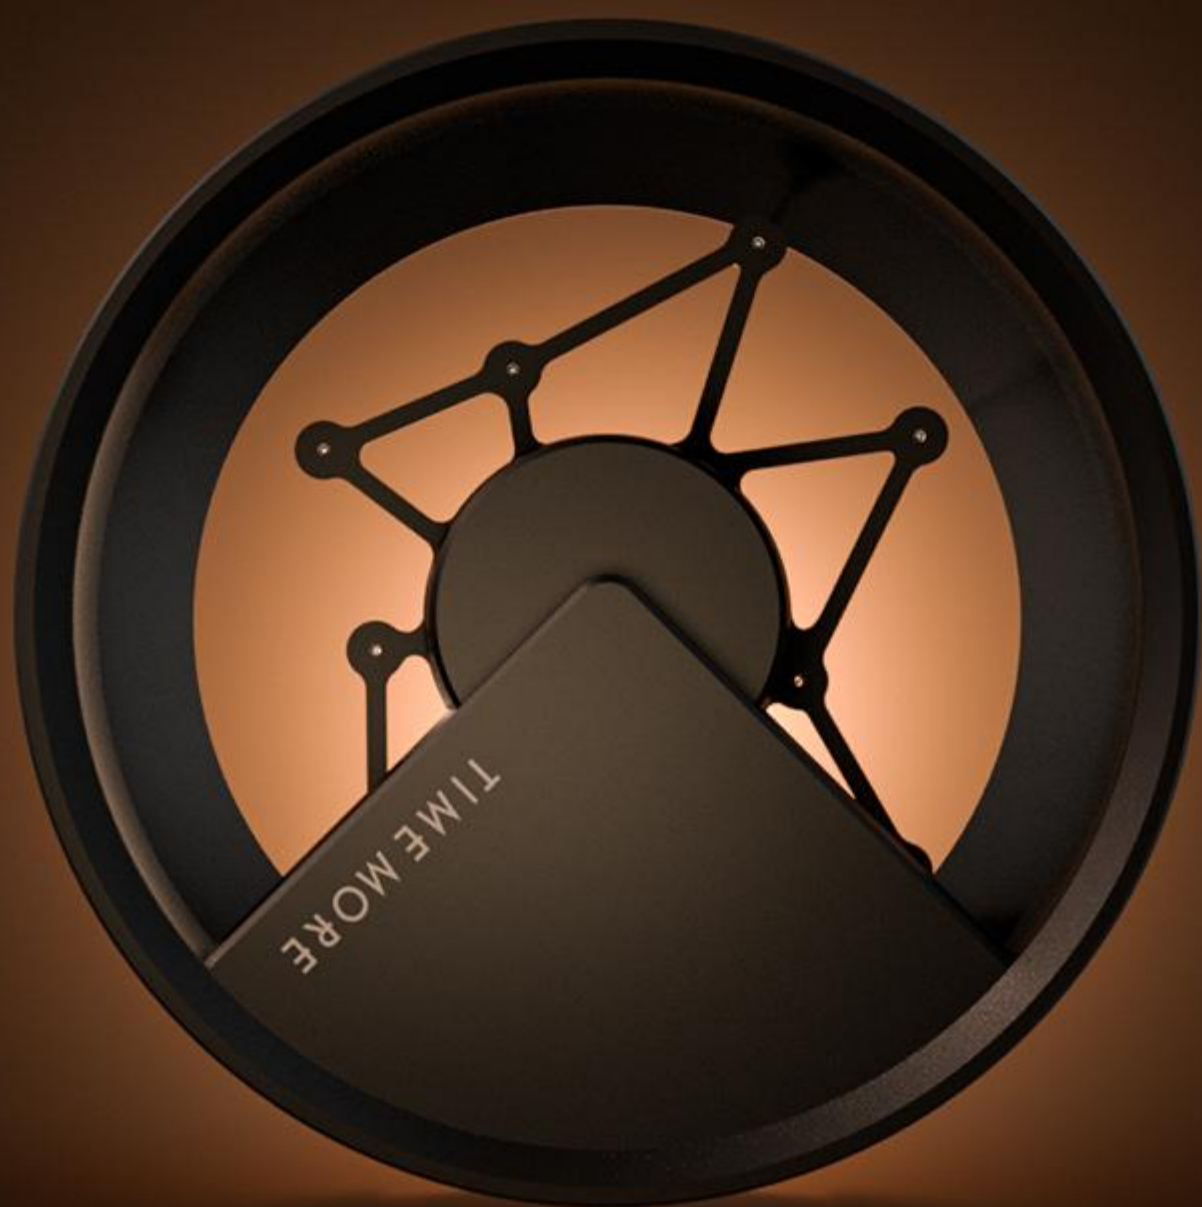


Four-point stability

Autospin features a wide, four-legged structure designed to fit 58 mm baskets perfectly, while providing protection for the needles.

* Fits 58 mm baskets only. Does not support 3-lug portafilters.

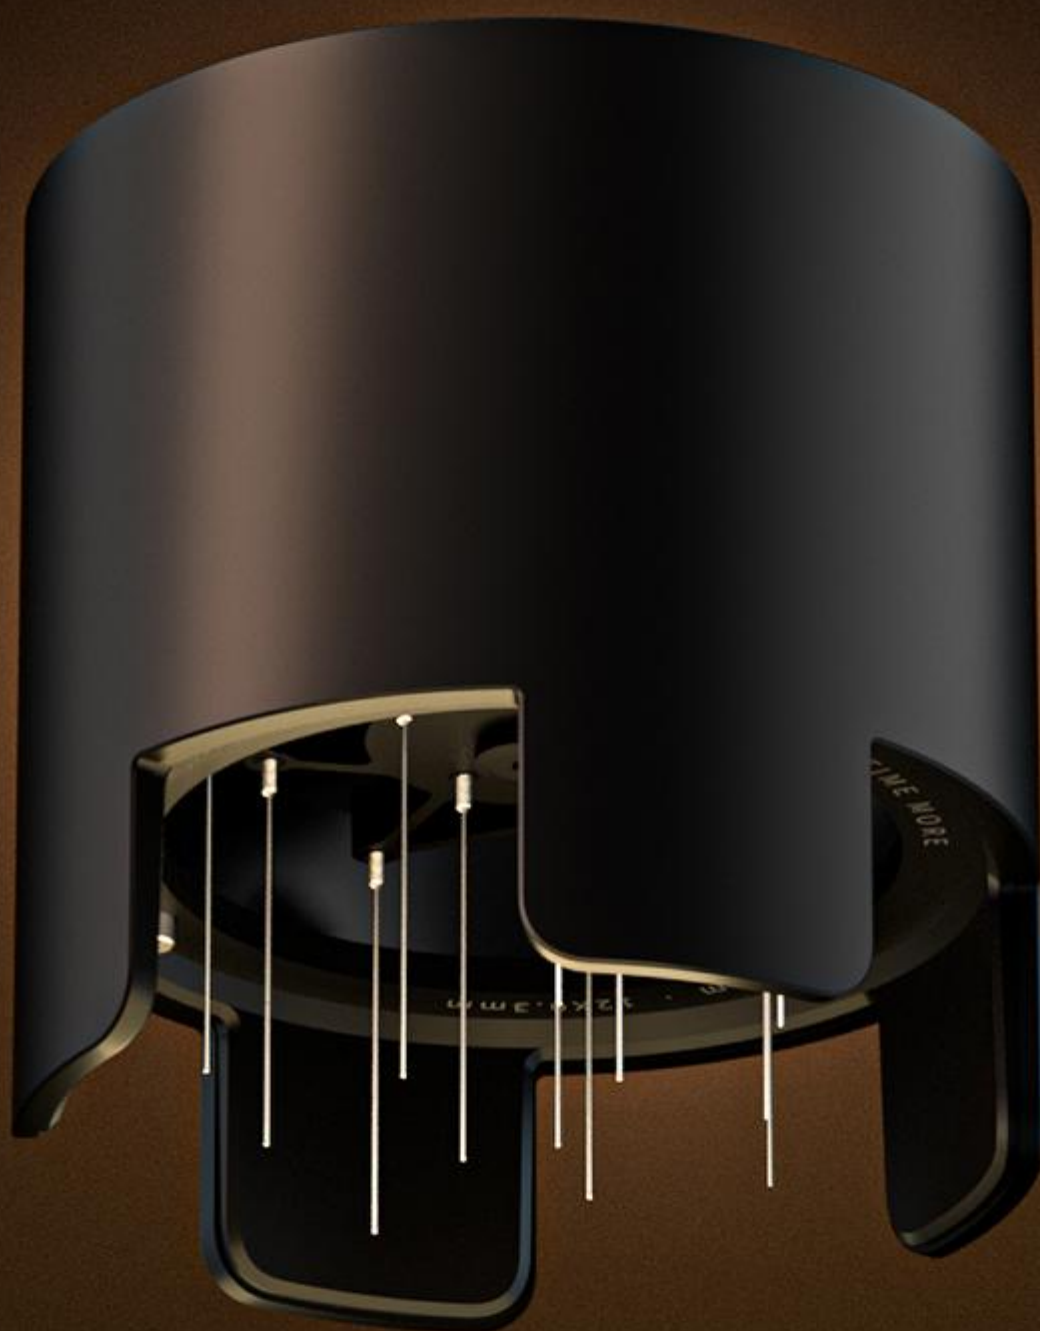

Incompatible with
Curved-Walled Baskets

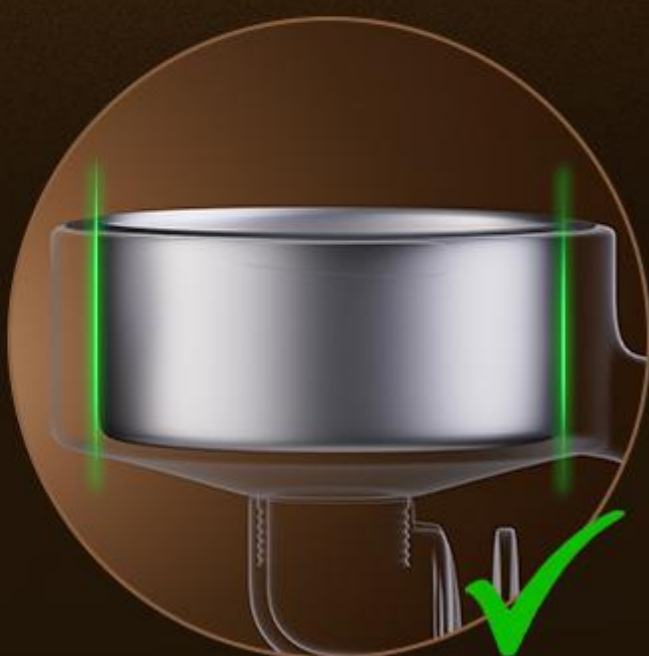

Compatible with
Straight-Walled Baskets

Auto-start & stop

No buttons, no fuss. Place Autospin on top of your portafilter to start the cycle. Lift it to stop early, or allow it to finish the distribution cycle automatically on its own.



At-a-glance LED indicator

Indicator LED


● **White Light**
Powered On
Charging Complete

○ **Light Off**
Powered Off

● **Orange Light**
Charging in Progress



Tech specs

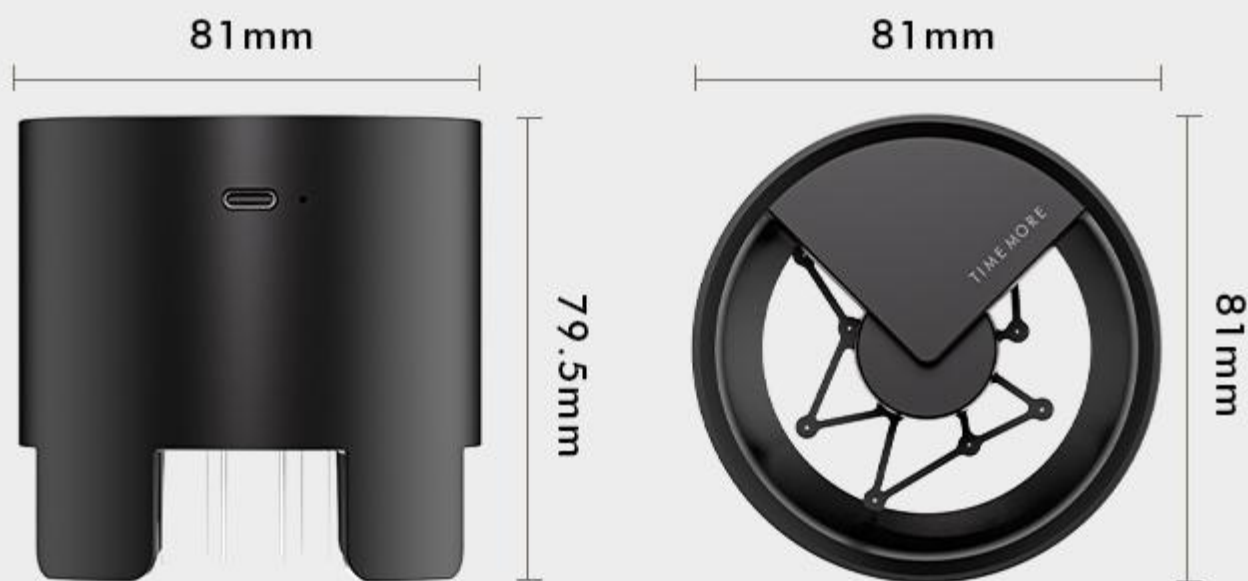

BRAND	TIMEMORE
PRODUCT	Autospin WDT Tool
BASKET DIAMETER	58mm
MOTOR	DC 5V
BATTERY	500 mAh
WEIGHT	~180 g
EXTRA NEEDLES	×6
DIMENSIONS	81 mm * 81 mm * 79.5 mm
MATERIALS	Stainless steel, aluminum alloy, food-grade ABS, silicone

*Manually measured, actual size may vary.
*Do not wash with water. After use, clean promptly with an air blower or brush.
*Charging cable not included.

Orbit beyond the ordinary.







Important Information

- Do not disassemble the product yourself, except when replacing the distribution needles.
- To protect the internal motor and mechanics, do not pour coffee grounds into the top of the device.
- The four-legged base is designed to secure the device onto standard 58 mm portafilters. Note: This device is not compatible with 3-lug portafilters.
- The needles extend approximately 22 mm into the basket, ideal for 18g doses or larger. If using smaller baskets, the needles may touch the bottom; you may trim the needles to your desired length for a custom fit.
- Six replacement needles are included. If a replacement is needed, please refer to the "Needle Replacement" diagram.
- The needles are sharp; handle with care to avoid injury. Do not use the device to stir hard objects, as this may bend or deform the needles.
- This product is not washable. Keep the device dry and avoid contact with water.